

2018-22 JEEP JL / JT SUPER 7 HEADLIGHTS INSTALL GUIDE

WARNING: By reading this document, you agree it is only to be used as an educational guide. Morimoto Lighting nor its dealers make guarantees on any finished results, nor are they to be held responsible for any damage, misuse, or personal injuries. If you are unable to clearly understand and adapt the information below, professional installation is recommended.



PACKAGE CONTENTS



2X HEADLIGHT ASSEMBLIES



2X LED DRIVERS



2X ANTI FLICKER
MODULES



2X JL / JT ADAPTERS

REQUIRED TOOLS

- RATCHET
- 10MM SOCKET
- FLAT HEAD SCREWDRIVER OR TRIM REMOVAL TOOL
- #2 PHILIPS HEAD SCREWDRIVER

INSTALLATION PROCESS


1. Open your hood, and remove these six (6) push tab clips.




2. Pull the grille forward to release the clips holding it to the vehicle.



3. Starting with the driver side headlight, remove these three (3) 10mm bolts holding the headlight.

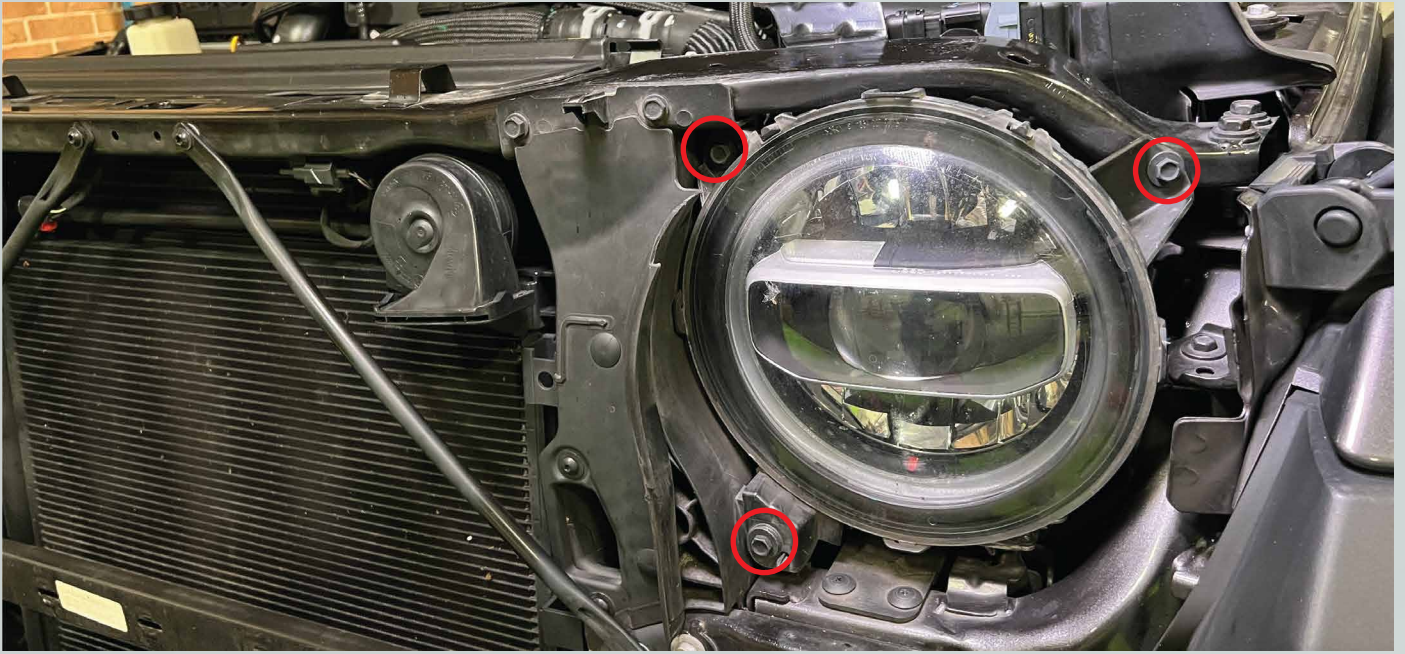


4. Unplug the headlight multi pin connector by pressing the release tab (#1) then pull the connector away from the headlight (#2).

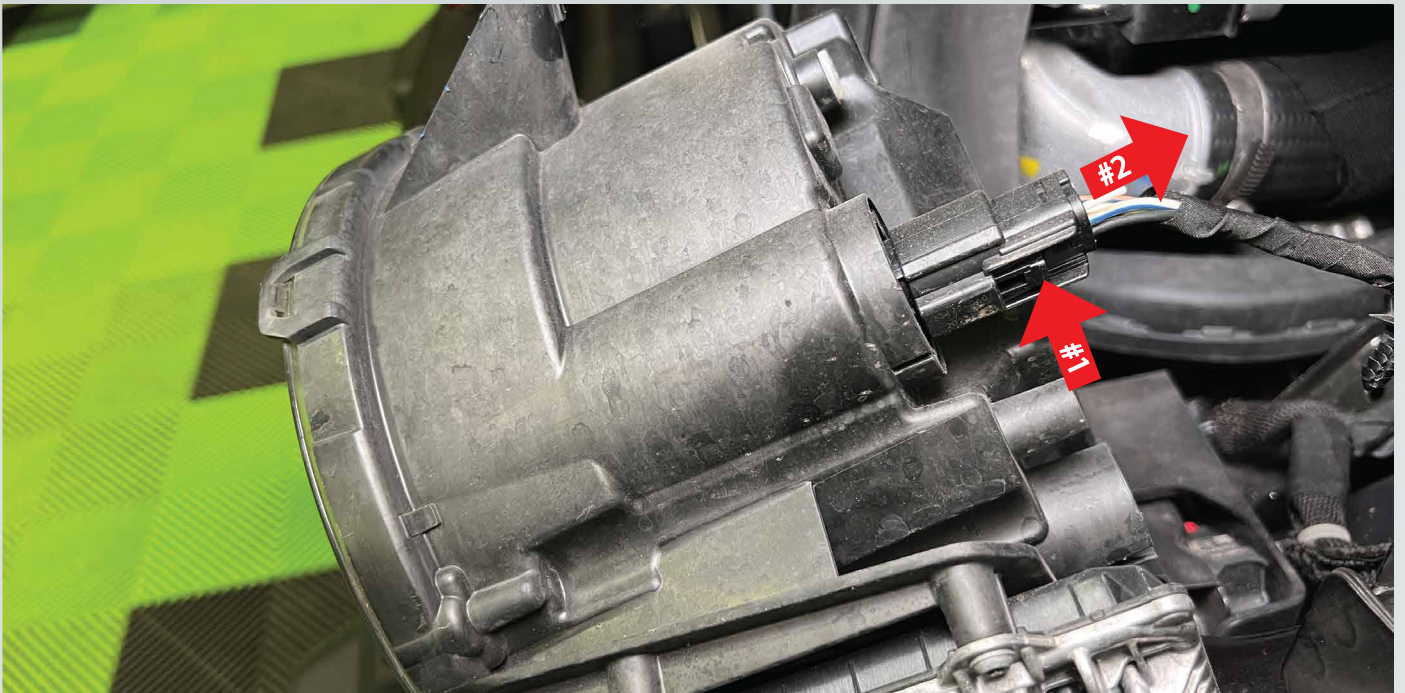


5. Repeat steps #3, 4 on the passenger side of the vehicle.

6. Get your Morimoto parts, plug in the Led Driver to the back of the Morimoto headlight. Align the arrows on the connectors, then push the two connectors together, and then thread the locking collar on.

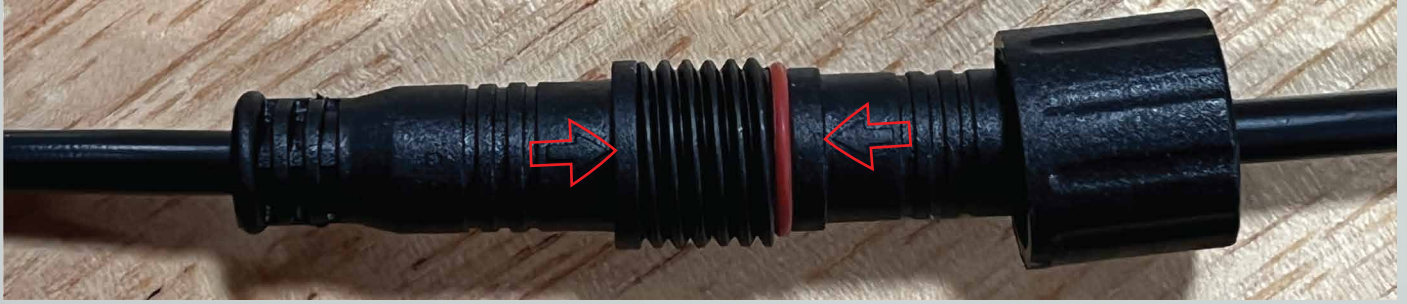


7. Plug in the Anti Flicker Module to the Led Driver.

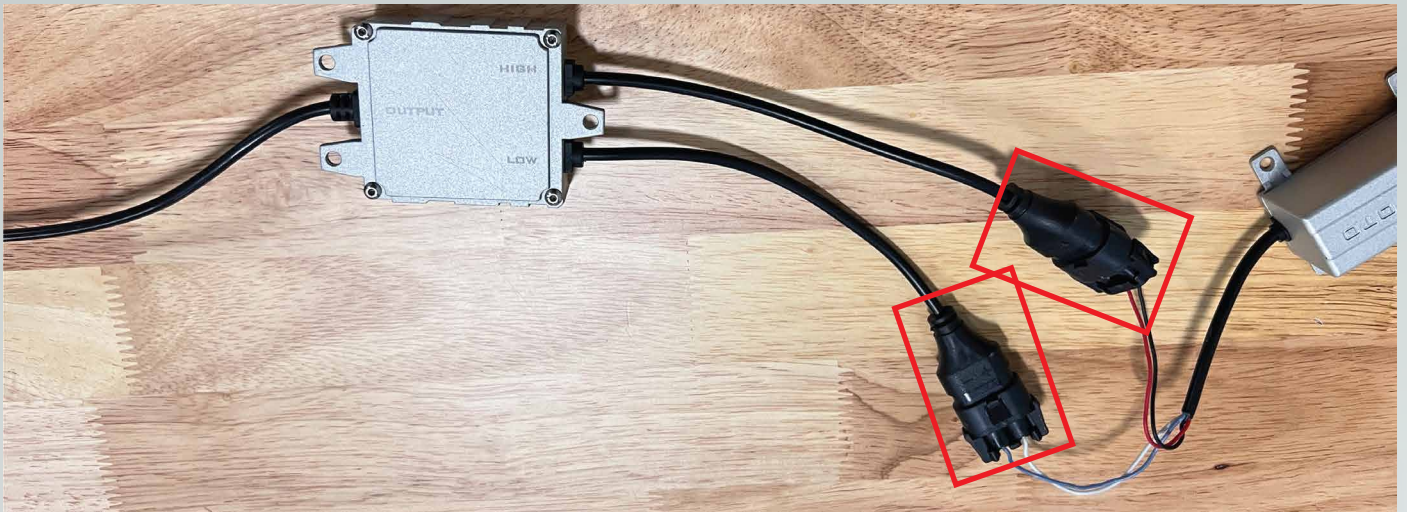

8. Plug in the JL / JT adapters into the Anti Flicker Modules. Repeat steps #6-8 on the other headlight.



9. Grab the driver side Morimoto headlight labeled with a "L" on the back of the housing. Bring it to the vehicle and plug in the multi pin connector to the factory connector. Bolt the headlight in place.

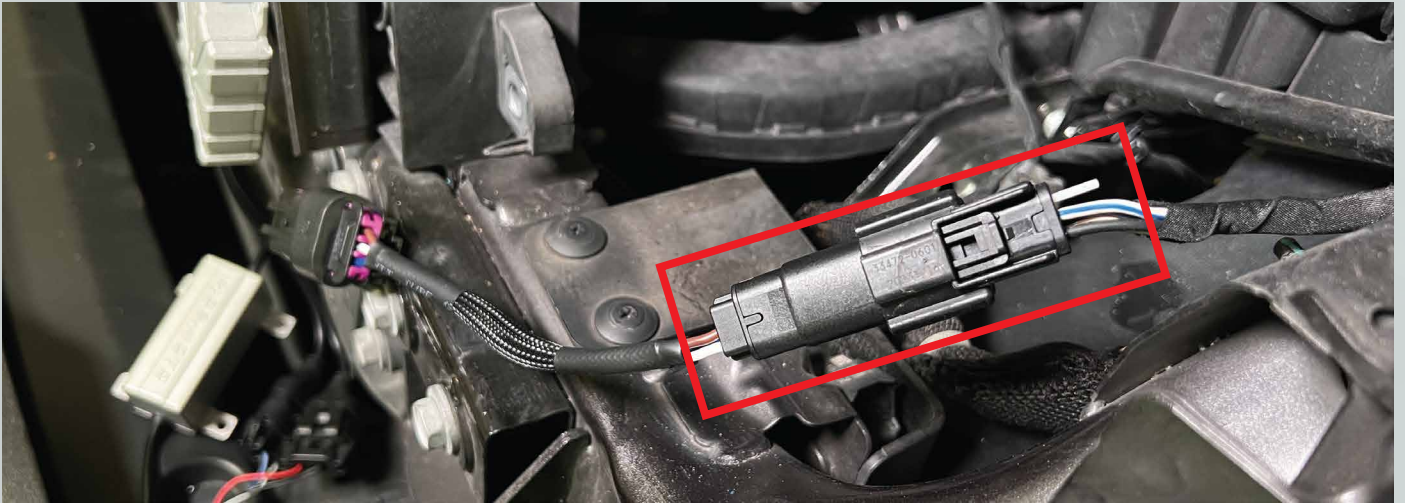


10. Repeat step #9 on the passenger side of the vehicle.

11. Turn on vehicle and make sure all headlight functions work.


12. Reattach the front grille and reinstall the top push clips.

13. To align the headlights, get a #2 philips head screwdriver and insert it into this top cutout section of the housing. Rotate the screwdriver counter clockwise to move the headlight beam up and counter clockwise to move the beam down.

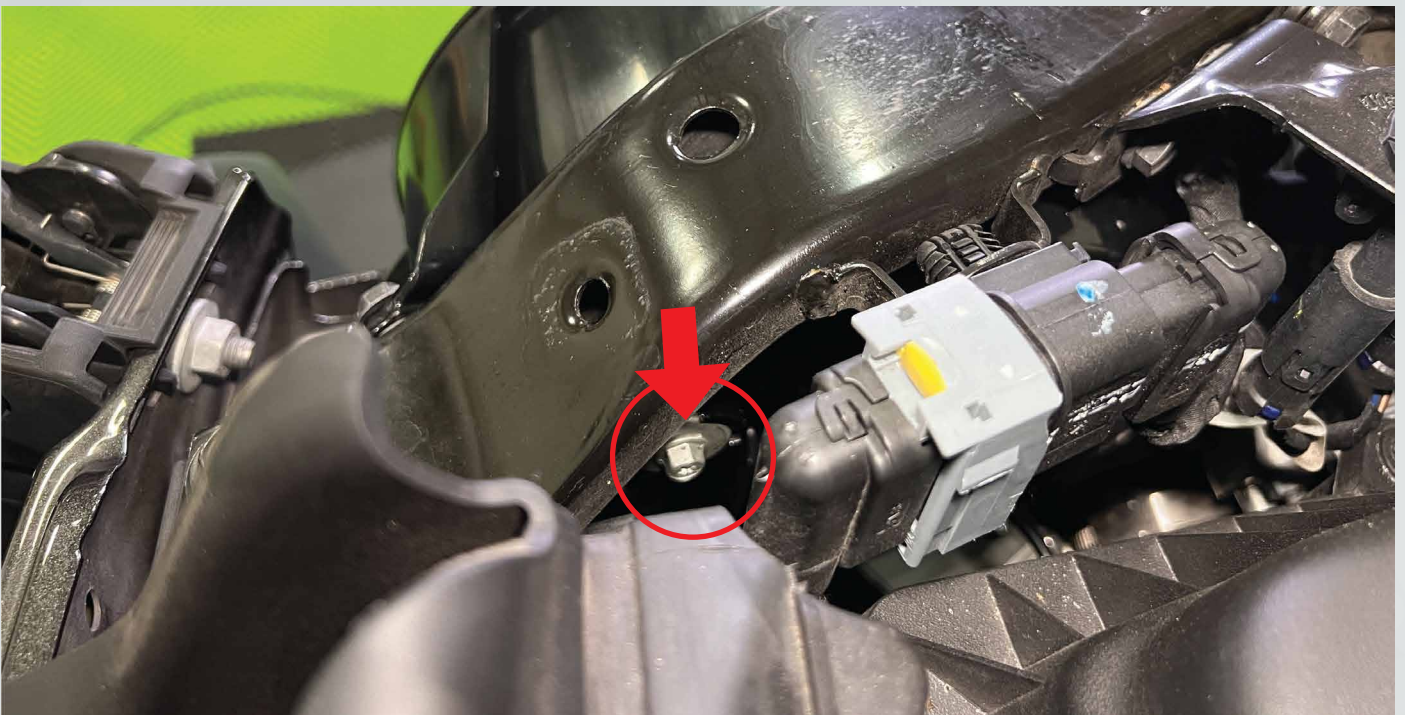

(VIEW FROM BEHIND THE DRIVER SIDE HEADLIGHT)

- Please refer to the aiming standards below when adjusting your headlight beam.

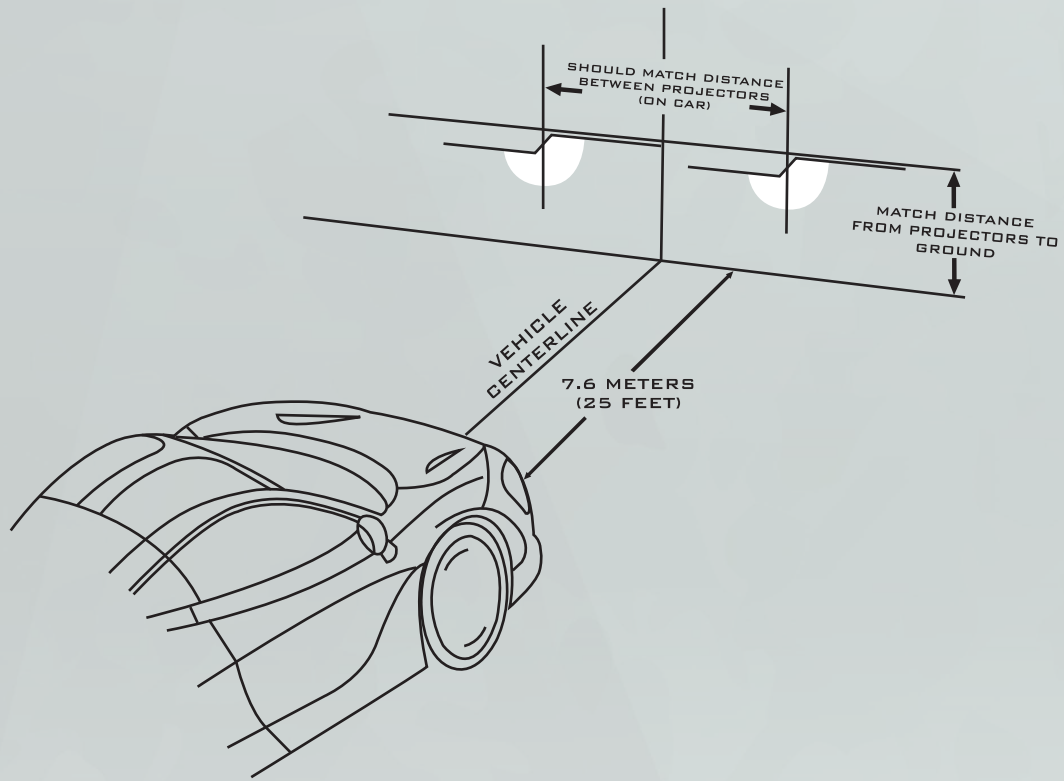

— ENJOY YOUR NEW MORIMOTO HEADLIGHTS! —

