



TRAXDA
Lift Kits - Made in USA

Toll free: 888-660-5892
email: info@traxda.com

SAFETY WARNING!
Always use the correct tools, and wear safety goggles. We **STRONGLY** recommend installation by a licensed mechanic on a properly secured locking lift.

Traxda LLC, 810 E 19th Street
Tucson, Arizona 85719

TIRE FITMENT ADVICE

The best way to ensure proper tire fitment is to install the kit before purchasing your wheels and tires. Always test fit tires and wheels before purchasing.

VEHICLE RIDE WARNING!

Trucks with lift or level kits installed have a higher center of gravity. Aggressive and sudden direction changes may cause a tip over.

108035 Ford F250/350/Excursion SuperDuty 4x4 Level Kit

This kit contains:

- 2 - Spring Spacers
- 2 - Shock Brackets
- 1 - Hardware Pack
- 2 - Rear Lift Blocks
- 4 - U-Bolts
- 1 - U-bolt Hardware Pack
- Instructions
- Warranty Card
- Stickers



Installation Tips

Always use caution handling ABS or wheel sensor wiring. Avoid tension of any kind on wiring harness as this may cause damage or failure.

1. Trucks are often not level side to side from the factory. Please measure before installation.
2. Re-torque all hardware to manufactures specifications
3. When aligning, to get the best tire wear use our supplied specifications. OEM specifications are for trucks with stock wheels and tires. Larger tires will wear differently.
4. All instructions are written with vehicle on a 2-post lift with tires removed.


Front Installation

Step 1

Support the front differential with a pit jack or similar. Disconnect the front shocks and sway bar links. Disconnect the brake line mounts and any ABS wiring brackets.

Step 2

Lower the front differential allowing access to the top of the spring. Remove the OEM rubber isolator and install it on the **TRAXDA** spacer over the cone and install the spacer on top of the spring as shown in Figure A.

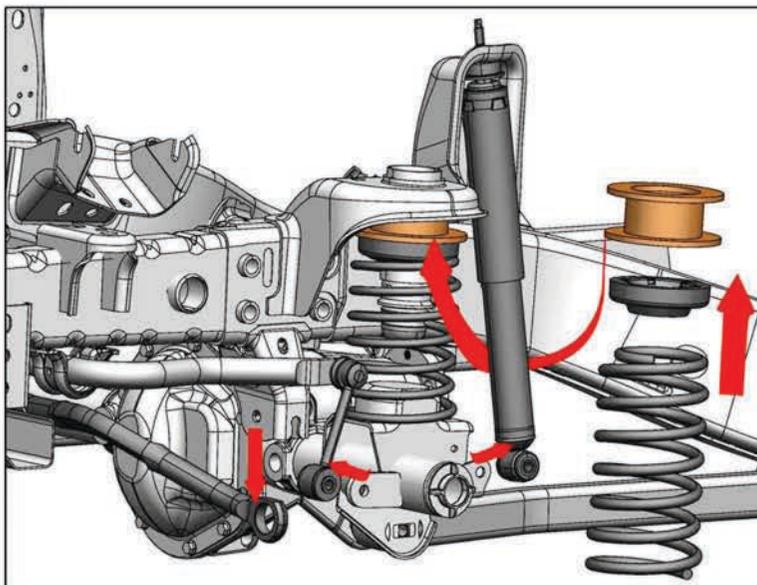

Step 3

Install the **TRAXDA** shock brackets on the bottom of the shocks. Elevate the differential into position and reconnect shocks, sway bar links, brake line mounts and any ABS wiring.

Figure A: Illustration is for reference only. Part dimensions will vary from kit to kit.

Installation Instructions continued on reverse



TRAXDA
Lift Kits - Made in USA

Toll free: 888-660-5892
email: info@traxda.com

SAFETY WARNING!
Always use the correct tools, and wear safety goggles. We **STRONGLY** recommend installation by a licensed mechanic on a properly secured locking lift.

Traxda LLC, 810 E 19th Street
Tucson, Arizona 85719


TIRE FITMENT ADVICE
The best way to ensure proper tire fitment is to install the kit before purchasing your wheels and tires. Always test fit tires and wheels before purchasing.

VEHICLE RIDE WARNING!
Trucks with lift or level kits installed have a higher center of gravity. Aggressive and sudden direction changes may cause a tip over.

108035 Installation Instructions Continued

Rear Installation

Disconnect ABS wires so they can droop. Loosen lower shock bolt and remove. Use a pit jack to support the differential. Remove U-bolts from one side of the truck only. This will help keep the differential steady. Remove factory block and install **TRAXDA** lift block between differential and leaf spring as shown in illustration below. Install U-bolts supplied with **TRAXDA** kit. Re-install lower shock bolts. Repeat on the other side of the truck.

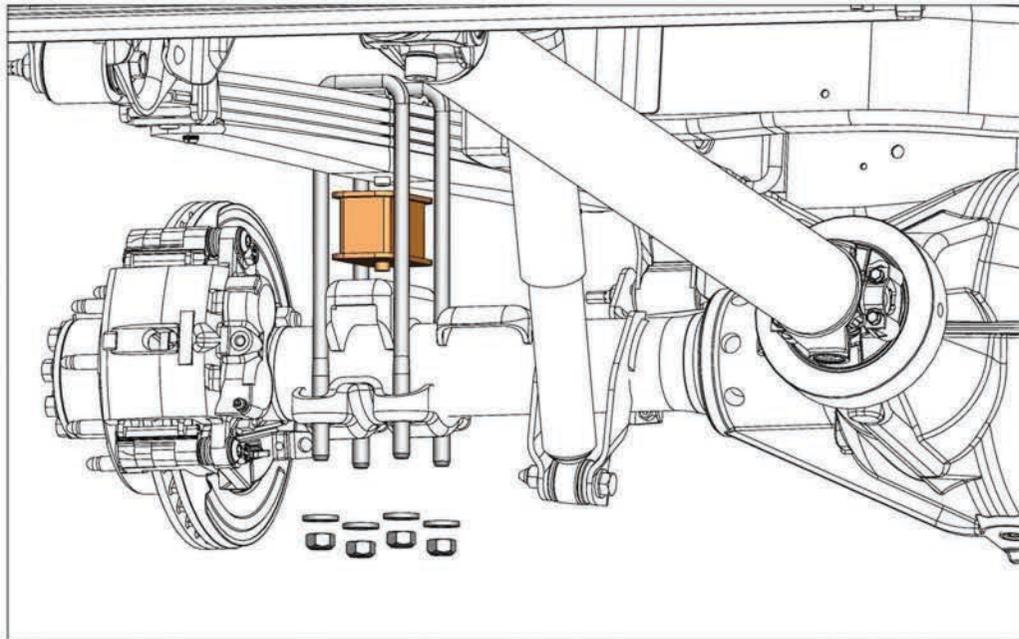

Torque U-bolt hardware to 132 ft. lbs.
Never reuse U-bolts

	Left	Right
Caster (degrees)	1.5	1.5
Camber (degrees)	-1/4 or -.25	-1/4 or -.25
Toe	1/32" or .03125 toe in	
Special Tools	none	

Alignment notes:
We recommend that a technician with experience doing alignments on lifted trucks perform the alignment. Large tires wear differently than OEM sized tires. Always do an alignment after changing tires on a vehicle.