



PART #
CA2000U 2000-2006 SUBURBAN/TAHOE
CA2599U1999-2006 CHEVY 1500
UPPER CONTROL ARMS
INSTALLATION INSTRUCTIONS

Please take the time to read these **INSTALLATION INSTRUCTIONS** and check the **Hardware Parts List** to be sure you have all the listed parts before beginning installation.

These installation instructions are prepared for the professional installer with the proper equipment, tools and experience in suspension systems and safety. This vehicle and its components are extremely heavy and can be dangerous without the proper equipment and experience.


CA2599U IS DESIGNED TO BE USED WITH THE DJM LOWER CONTROL ARM #CA2599L-4 OR CA2599L-5 AND CA2000U USED WITH CA2001L-3 USING THIS PART WITH ANY OTHER PRODUCT MAY VOID DJM'S WARRANTY!!

Hardware Parts List:


- 2- Upper Control Arms.
- 2- Ball Joints w/hardware(6124).
- 4- 1/2" Flat Washers.
- 8- Pivot Bushings.
- 4- Pivot Sleeves
- 4- Grease Fittings.
- 4- Zip Ties.

Unbolt brake line and remove factory upper arm. Apply grease to the sides of the bushings and install using factory hardware. Align ball joint with spindle, use 2 flat washers as spacer between spindle and nut. Tighten and install new cotter pin.

Attach brake line securely to new arm with zip ties provided. Grease all fittings, be careful not to overfill ball joint and tear the boot.

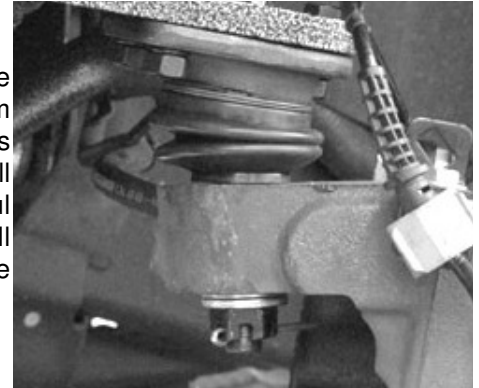

Replacing factory slotted alignment cams on the forward upper mount with cam lock plates. **DO NOT OVERTIGHTEN 40FT lbs max**

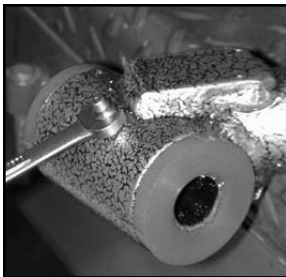

Install grease fitting in upper ball joint and control arms. Pump some grease in to make sure the path is clear

