



PART # CA2699U

2001-2010 CHEVY HD UPPER CONTROL ARMS INSTALLATION INSTRUCTIONS



Please take the time to read these **INSTALLATION INSTRUCTIONS** and check the **Hardware Parts List** to be sure you have all the listed parts.


There are 2 small holes in the plate behind the ball joint. They are for the factory plastic rivet used to hold the ABS sensor (Fig #1).

These installation instructions are prepared for the professional installer with the proper equipment, tools and experience in suspension systems and safety. This vehicle and its components are extremely heavy and can be dangerous without the proper equipment and experience.

Hardware Parts List:

- 2- Upper Control Arms.
- 2- Ball Joints .
- 8- Pivot Bushings(Installed).
- 4- Grease Fittings.
- 4- Zip Ties
- 4- Cam locks

Both control arms are the same and can be installed on either side.

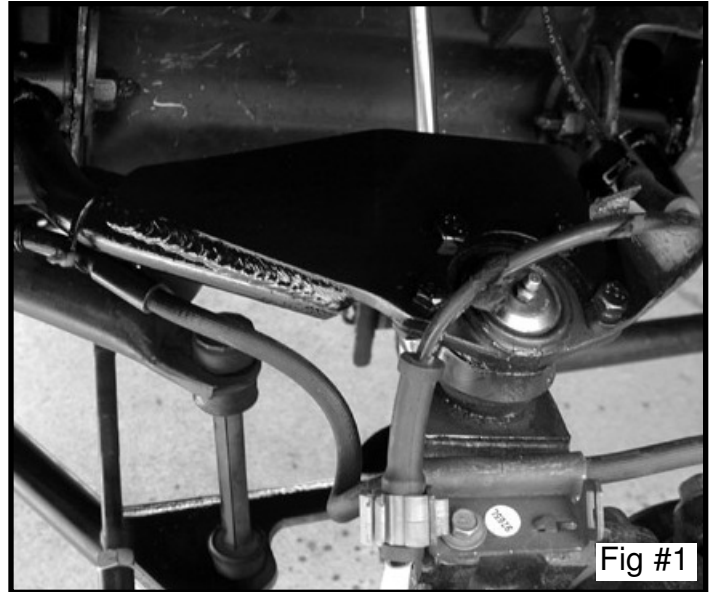

CAM LOCKS

Cam lock replace the stock alignment adjuster and will lock your alignment in place without having to put excess pressure on the bushing. After selecting the proper alignment hole lock tite the pivot bolts and tighten to 50 ft lbs

The 4 larger holes are for the brake lines. Use the zip ties supplied to secure (Fig #2).

