




LOWERING BLOCK KIT

INSTALLATION INSTRUCTIONS

Doing one side at a time, remove u-bolts. Using a hydraulic jack , raise the axle away from the leaf springs. Place block on leaf spring Lower axle down so the weight is on the block. Install and tighten the u-bolts to 80 lbs. Repeat this procedure on the other side of the vehicle. Cut off any excess u-bolt.

iTis recommended to make a habit of retightening the u-bolts every few months.

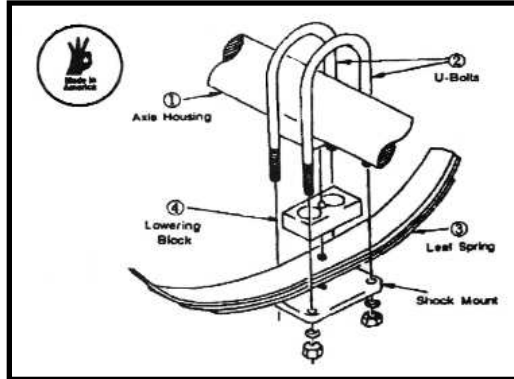

1997-2000 S10 \ Blazer
Installing lowering blocks with plates is easy. Next set plate on top of block. Complete installation as usual.

PLATES ARE NOT NESSESARY WITH STEEL BLOCK KITS

WWW.DJMSUSPENSION.COM

TECH INFO (310) 538-1583 FAX (310) 538-0393

CAUTION : USING THE KIT ON LATE MODEL S10 PICKUP AND BLAZERS WILL REQUIRE BLOCK PLATE KIT DJM PART # 1023-BP, DUE TO THE NARROW SPRING PAD ON THE AXLE HOUSING.

FAILURE TO USE BLOCK PLATES WITH THIS KIT MAY CAUSE DAMAGE TO THE BLOCKS AND WILL VOID WARRANTY.