



Rev. # 3-03

PART #SE1124,SE1125,SE1128,SE1128S,SE2599

Chevy Shock Extenders

INSTALLATION INSTRUCTIONS

Please take the time to read these INSTALLATION INSTRUCTIONS and check the Hardware Parts List to be sure you have all the listed parts.

These installation instructions are prepared for the professional installer with the proper equipment, tools and experience in suspension systems and safety. This vehicle and its components are extremely heavy and can be dangerous without the proper equipment and experience.

To activate your warranty please read the warranty card enclosed, fill out your Product Warranty Card and mail it to DJM Suspension.

Please take a few minutes to fill out your installation helper (back side of warranty). Accurate measurements BEFORE BEGINNING INSTALLATION will show any irregularities in your vehicle.

NEVER WORK UNDER TRUCK SUPPORTED BY A JACK ONLY !!!
USE QUALITY JACK STANDS WHICH HAVE A RATING ADEQUATE FOR YOUR TRUCKS WEIGHT!!!

Hardware Parts List:

SE1125,SE1128,SE1128S

- | | |
|--------------------------|-----------------------------|
| 2- Lower Shock Extenders | 2- 1/2" x 13 x 2-3/4" Bolts |
| 2- 3/8" x 16 x 1" Bolts | 4- 1/2" x 20 x 1" Bolts |
| 2- 3/8" Nuts | 4- 1/2" x 20 Jam Nuts |
| 2- 3/8" Flat Washers | 8- 1/2" Flat Washers |
| 2- 1/2" x 13 Nuts | 4- 1/2" Lock Washers |

SE1124

- | | |
|-----------------------------|-------------------------|
| 2 -Lower Shock Extenders | 6- 1/2" x 20 x 1" Bolts |
| 2- 1/2" x 20 x 3-1/4" Bolts | 6- 1/2" x 20 Jam Nuts |
| 2- 1/2" x 20 Nuts | 4- 1/2" Lock Washers |
| 12- 1/2" Flat Washers | |

SE2599

- 1- Shock Extender (Passenger Side Only).
- 2- 1/2" x 20 x 1" Bolts.
- 2- 1/2 x 20 Nuts.
- 6- 1/2" Flat Washers.
- 2- 1/2" Lock Washers.
- 1- 1/2" x 13 x 2-3/4" Bolts.
- 1- 1/2 x 13 Nut.
- 1- 3/8" x 16 x 1" Bolt.
- 1- 3/8" x 16 Nut.
- 2- 3/8" Flat Washers.

SE1125,SE1128,SE1128S

Mount new shock extenders to original lower shock mount. New shock will install out and down from original mount. The wide end will be mounted to original mount. Line up shock extender with original shock holes. Attach with two 1/2" x 1" bolts in original holes (Nuts on inside!). Using shock extender as a template line drill a 3/8" hole through original mount and secure with a 3/8" x 1" bolt, washer and nut. Install new shocks to shock extender with 1/2" x 13 x 2.75" bolts and tighten. Photo below shows SE1128S.




SE1124

Use the same procedure as above except drill a 1/2" hole through original mount and install 1/2" bolts. Use 1/2" x 20 x 3-1/4" bolts to install shocks.

SE2599

Install the shock extender to the right side axle mount. This will make the shock work at a much better angle. Slide bracket over the factory mount and install the two 1/2" x 1" bolts from the outside and tighten. Line drill a 3/8" hole through the factory mount using the shock extender as a guide and install 3/8" x 1" bolt and tighten.

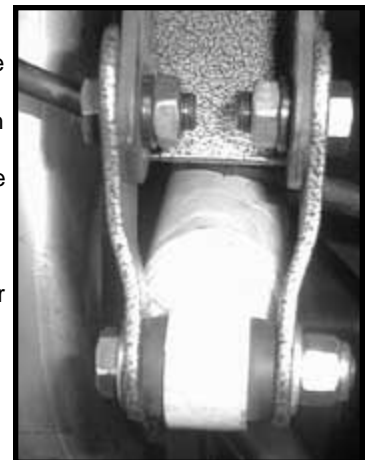

Check out all the DJM products on the web www.DJMSuspension.com

Tech Line (310) 538-1583