

# ROUGH COUNTRY

## SUSPENSION SYSTEMS®

### JEEP 2011-17 WK2 Grand Cherokee 20" LED LIGHT BRACKETS

Thank you for choosing Rough Country for all your off road lighting needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

This bracket kit was designed to fit a Led curved light 20" long from mounting surface to mounting surface.

#### KIT CONTENTS

- Driver Bracket (1)
- Passenger Bracket (1)
- 10mm x 35mm Bolts (4)
- 10mm Flat Washers (4)
- 10mm Lock Washers (4)



#### TOOLS NEEDED

- 10mm Socket
- 13mm Socket
- Flat Screwdriver/Pushpin Tool
- Ratchet
- Torque Wrench
- 30mm Wrench (Factory Tow Hooks)

#### INSTALLATION INSTRUCTIONS

1. Using a flat screwdriver or removal tool, remove the pushpin from behind the air dam. Retain for reuse. **See Photo 1.**
2. Using a 10mm socket, remove the 5 bolts holding the front skid plate on. Remove the skid plate and retain the hardware for reuse. **See Photo 2.**



PHOTO 1



PHOTO 2

3. Remove the 7 twist clips. Retain for reuse. There will be 2 in each wheel well and 3 across the front. **See Photo 3.**
4. Pull on the front of the bumper to remove. **See Photo 4.**



PHOTO 3

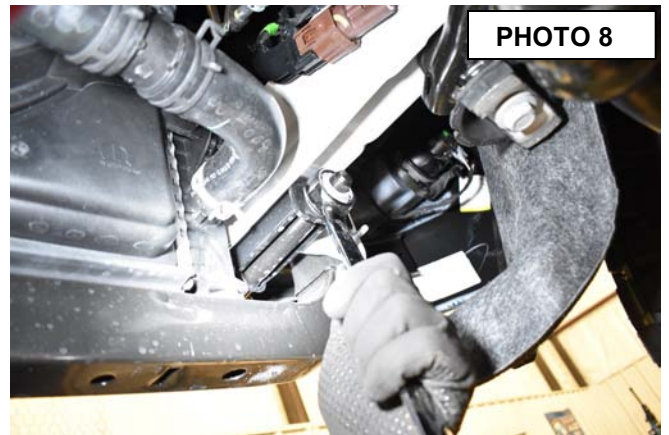


PHOTO 4



5. Completely remove the front bumper and set aside. **See Photo 5.**
6. **If your WK2 has factory tow hooks, skip to step 8.**
7. Install the supplied dr & pass light brackets using the supplied 10mm bolts, flat washers, and lock washers. Do not tighten at this time. Skip to step 11. **See Photo 6.**




8. Using a 13mm, remove the 2 bolts from the bottom of the tow hooks. **See Photo 7.**
9. Using a 13mm wrench, loosen the nut on the rear of the tow hook enough to slide the tow hook forward so that the tab on top of the tow hook will clear the light bracket in step 10. **See Photo 8.**




10. Install the supplied light bracket between the tow hook and the frame using the factory hardware. Do not tighten at this time. **See Photos 9 & 10.**

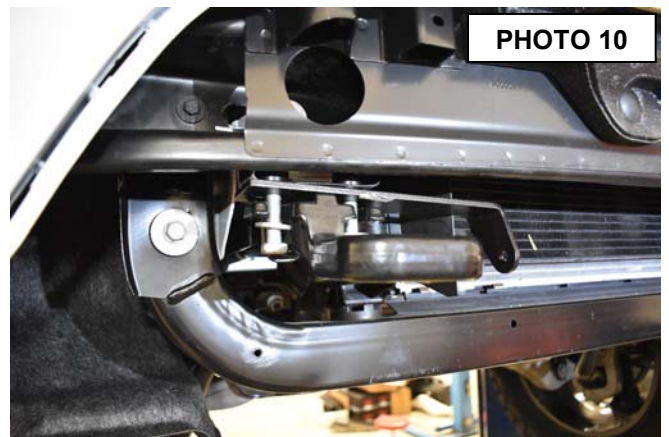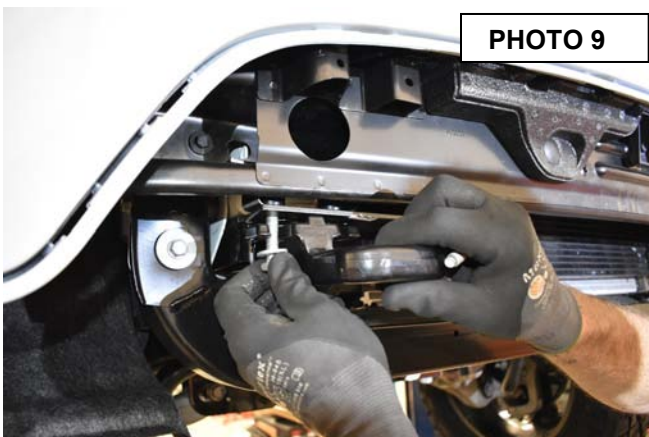

11. Install the light using the supplied hardware and tool. **See Photo 11.**
12. Wire the light according to the instructions included with the light.
13. Using a 13mm socket, tighten the light mounting bolts, torque to 32ft-lbs. Models with factory tow hooks will need the tighten the tow hook bolts then the 30mm nut on the rear of the tow hook. **See Photo 12.**

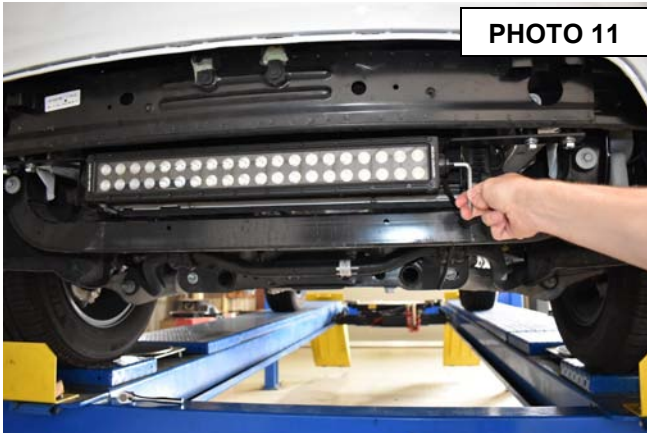

14. Install the bumper making sure it is clipped into place. **See Photo 13.**
15. Install the 7 twist clips.
16. Attach the skid plate using the factory bolts, torque to factory specs using a 10mm socket.
17. Install the pushpin.

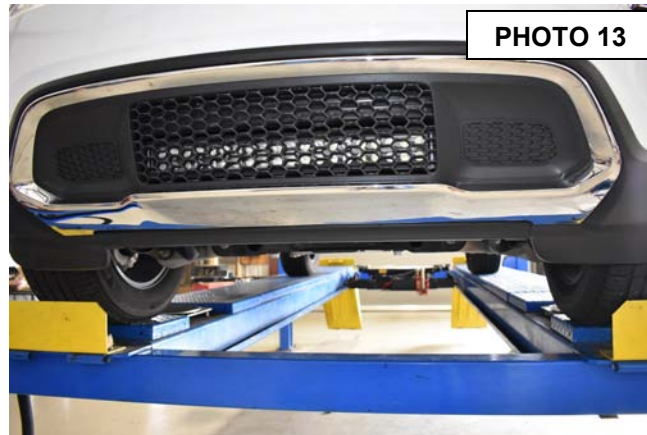

**Thank you for choosing Rough Country for all your off road lighting needs**

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable , State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.



