


97-06 Jeep
RCJ9746 Wrangler TJ

| PARTS INCLUDED: | QTY |
|------------------------------|-----|
| Driver Side Step | 1 |
| Passenger Side Step | 1 |
| Uses Factory Hardware | |

INSTRUCTIONS:


Step 1: Starting with the driver side, remove the three body mount bolts with bushings, and set aside. **Fig. A**

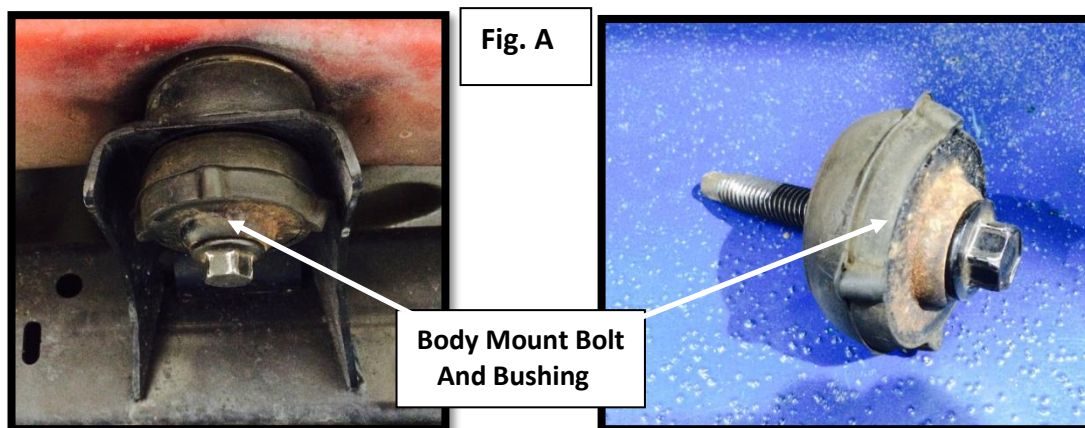


Step 2: Next, install the factory body bolts and bushings into the Nerf-steps center and rear bracket with the bushing on top of the mount creating an assembly. **Fig. B**



Step 3: Carefully raise step up into position aligning the brackets with the factory mounts and thread the bolts loosely. **Fig. C**

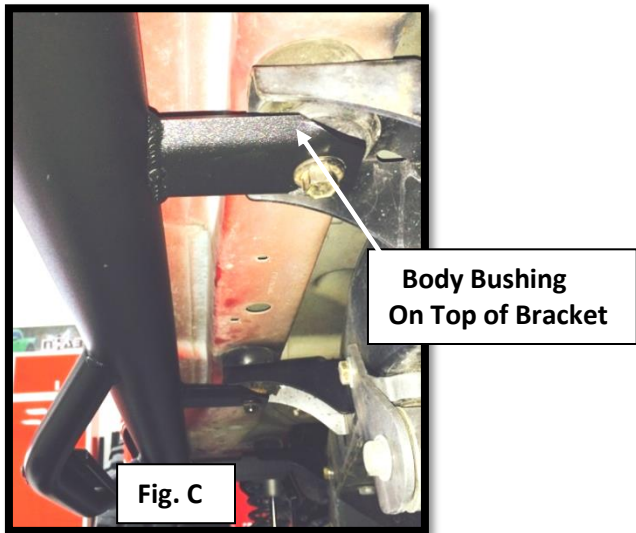

Step 4: Next, install the front body bolt and bushing and loosely tighten... **NOTE:** *Be sure the round opening in the step bracket fits around the upper body bushing and set s flush with body mount not to pinch the bushing. Fig. D*

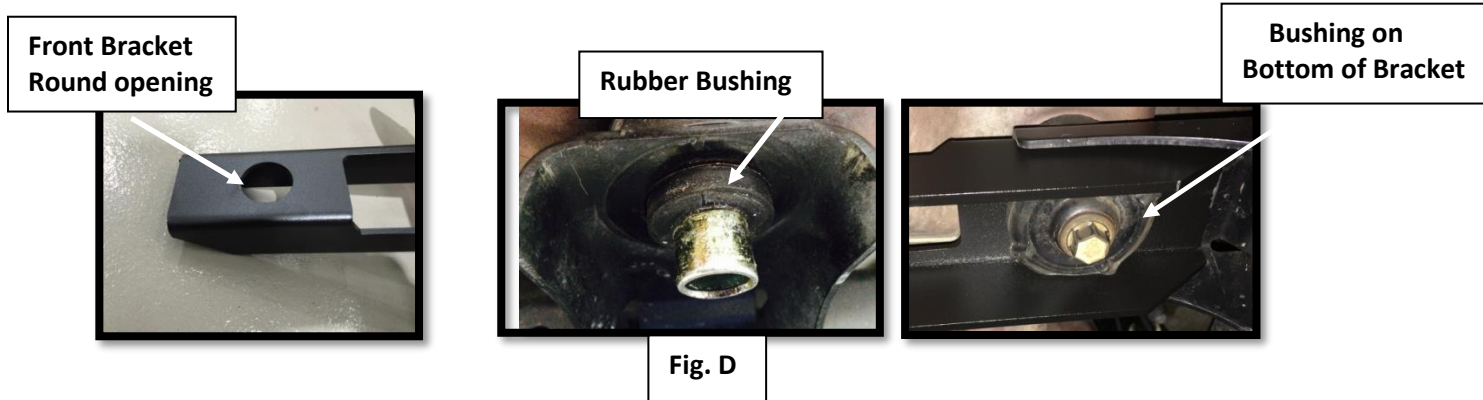

Step 5: Tighten all hardware to factory specs starting with the center bracket then front and rear.

Step 6: Repeat steps 1-4 with passenger side. **NOTE:** *Check all factory hardware periodically for tightness to ensure safety and longevity.*