



# ZROADZ

DYNAMIC LED MOUNTING SOLUTIONS



**PROFESSIONAL INSTALL RECOMMENDED**

**2011-2017 FORD RANGER (T6 / INTL)**

PART#: Z335761 / Z335761-KIT

**FRONT ROOF LED LIGHT MOUNTS**

PARTS ARE PATENT PENDING. ALL RIGHTS RESERVED - COPYRIGHT ©2019 - ZROADZ LED, INC.

## PARTS INCLUDED

- (1) - Driver Side Roof Mount Upright
- (1) - Passenger Side Roof Mount Upright
- (1) - Driver Side Curved Coupler
- (1) - Passenger Side Curved Coupler
- (1) - Hardware Pack



\* Simulated Rendering, Not actual parts.

## LED LIGHTS INCLUDED

**Z335671** - No LED Lights Included

**Z335671-KIT** - (1) ZROADZ 40" Curved LED Light Bar

## HARDWARE INCLUDED

### Z335671

- (1) - Weather Proof Rubber Boot
- (1) - 3/16 DIA. Wire Clip Mount
- (2) - 1/2 x 20 Hex Nut
- (2) - 1/2 Split Lock Washer
- (8) - 10-32 x .562 Button Head Allen Cap
- Stainless Steel Screws
- (8) - 10/32 Nylock Stainless Steel Nuts
- (1) - Driver Side Bottom Plate Gasket
- (1) - Passenger Side Bottom Plate Gasket

### Z335671-KIT

- (1) - Weather Proof Rubber Boot
- (1) - 3/16 DIA. Wire Clip Mount
- (2) - 1/2 x 20 Hex Nut
- (2) - 1/2 Split Lock Washer
- (8) - 10/32 x .562 Button Head Allen Cap
- Stainless Steel Screws
- (8) - 10/32 Nylock Stainless Steel Nuts
- (1) - Driver Side Bottom Plate Gasket
- (1) - Passenger Side Bottom Plate Gasket
- (1) - Torx Bit T-40
- (2) - M8 Tamper Proof Bolt
- (2) - M8 Split Lock Washer

## TOOLS REQUIRED

- Tapered 1/2" drill bit or car reamer
- Drill
- Air Hose & Nozzle
- Alcohol Cleaning Solution
- Cleaning Rag
- Socket Set & Ratchet Tool
- Ratchet Extensions
- Various Wrenches
- Dikes or Snips
- Torq Bit Set
- Heat Gun

## MATERIALS NEEDED

- Matching Touch-Up Paint
- Clear RTV Silicone
- 1/2" x 1/4" DIA Shrink Tube

## INSTALLATION GUIDE

### START HERE

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLATION. Auto makers offer varied models to each vehicle and occasionally manufacture more than one body style of the same model. To assure your part is correct; our tech department can be contacted at [orders@zroadz.com](mailto:orders@zroadz.com) to verify fitment and assist with technical questions. All other inquires can be directed to [orders@zroadz.com](mailto:orders@zroadz.com). In the event you do not have internet access please call 844-653-8040

\* APPLICATION MODELS VARY. WE RECOMMEND TO VERIFY FITMENT BEFORE BEGINNING INSTALLATION PROCESS.  
\* IMAGES FEATURED IN THE INSTRUCTION DOCUMENTS MAY NOT ALWAYS EXACTLY MATCH YOUR MODEL OR PART.

### BEFORE YOU BEGIN

START HERE: Turn off engine, chalk tires with stop block, open the hood and disconnect the battery.

### LED LIGHT BRACKET INSTALLATION

- STEP 1** 1) Drop OEM headliner down to allow access to the inside of vehicle roof moulding, per industry "R&R" method..



FIG 1

### STEP 2

2) From above, remove or push to the side roof seam moulding. (The Black Rubber Strip near both top edges of vehicle cab.)

### SEE FIGURE 2



FIG 2



## LED LIGHT BRACKET INSTALLATION - CONTINUED

PARTS ARE PATENT PENDING. ALL RIGHTS RESERVED - COPYRIGHT ©2019 - ZROADZ LED, INC.



FIG 3



FIG 4

### STEP 3

3) Located closest to the front windshield, remove mounting studs in roof seam channel on driver and passenger side that attach the moulding to the roof. A heavy duty pair of dikeys or snips will make quick work to pinch stud off. Make flush with roof channel and then coat over bare metal with touch up paint. Let paint dry.

### IMPORTANT NOTE

SEE FIGURE 4

Clear the channel of any obstructions including any channel moulding mounting posts where the bracket will install. If the channel has body seam sealer that does not span the width of the channel it must be removed for the distance that the bracket will come in contact with the roof channel. Replace any seam sealer with RTV silicone (STEP #29) and apply in a manner that yields a flat surface for the gasket to contact the roof.

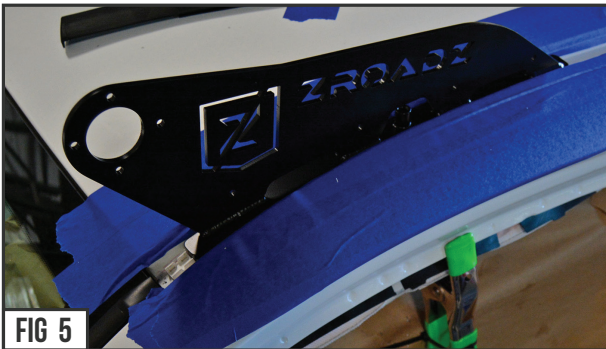


FIG 5

## DRILLING VEHICLE ROOF

### STEP 4

SEE FIGURE 5

4) Obtain the supplied roof mount base gaskets to use as a template to locate the drill hole location. Lay the gasket in the roof channel. DO NOT REMOVE THE GASKETS ADHESIVE LINER.

Make sure to gasket is centered transversely (from right to left) in the channel. The front to back location of the gasket should be 1/4" from the top edge of the windshield glass to the end of the front of the gasket.



FIG 6

### PRO TIP

DO NOT ATTEMPT INSTALL UNLESS YOU HAVE A CAR REAMER OR TAPERED 1/2" METAL DRILL BIT!

### STEP 5

SEE FIGURES 6-7-8-9

5) Using the gasket hole as a locator, center punch the pilot hole location.

With the interior roof free and clear, drill a 1/4" hole in the roof gutter to pilot the mounting hole. Use a car reamer (as seen in Figure #7) or tapered 1/2" metal drill bit to open the hole to a final diameter of 1/2".

With the holes drilled through, clean off all drilling debris and flash INSIDE AND OUTSIDE OF THE DRILL HOLE LOCATIONS. This is a very important to create a flush sealing surface and you do not want to leave any chance of rust occurring. Perform this step for both sides of the roof.



FIG 7

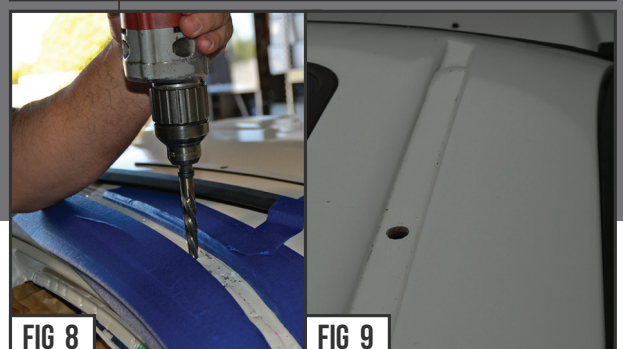


FIG 8

FIG 9

## LED LIGHT ROOF MOUNT INSTALLATION - CONTINUED





## LED LIGHT BRACKET INSTALLATION - CONTINUED

PARTS ARE PATENT PENDING. ALL RIGHTS RESERVED - COPYRIGHT ©2019 - ZROADZ LED, INC.



FIG 10



FIG 11

### STEP 6

SEE FIGURES 9 - 12

6) Clean the base of the supplied roof brackets with alcohol. Once dry remove the liner of the base gaskets from step #4 and apply the gasket to the base of each bracket.

### STEP 7

SEE FIGURE 13

7) Before you install the bracket to the roof, check that the threads on the post after coming through the roof are clean.



FIG 12

## INSTALL ROOF MOUNT TO ROOF



FIG 13

### STEP 8

SEE FIGURE 14

8) Use a thin layer of clear RTV Silicone around outside of each drilled hole to help with weather proofing and sealing.



FIG 14

### STEP 9

SEE FIGURE 15

9) With the roof and channel area debris free and wiped down clean with alcohol cleaning solution, align the ZROADZ LED Mounting bracket to the roof and insert the through bolt threads down into the drilled hole.

Make sure the outside of the upright is coated black and says ZROADZ while the inside of upright presents the aluminum skin. Inspect your work to make sure you are happy with the position and then repeat for other side.



FIG 15

## LED LIGHT ROOF MOUNT INSTALLATION - CONTINUED



## LED LIGHT BRACKET INSTALLATION - CONTINUED

PARTS ARE PATENT PENDING. ALL RIGHTS RESERVED - COPYRIGHT ©2019 - ZROADZ LED, INC.



FIG 16



FIG 17



FIG 18

### STEP 10

SEE FIGURES 16 - 18

10) With the two brackets installed, check that the threads on the post after coming through the roof are clean. Install the split lock washer and the hex nut and tighten securely.

### STEP 11

11) Check to make sure the upright is secured and firmly attached to top side of roof.



FIG 19

## LED LIGHT INSTALL



FIG 20

### STEP 12

SEE FIGURE 19 - 21

12) Obtain the supplied security torx, lock washer and tool bit from the hardware pack. With a friend's help, install the 50" light to the brackets with the wire on the drivers side. Tighten hardware by giving the torx bit some extra leverage.



FIG 21

### STEPS 13

SEE FIGURE 22

13) Secure the wire to the driver bracket with supplied wire clip and nut. Leave slack in the wire from LED to the wire clip for some movement & available adjustment.



FIG 22

## LED LIGHT ROOF MOUNT INSTALLATION - CONTINUED





## LED LIGHT BRACKET INSTALLATION - CONTINUED

PARTS ARE PATENT PENDING. ALL RIGHTS RESERVED - COPYRIGHT ©2019 - ZROADZ LED, INC.



FIG 23



FIG 24

### STEPS 14

SEE FIGURE 23

14) Cut the LED light wires. Leave enough room for the insulation to be removed and the red and black wires to pass through the roof via the "Through Bolt Down Tube".

### STEP 15

SEE FIGURE 24

15) Trim back a large amount of the insulation sheath off the LED Wires so that you can slip them through the rubber weather proofing boot.

To expose the wires, a sharp razor could easily splice open the insulation sheath.

## WIRING PLUMBING



FIG 25

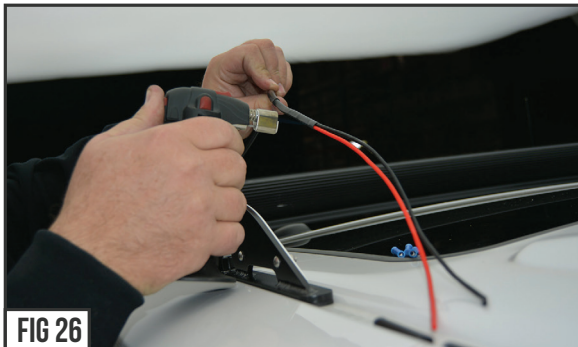


FIG 26

### STEPS 16

SEE FIGURES 25 & 26

16) Install 1/4" heat shrink insulation over wires as shown in Figure #25. Shrink insulation with heat gun or similar.



FIG 27

### STEPS 17

SEE FIGURES 27

17) Use a 50/50 mix of dish soap and water solution to install supplied boot over wire as shown on page #2 Fig. 6.

Pass the wire through the tube. Use a liberal amount of solution on the bracket around the area where the boot installs to aid in slipping the boot over the post.

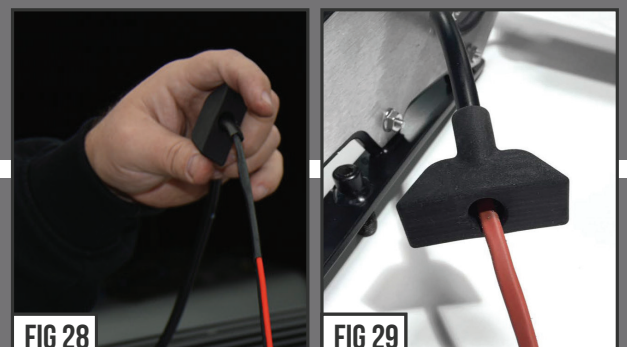


FIG 28

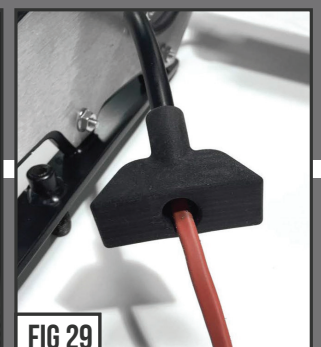


FIG 29



FIG 30

## LED LIGHT BRACKET INSTALLATION - CONTINUED



## LED LIGHT BRACKET INSTALLATION - CONTINUED

PARTS ARE PATENT PENDING. ALL RIGHTS RESERVED - COPYRIGHT ©2019 - ZROADZ LED, INC.



FIG 31



FIG 32

### STEPS 18

SEE FIGURE 31

18) Stuff the boot into the bracket opening and over the down tube upright.

### STEP 19

SEE FIGURE 33 - 34

19) With the rubber boot fully seated (as seen in Figures #33 & 34) you are now ready to finish wiring up the LED Light bar to a wiring harness.

After wiring is complete, re-install vehicle's interior in the reverse order it was removed according to industry "R&R" method.

## FINAL INSTALLATION



FIG 33



FIG 34

### STEP 20

20) Wire LED Light with a ZROADZ optional wiring harness kit (part# Z390020S-A) or by utilizing a compatible custom wiring harness. ZROADZ recommends LED Lights be wired with ZROADZ harness kit (part# Z390020S-A).



FIG 35

### STEPS 18

ADJUSTMENT TIPS

21) To adjust the angle of your Light Bar, rotate the LED(s) to adjust the angles till your desired light pattern is reached. There will be minimal adjustment due to curved light bar orientation. You may then tighten the hardware and secure everything into place. Be careful not to over tighten the mounting hardware.

It is best to adjust the angle with the vehicle on level ground with lights facing a wall, garage door or other solid barrier. We recommend checking from a distance of 25'. Your installation is now completed.



FIG 36

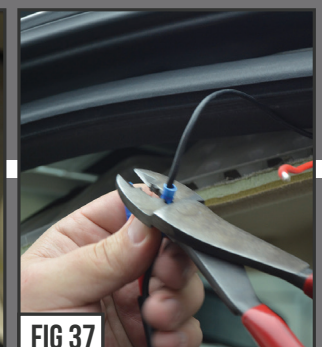


FIG 37

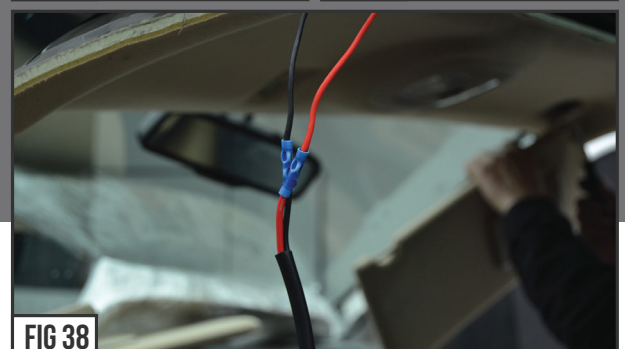


FIG 38

## LED LIGHT ROOF MOUNT INSTALLATION - COMPLETE





# ZROADZ

DYNAMIC LED MOUNTING SOLUTIONS

## ZROADZ PRODUCT WARRANTY

### ZROADZ PRODUCT WARRANTY

ZROADZ warrants its grille products to be free from defects in material and workmanship for the lifetime of the grille. ZROADZ warrants the finish of its grille products for a 3 year period beginning at the time of sale to the end user. These warranties are limited warranties and do not cover abuse, modification or improper installation nor do they cover finish failure caused by caustic cleaning agents, road salts or other chemicals. ZROADZ reserves the right to repair or replace a defective product at its sole discretion. Any ZROADZ product must be returned to ZROADZ for warranty consideration and must be returned at the customer's expense. In the event that the product is deemed to be defective, the repaired or replaced item will be returned via a surface shipping method to the customer at ZROADZ expense. No provision is made for any labor, rental car or other costs incurred by the failure of its products.

## LED LIGHTING EQUIPMENT INSTALLATION / DISCLAIMER

### WARNING

**PLEASE CONSULT YOUR LOCAL AUTOMOTIVE ELECTRICAL PROFESSIONAL FOR INSTALLATION SERVICES AND ADVICE.** ZROADZ IS ONLY EQUIPPED TO PROVIDE BASIC TECHNICAL ASSISTANCE DUE TO THE DIVERSITY OF VEHICLES, VEHICLE OPTIONS & MODIFICATIONS AND LIGHTING CONFIGURATION OPTIONS AVAILABLE. ZROADZ cannot be held liable due to improper component installation and / or faulty wiring.

### GENERAL GUIDELINES

LED Lights & LED Light Bars operate at relatively high currents and should only be installed by qualified personnel with experience in switched / relayed high draw DC Circuits.

- Light Bars are designed for use only with standard 12v DC power systems
- Light Bars are for OFF-ROAD USE ONLY. Check your local laws & regulations regarding vehicle mounted lights.
- Some Light Bars are equipped with waterproof connectors while others are simply pig-tailed
- Red Wires = POSITIVE | Black Wires = NEGATIVE
- ALWAYS install your lights on a fused circuit. Basic fusing guidelines: maximum 5A for every 10" of LED Light Bar.

### GENERAL USE, INSTALL AND ADJUSTMENT TIPS

NOTE 1: ZROADZ LED Light Bars themselves are for OFF-ROAD USE ONLY.

NOTE 2: Light Bars depending on the configuration of your vehicle and its options and/or modifications may need to be adjusted for appropriate beam projection. To adjust the angle of your light bars simply loosen the mounting hardware on either side of each Light Bar, rotate the Light Bar to adjust the angle, then tighten the hardware once the desired angle is achieved (please be careful not to over-tighten the mounting hardware or scratch the protective powder-coat finish. It is best to adjust the angle with the vehicle on level ground with the lights facing a wall, garage door or other solid barrier at a distance of approximately 25-30 feet.

NOTE 3: Please consult a qualified automotive electrical professional for light bar wiring installation.

NOTE 4: An optional universal wiring harness (part# Z390020S-A) is also available that includes high-heat & oil/fuel resistant wires, waterproof connector, 12v relay, 12v rocker switch, inline fuse holder. Our universal wiring harness significantly expedites the installation process but is not a vehicle specific "Plug & Play" product and does not eliminate the need for a professional installation.

Please contact your local ZROADZ dealer for more information or visit [www.zroadz.com](http://www.zroadz.com).

## PRODUCT CARE INFORMATION

### PRODUCT CARE INFORMATION

Wash regularly as you would when caring for your vehicles. Never use dish soap. Never leave wet water spots as that may leave a blemish.

### MATTE BLACK FINISH

Paint warranty applies to defects in material and / or workmanship, it does not cover the matte finish surface appearance.

To enjoy the matte appearance for many years to come, please follow these owner care and maintenance tips.

Get a no-shine matte car wash soap that uses no fillers, no silicone, and won't strip your matte paint of its layer of protection.

Do not use wax, detail spray, armorall®, or any products made for normal paint. Use only products specifically developed for matte finish paint. Do not use products that are even mildly abrasive, such as polishes, glazes, or rubbing compounds. Do not use mechanical cleaners or polishers. Do not use terrycloth, cloth, or paper towels. Do not rub the finish vigorously, this will burnish the paint finish, causing a permanent shiny spot. Shiny spots cannot be removed.

Do not use commercial car wash facilities or their shine enhancement products. Most car wash brushes, large mechanized "towels," and shine enhancement products can damage matte paint.

Remove foreign substances such as insect remains, tar, and road debris using a soft applicator and a mild solvent; saturate and soak area before cleaning—rub lightly.

Hand-wash with a soft wash mitt and mild cleaning product safe for matte paint. Use microfiber cleaning cloths with alcohol-based window cleaner for basic surface clean-up.

### GLOSS BLACK FINISH

ZROADZ with Gloss Black Powder Coated Finish may be washed regularly as you would when caring for your vehicles finish using soap and water. ZROADZ should be waxed at the same time that you wax the vehicle. As a general rule, anything you use to clean your vehicles painted surfaces can be used to clean and maintain your ZROADZ grille. A Gloss powder Coated Finish can be cared for in the same fashion that you would care for your vehicles factory paint job. Never leave wet water spots as that may leave a blemish.

**PARTS ARE PATENT PENDING. ALL RIGHTS RESERVED - COPYRIGHT ©2016 - ZROADZ LED, INC.**