

CAN-AM 2020 Maverick X3 Grille with 6" LED Mount

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.

Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.

Periodically check all hardware for tightness.

KIT CONTENTS:

6" Single Row LED Light Kit x1
Light Bracket x2

TOOLS NEEDED:

10MM Wrench or Socket
4MM Allen wrench

HARDWARE INCLUDED:

6MM-1.0 x 20MM Button Head Bolts x8
6MM Flat Washers x4
6MM-1.0 Nylock Nuts x8



Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs





INSTALLATION INSTRUCTIONS


1. Remove the hood cover. It just pops off. **See Photo 1.**
2. Pull forward to remove the grille. **See Photo 2.**




3. Install the (2) light brackets onto the grille. Secure the brackets to the grille using (4) of the supplied 6MM-1.0 x 20MM button head bolts, and (4) 6MM-1.0 nylock nuts. Tighten using a 4MM allen wrench and a 10MM wrench. **See Photo 3.**
4. Install the 6" LED light into the grille. **NOTE: The slots in the light brackets can be adjusted to fit the light.** Secure the lights into the brackets using the supplied hardware in the LED light kit. **See Photo 4.**

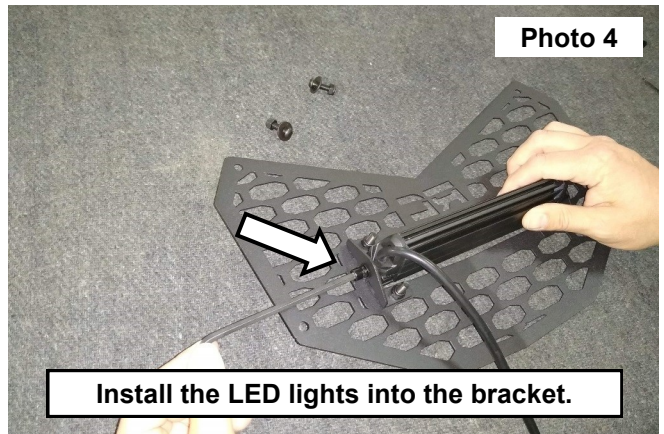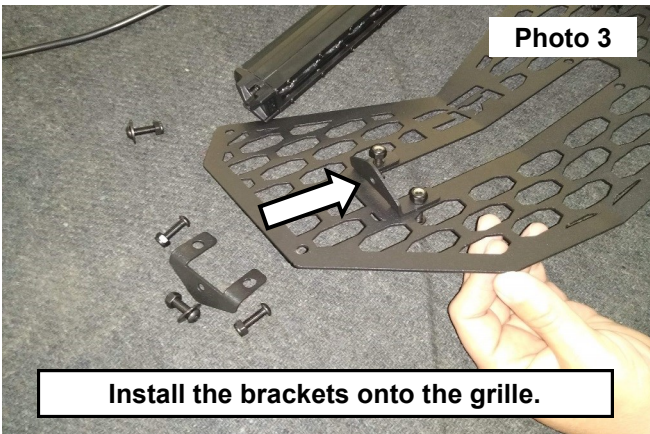

5. Refer to the instructions that came with the LED light to connect the wiring harness to the UTV.
6. Connect the lights to the wiring harness. Then install the grille into the UTV grille opening. **See Photo 5.**
7. Secure the 4 corners using the 6MM-1.0 x 20MM bolts, nuts, and washers. **See Photo 6.**

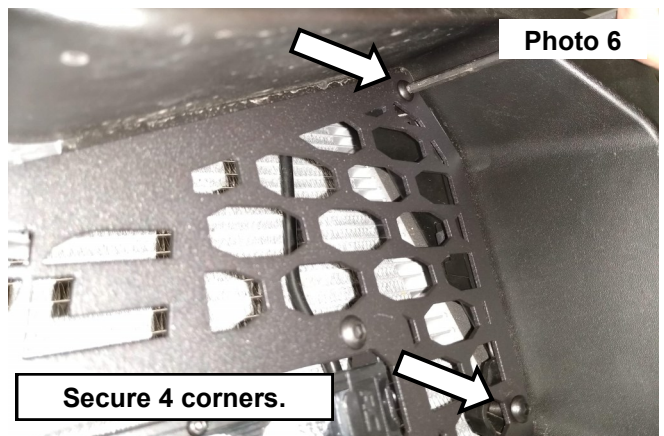

8. **NOTE: The washer goes on the inside with the nut. See Photo 7.**
9. Reinstall hood cover. **See Photo 8.**

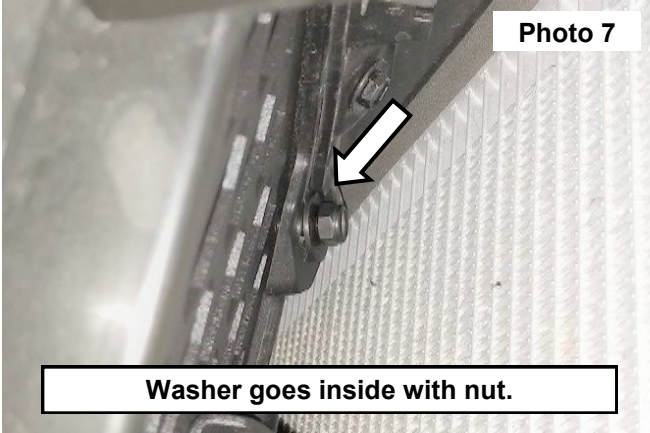

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

