

Installation Instructions

Eibach Springs, Inc. • 264 Mariah Circle • Corona, California 92879-1751 • USA • Tech Support 800-222-8811 Ext 114

REAR CONTROL ARM KIT # AK41-40-036-06-02

Kit Contents	Description	Part Number	Qty
	Control Arm, Lower	AK41-40-036-06-RA	2
	Instructions	AK41-40-036-06-02INST	1

NOTES: Read All Instructions Before Beginning Installation

- Only qualified mechanics experienced in the installation and removal of suspension components should perform this installation.
- Use of a hoist and screw jack is highly recommended and will substantially reduce installation time.
- Never work on or under a vehicle unless it is properly supported.

Removal and Installation of Eibach Billet Control Arm.

1. Begin by raising the vehicle and supporting it with the proper safety equipment, then, remove the rear wheels. **Note: Never work on or under a vehicle that is not supported by the proper safety equipment.**



Photo 1



Photo 2



Photo 3

2. Loosen and remove the hardware that secures the OE lower control arm to the knuckle and the subframe, then, remove the OE arm as shown. (See Photos 1, 2 & 3)

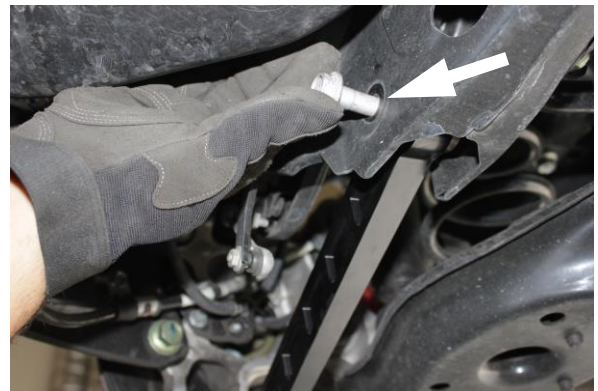


Photo 4



Photo 5

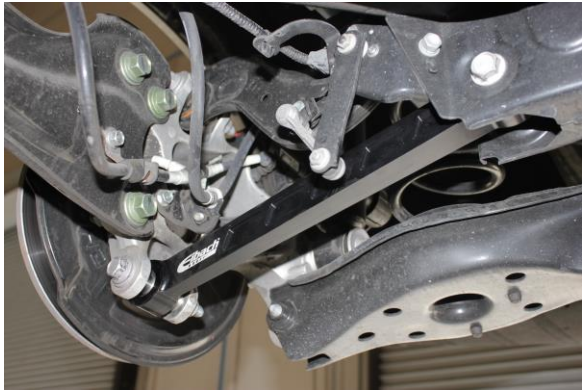


Photo 6

3. Install the Eibach arm and secure it using the OE hardware, then, torque to factory specs. **Note: The thicker/wider end of the arm is mounted to the subframe. (See Photos 4, 5 & 6)**
4. Repeat this procedure on the opposite side, then, reinstall the rear wheels.
5. Double check to make sure everything is properly positioned and tightened, then, road test the vehicle.
6. After road testing, double check all hardware to make sure everything is properly tightened and re-tighten if necessary.