

CAN-AM 2018-21 Maverick Sport Rear Cargo Gate

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.

Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.

Periodically check all hardware for tightness.

KIT CONTENTS:


- Dr Side Rear Cargo Gate x1
- Pass Side Rear Cargo Gate x1
- Center Piece x1

TOOLS NEEDED:

- 4mm Allen Wrench
- T30 Torx Bit

HARDWARE INCLUDED:

- 6mm x 35mm Button Head Bolts x3
- 6mm x 20mm Button Head Bolts x8
- 6mm Flat Washers x23
- 6mm Lock Nuts x8

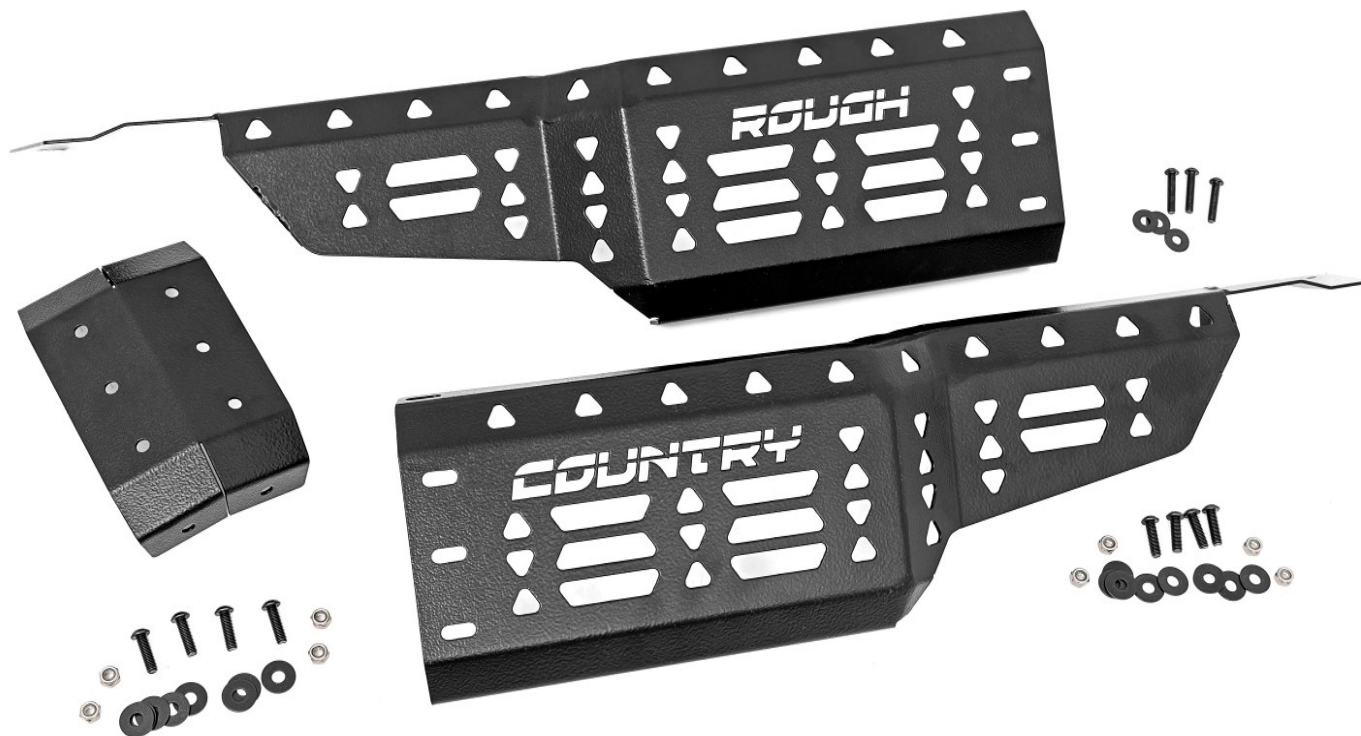


Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs




INSTALLATION INSTRUCTIONS


1. Remove the rear bolt on each side of the cargo bed using a T30 Torx bit. **See Photo 1.**
2. Remove the rear center bolt on the cargo bed using a T30 Torx bit. **See Photo 2.**

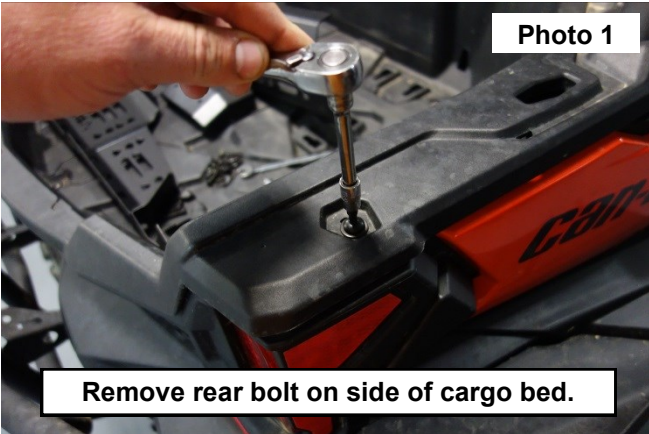


3. Place 6 of the supplied 6mm flat washers on each side of the cargo bed for spacers. **See Photo 3.**
4. Place the cargo gate on the rear of the bed. **See Photo 4.**

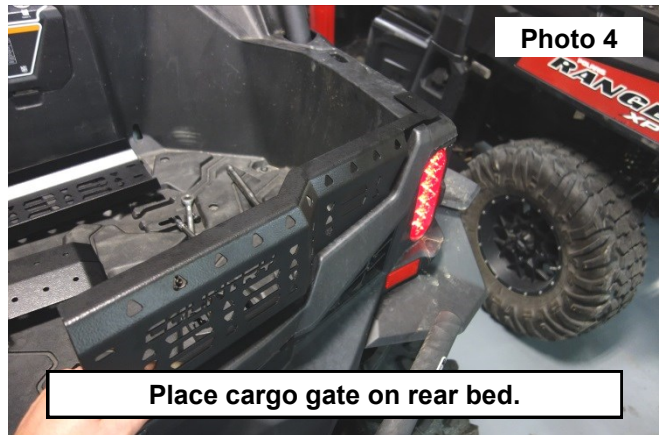

5. Install the supplied 6mm x 35mm bolts and washer to the side of the cargo gate using a 4mm Allen wrench. **See Photo 5.**
6. Install the other side of the cargo gate and place the center piece over both sides. **See Photo 6.**

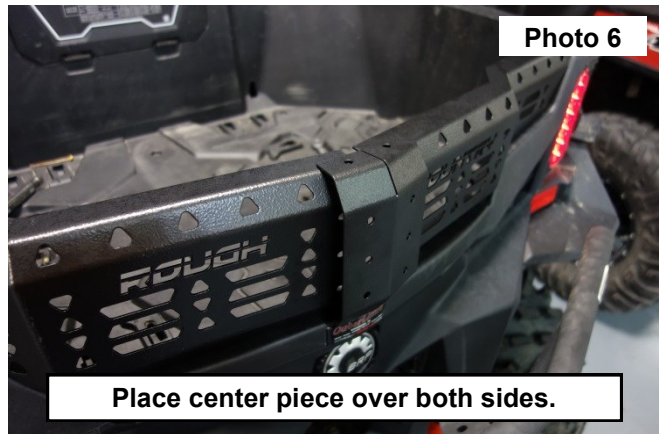

7. Install a 6mm x 35mm bolt and washer on the lower center piece using a 4mm Allen wrench. **See Photo 7.**
NOTE: Make sure the bottom lip of the center piece is beneath the cargo gate.
8. Install the 6mm x 20mm bolts, nuts, and washers on the rear and the top of the center piece using a 4mm Allen wrench and 10mm wrench. **See Photo 8.**

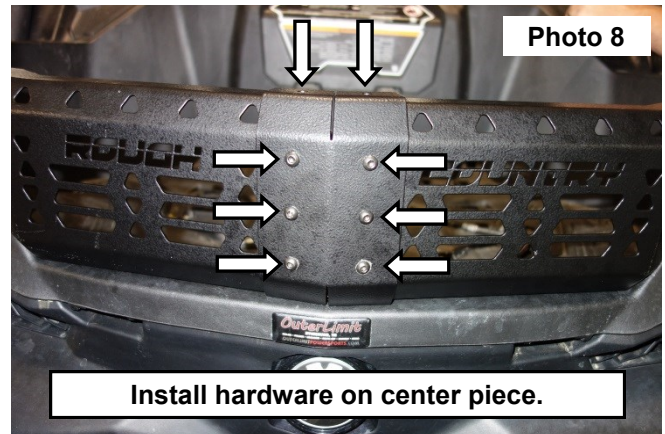

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

