

## CAN-AM 2010-16 Commander 800/1000 2" Lift Kit

**Thank you for choosing Rough Country for all your vehicle needs.**

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product. Check all fasteners for proper torque. Check to ensure for adequate clearance between all components. Periodically check all hardware for tightness.

### KIT CONTENTS:

Front Inner Brackets x2  
 Front Outer Brackets x2  
 Rear Brackets x4

### TOOLS NEEDED:

15mm Socket/Wrench  
 17mm Socket/Wrench  
 9/16" Socket/Wrench  
 5/16" Drill Bit  
 Drill

### HARDWARE INCLUDED:




10mm x 55mm Bolts x2  
 10mm x 70mm Bolts x2  
 10mm Lock Nuts x4  
 3/8" x 1" Bolts x2  
 3/8" Lock Nuts x2  
 3/8" Flat Washers SAE x4  
 3/8" Flat Washers USS x4  
 3/4" x 0.9" Sleeves (Front) x2  
 3/4" x 1.18" Sleeves (Rear) x2



### Torque Specs:


Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs



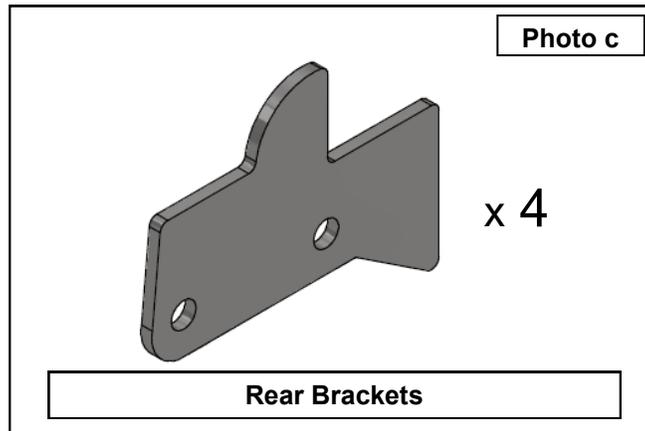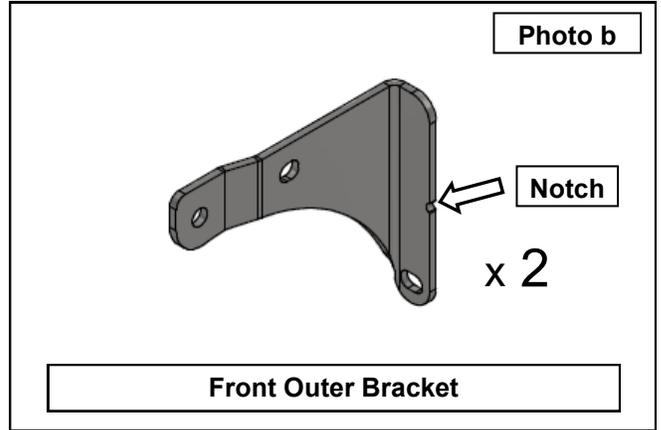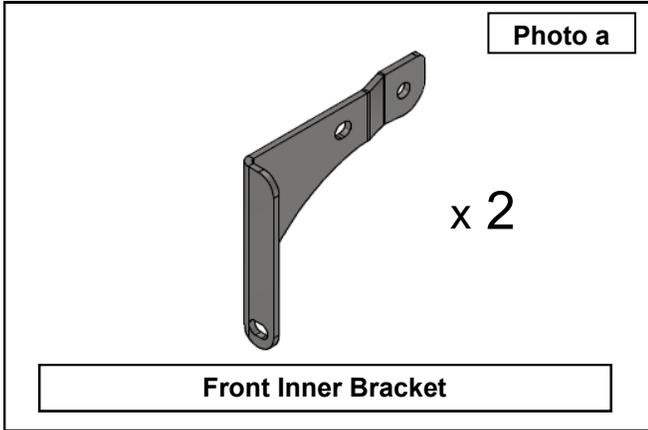

## FRONT INSTALLATION INSTRUCTIONS


1. Jack up the front of the vehicle and place on jack stands. Remove the front wheels.
2. Remove the front upper strut bolt using two 15MM socket/wrenches. **See Photo 1.**

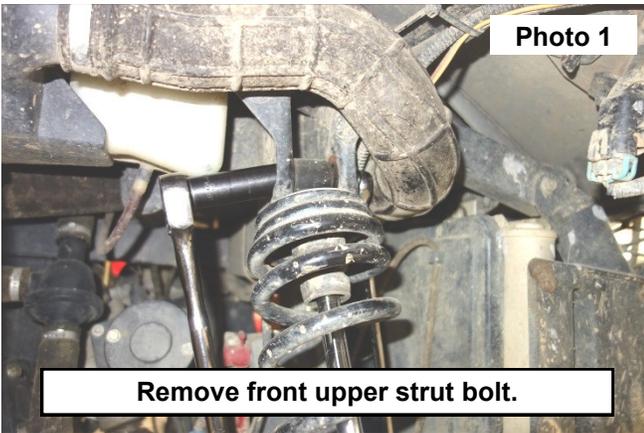

3. Place the outer bracket on top of inner bracket (Photos a and b from page 2) and install in the stock upper strut location using 10mm x 55mm bolts and 3/4" x 0.9" spacer sleeve using two 17mm socket/wrenches. **See Photo 2, Photo 3, and Photo 4.**




4. Drill through the lower hole in the bracket using a 5/16" drill bit. **See Photo 5.**
5. Install the supplied 3/8" hardware using a 9/16" socket and wrench. **See Photo 6.**

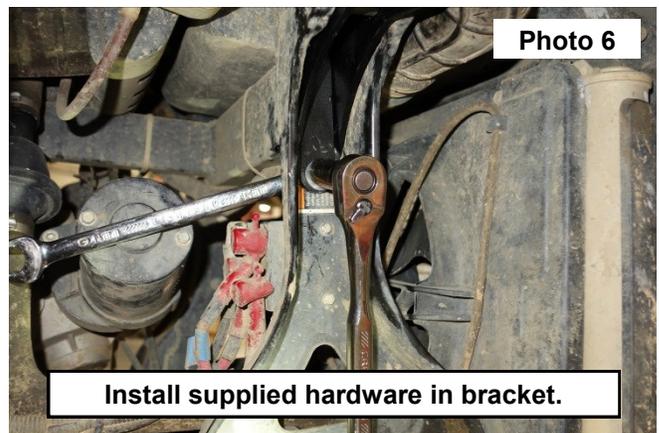


6. Reinstall strut in bracket using stock hardware.
7. Put on wheels and lower.

## REAR INSTALLATION INSTRUCTIONS

1. Jack up the rear of the vehicle and place on jack stands. Remove the rear wheels.
2. Remove the rear upper strut bolt using two 15mm socket/wrenches. **See Photo 1.**
3. Install the rear brackets (Photo c from page 2) in the stock upper strut location with 10mm x 70mm bolts and 3/4" x 1.18" spacer using two 17mm socket/wrenches. **See Photo 2.**

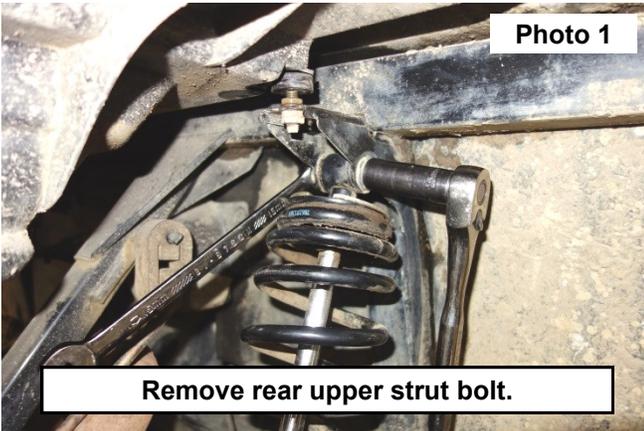

4. Reinstall upper strut to the bracket using the stock hardware with supplied washers. **See Photo 3.**

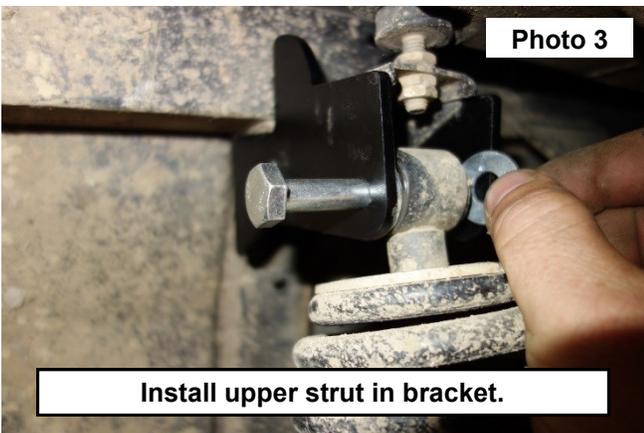

5. Put on wheels and lower.

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

