

# ROUGH COUNTRY

## SUSPENSION SYSTEMS®

41005

### TOYOTA 2007-21 Tundra BA2 Steps

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.

Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.

Periodically check all hardware for tightness.

#### KIT CONTENTS:

Step Rails x2  
 Driver Side Step Bracket x4  
 Pass Side Step Bracket x4

#### TOOLS NEEDED:

10mm Wrench or Socket  
 13mm Wrench or Socket

#### HARDWARE INCLUDED:

8-1.25 x 30mm Hex Bolts x16  
 8mm x 24mm Flat Washers x32  
 8mm Lock Washers x16  
 8mm Double Bolt Plates x8  
 8mm Hex Nuts x16




#### Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs





## INSTALLATION INSTRUCTONS



1. Remove the OE steps if installed or clean the threads around the mounting area in the cab. **See Photo 1.**
2. Locate the front cab mount. (Passengers side shown) Secure the bracket to the cab mounts using (2) of the supplied Hex head bolts, (2) Flat washers and (2) Lock washers. **See Photo 2.** Do not tighten the brackets at this time.

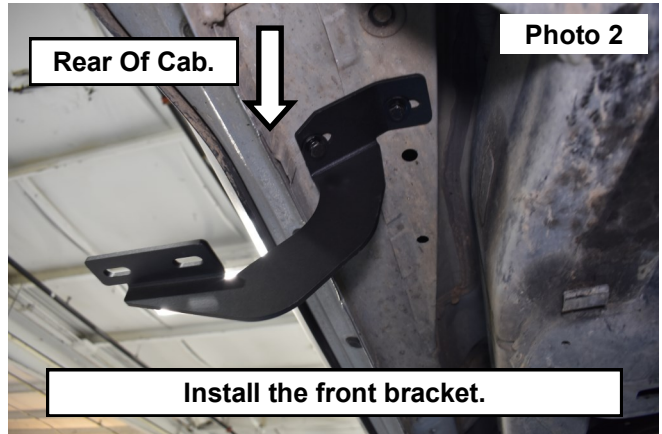

3. Install the center, mid and rear bracket to the vehicle. Do not tighten the brackets at this time. **See Photo 3.**
4. Install the (2) Center and mid step brackets to the cab. Secure the brackets to the cab mounts using (2) of the supplied Hex head bolts, (2) Flat washers and (2) Lock washers. **See Photo 4.** Do not tighten the brackets at this time.

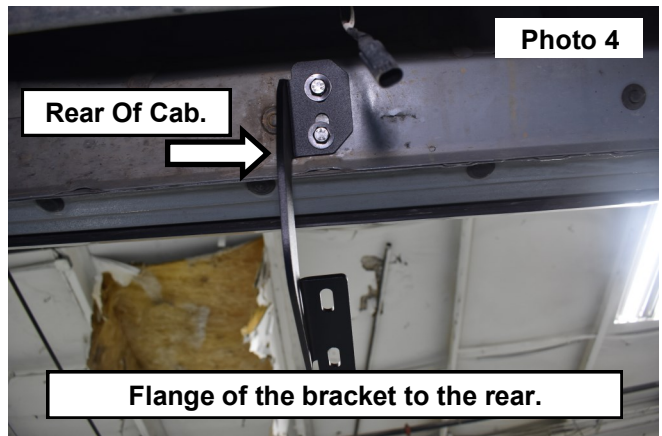
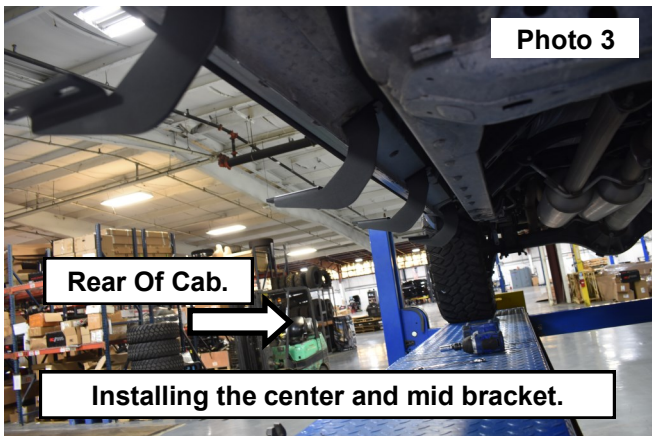


5. Install the (2) Rear bracket to the cab. Secure the bracket to the cab mounts using (2) of the supplied Hex head bolts, (2) Flat washers and (2) Lock washers. **See Photo 5.**
6. Locate the step mounting bracket, (2) Flat washers and (2) nylock nuts. **See Photo 6.**

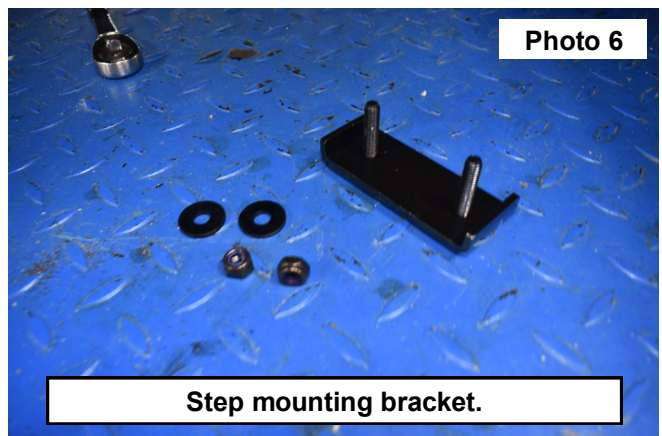
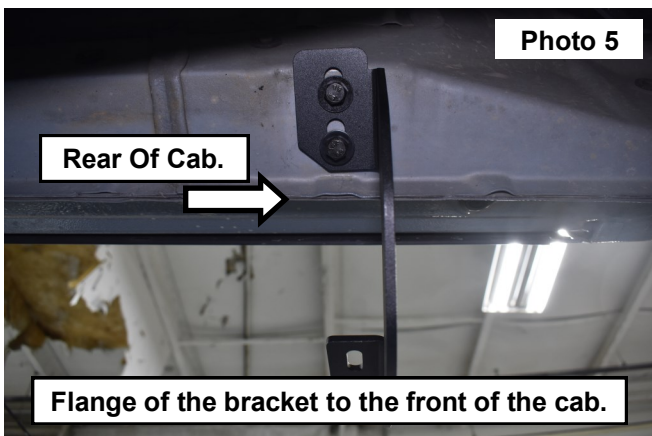






7. Place the (4) mounting brackets into the step. **See Photo 7.**
8. Install the step onto the (4) mounting brackets at the same time placing the studs into the cab mounting brackets. **See Photo 8.**

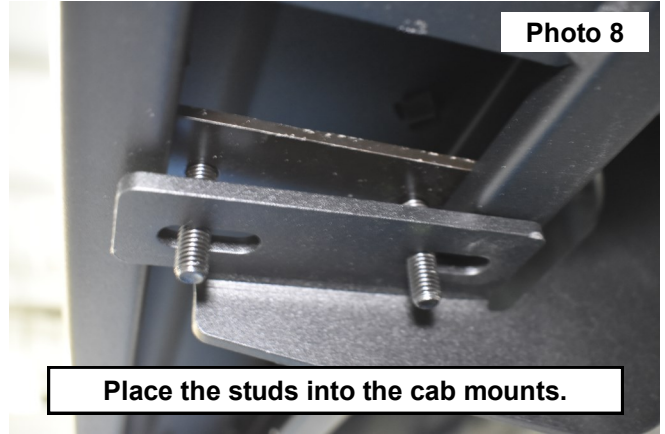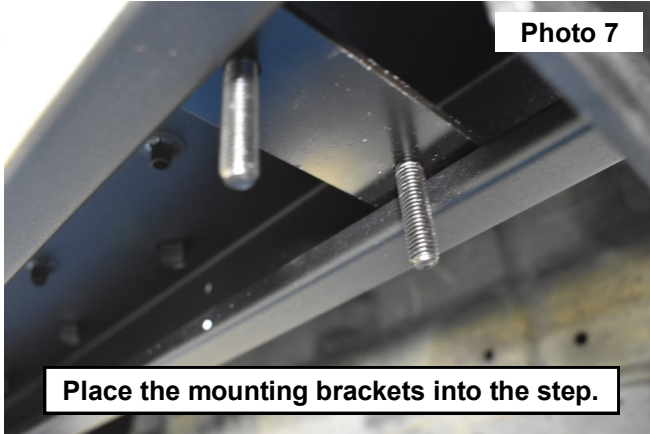

9. Secure the steps using the supplied (2) Flat washers and (2) nylock nuts. **See Photo 9.**
10. Center the step on the cab of the vehicle. **See Photo 10.**

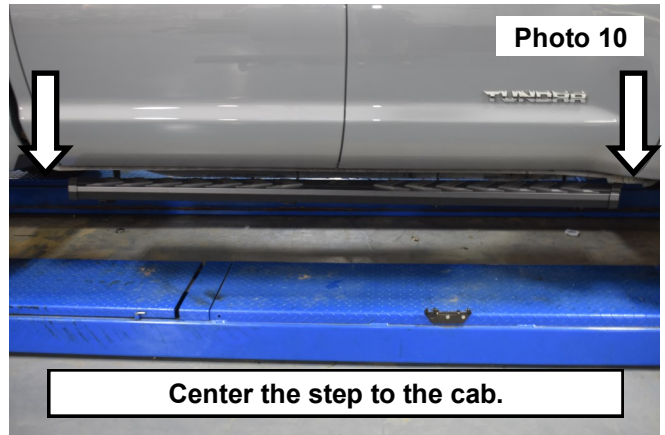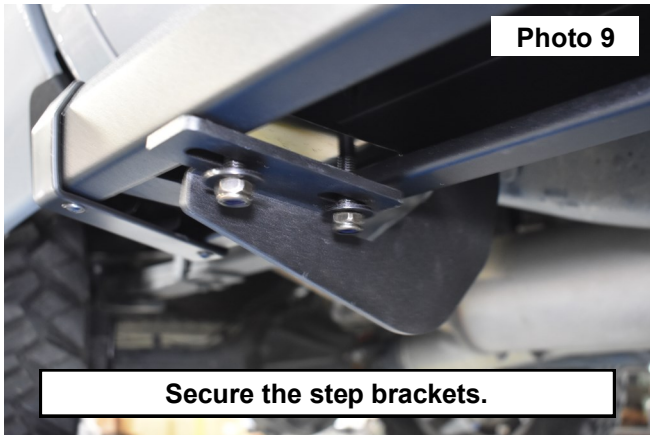

11. Tighten the cab mount brackets first then tighten the steps to the cab mounts using a 13mm socket. **See Photos 11 and 12.**

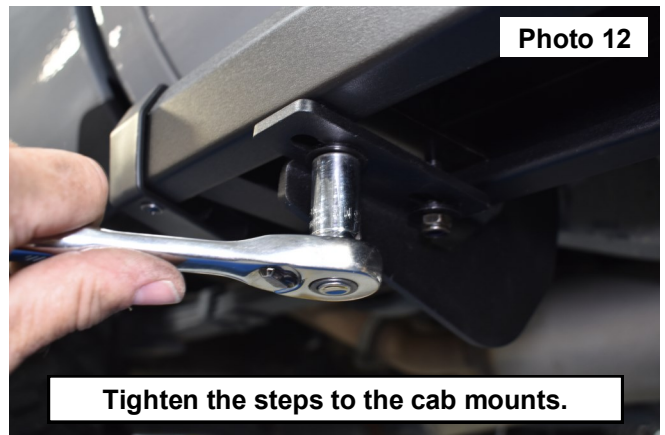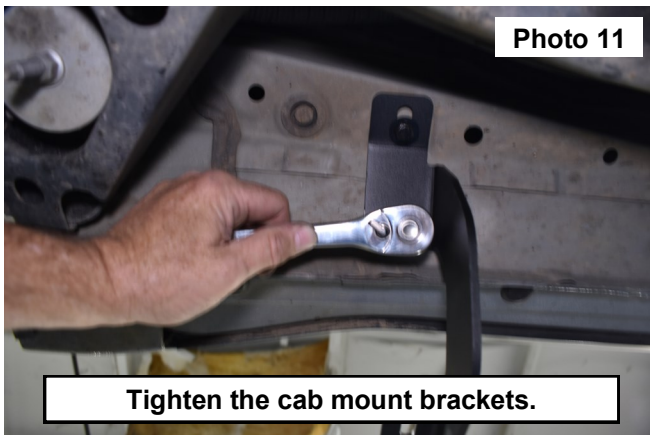

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.



