



THE AUTOMOTIVE LIGHTING BENCHMARK

# 09-18 DODGE RAM XB LED MIRROR LIGHT INSTALLATION GUIDE

WARNING: By reading this document, you agree it is only to be used as an educational guide. Morimoto Lighting nor its dealers make guarantees on any finished results, nor are they to be held responsible for any damage, misuse, or personal injuries. If you are unable to clearly understand and adapt the information below, professional installation is recommended.

## PACKAGE CONTENTS



2X MIRROR LIGHTS

## TOOLS REQUIRED


T15 TORX SCREWDRIVER

# INSTALLATION PROCESS

1. Push the bottom of the top mirror all the way in. Pull on the top of the bottom mirror to release it.



2. Unplug the stock mirror light's connector. Remove the one (1x) T15 screw holding the mirror light in.

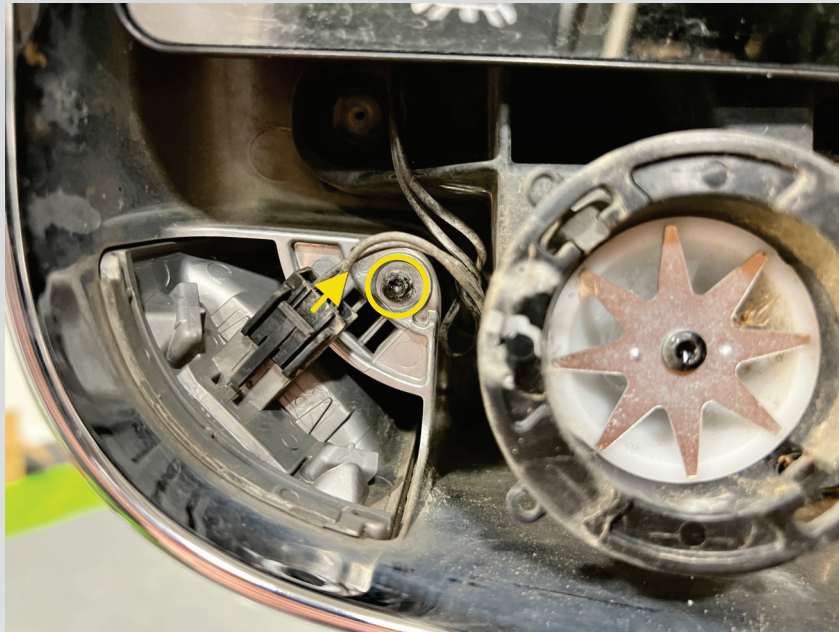

3. Press the mirror light out towards the front to remove it.



4. Installation is reverse of removal.

5. Turn on the truck and go through all modes to ensure proper functionality.

-END-