



THE AUTOMOTIVE LIGHTING BENCHMARK

FERRARI XB LED TAIL LIGHTS INSTALL GUIDE

WARNING: By reading this document, you agree it is only to be used as an educational guide. Morimoto Lighting nor its dealers make guarantees on any finished results, nor are they to be held responsible for any damage, misuse, or personal injuries. If you are unable to clearly understand and adapt the information below, professional installation is recommended.

PACKAGE CONTENTS



4X TAIL LIGHT ASSEMBLIES




2X WIRING ADAPTERS

TOOLS REQUIRED


8MM DEEP SOCKET OR WRENCH
10MM DEEP SOCKET OR WRENCH
PHILIPS HEAD SCREWDRIVER
POWER DRILL
7/32" OR 5.5MM DRILL BIT
PAINTERS TAPE OR MASKING TAPE
MARKER OR PEN

INSTALLATION PROCESS


1. Using the 10mm deep socket or wrench, remove the three bolts holding each panel in place. Remove panels and set aside.

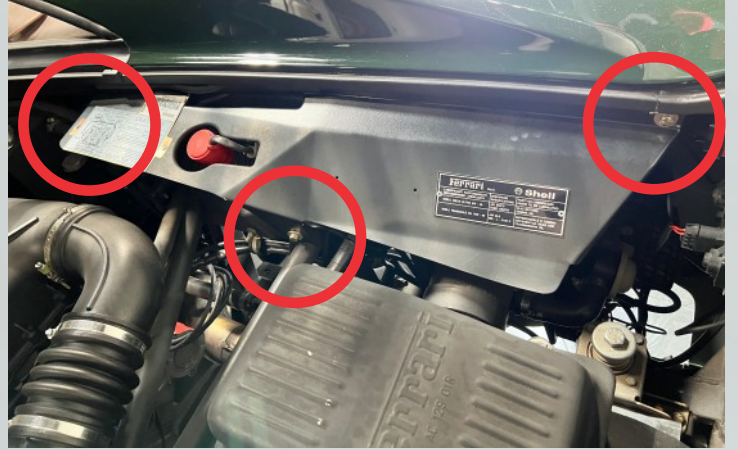

2. Using a 7/32" or 5.5mm bit, drill out the two rivets holding the third brake light grille trim panel to the car.

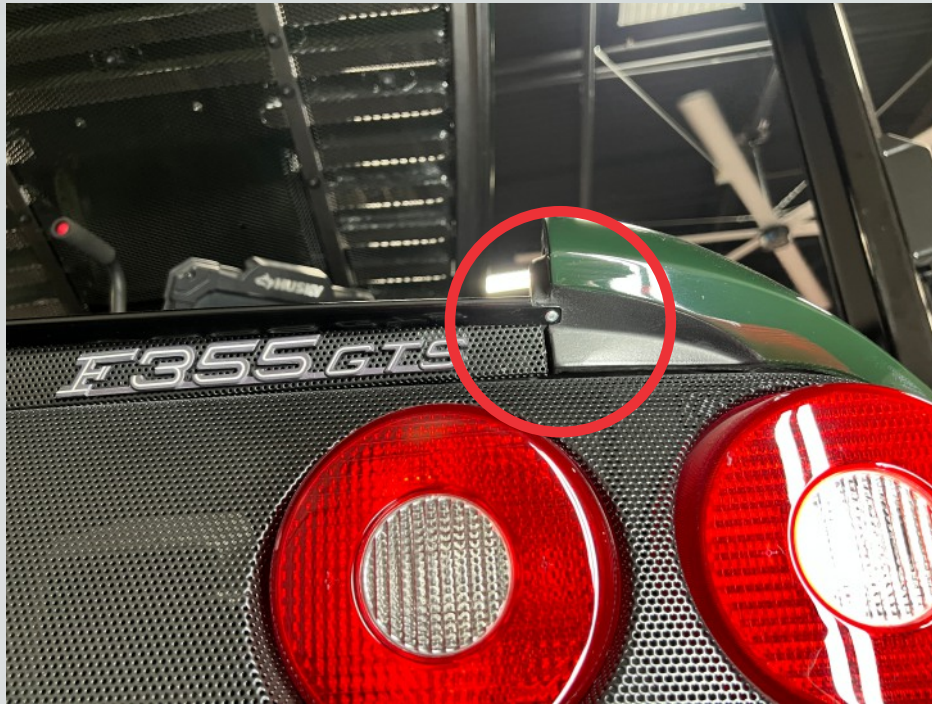


3. Remove these four philips head screws and set aside.

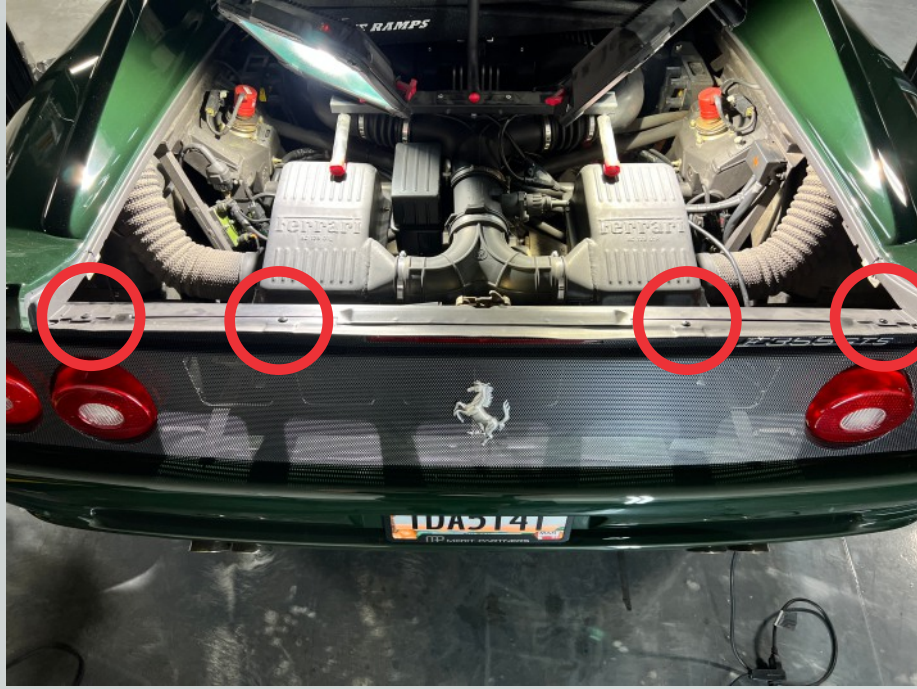


4. Gently pull the top grille strip away from the car (to access the third brake light connector).




5. Press the tab on the third brake light connector and remove it from the lamp assembly.

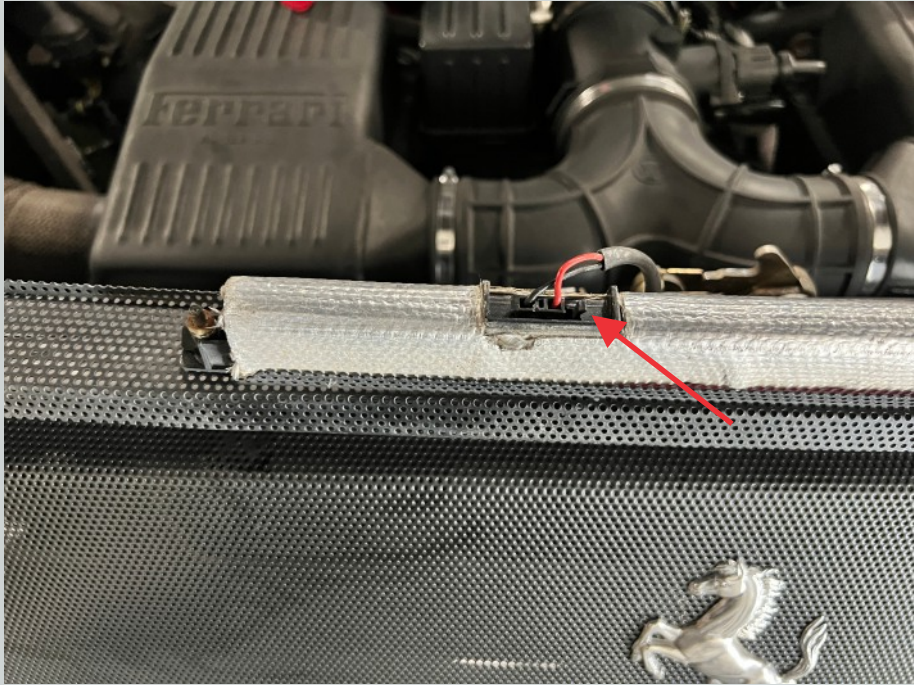


6. Remove these two 8mm bolts and set aside.

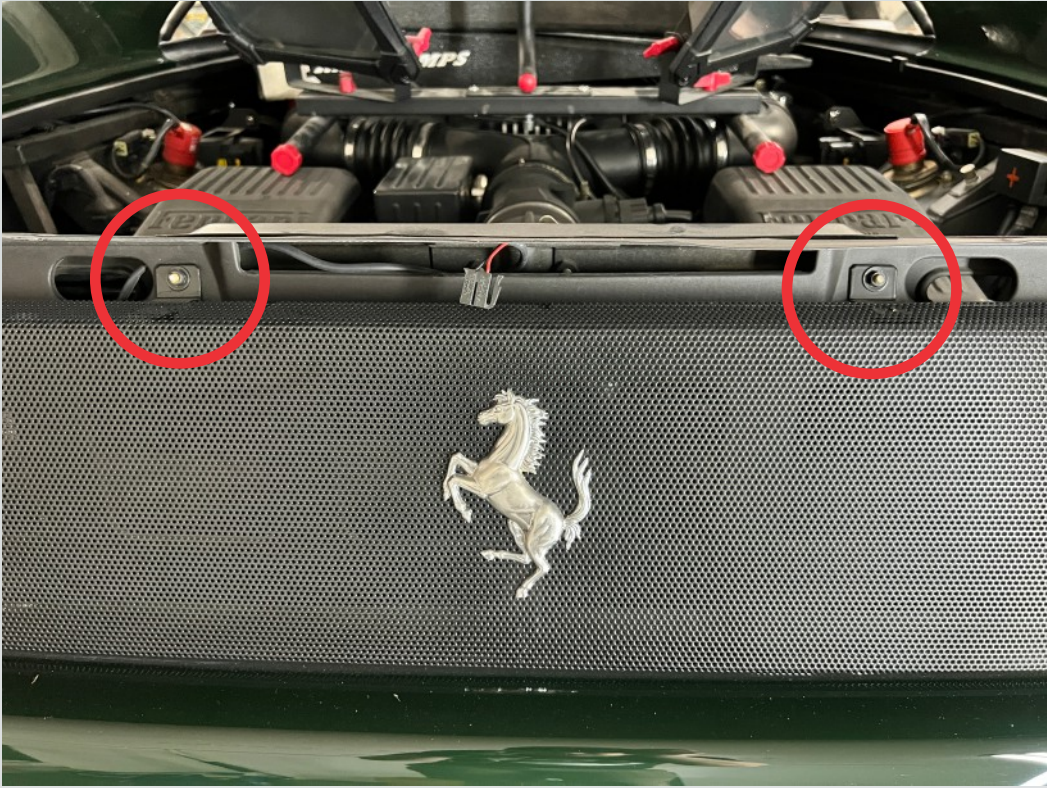

7. From the engine bay, remove these five (5) 8mm nuts and washers and set aside. Then remove the grille.

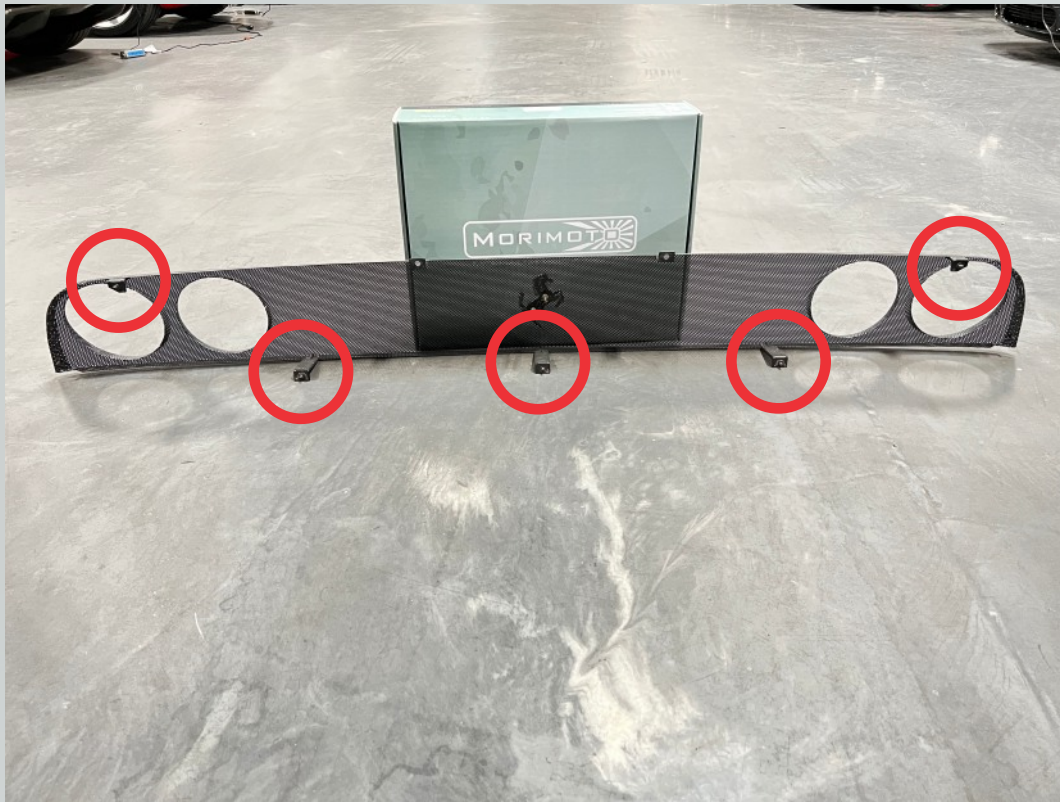

8. Using the painters tape or masking tape and pen, label the four OEM tail lights' locations.

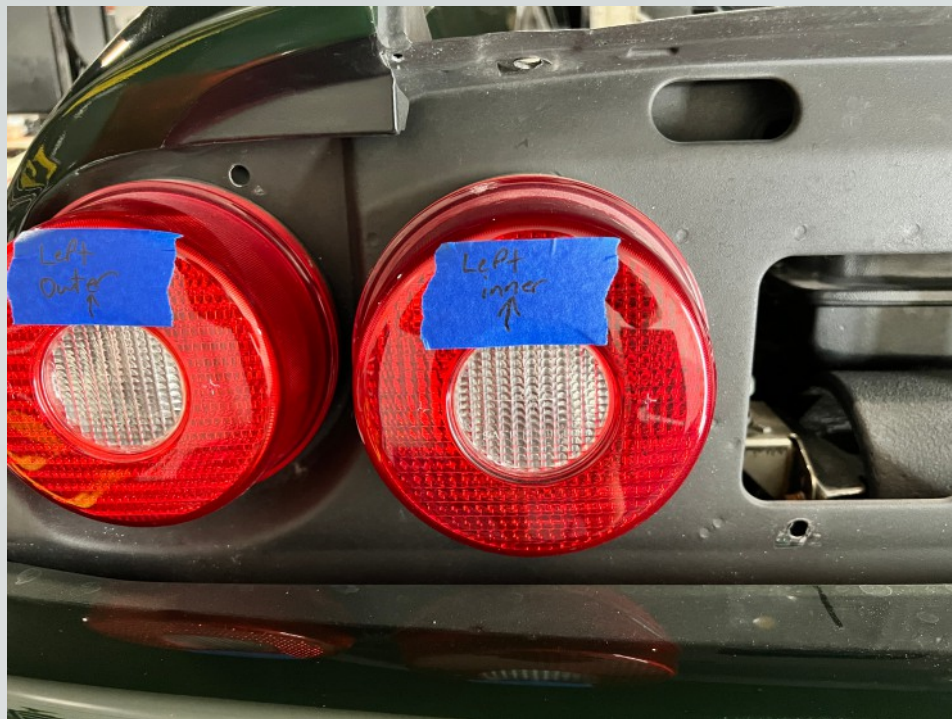

9. Unplug the factory tail lights.



10. Remove the two (2) 10mm nuts on each tail light. These will not be reused for the new tail lights.





11. Fit the provided rubber gasket into the channel on the light. Using the 10mm deep socket or wrench, remove and re-thread the studs on the back of the tail lights to match the factory stud placement. This will vary per tail light. Install tail light on car based on location before moving to the other tail lights.




12. Plug the resistors into the adapters.




13. Plug the adapters into the stock wiring. NOTE: the connectors look the same but are wired differently.

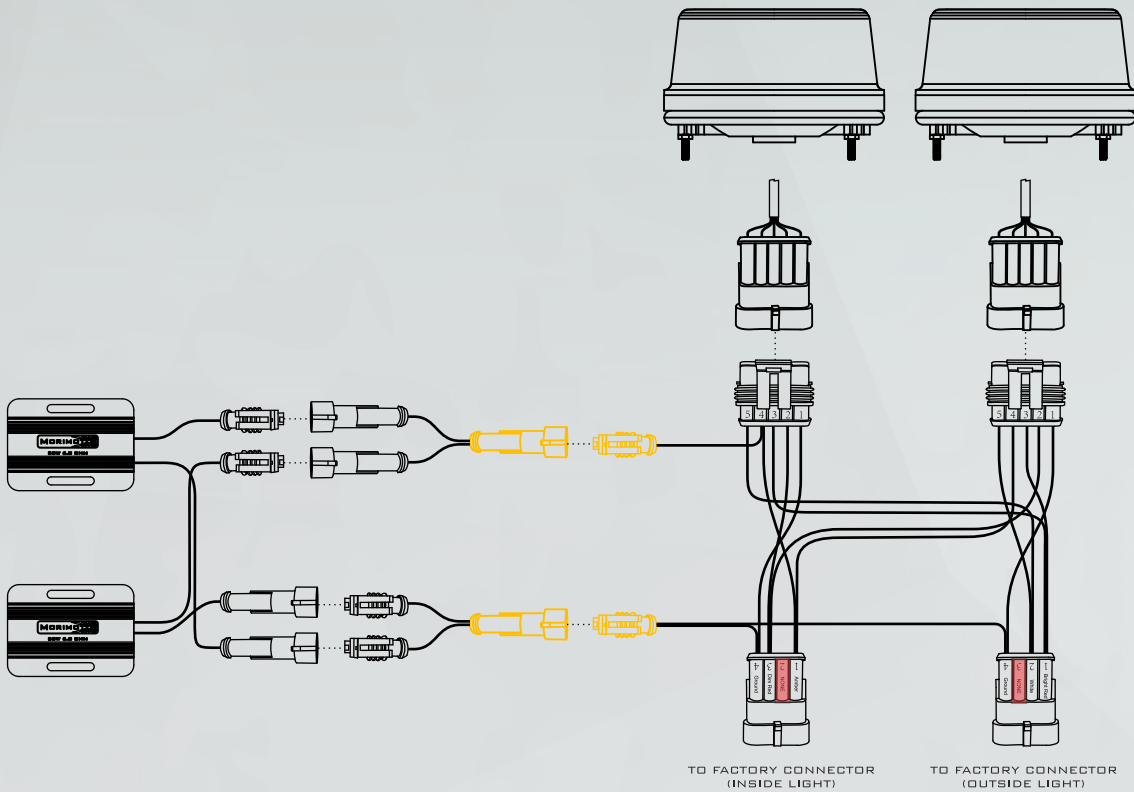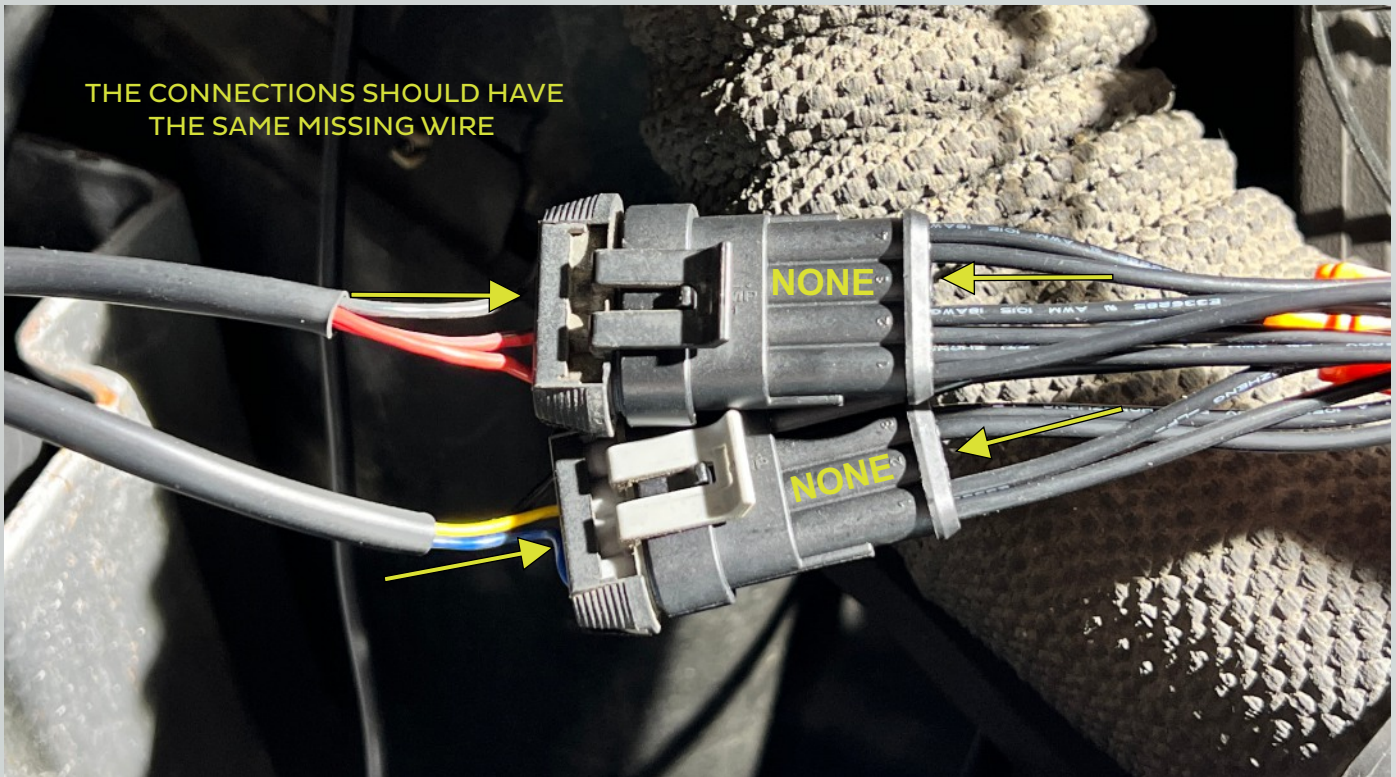

14. Plug the adapters into the new tail lights. Both plugs are the same, so orientation doesn't matter.

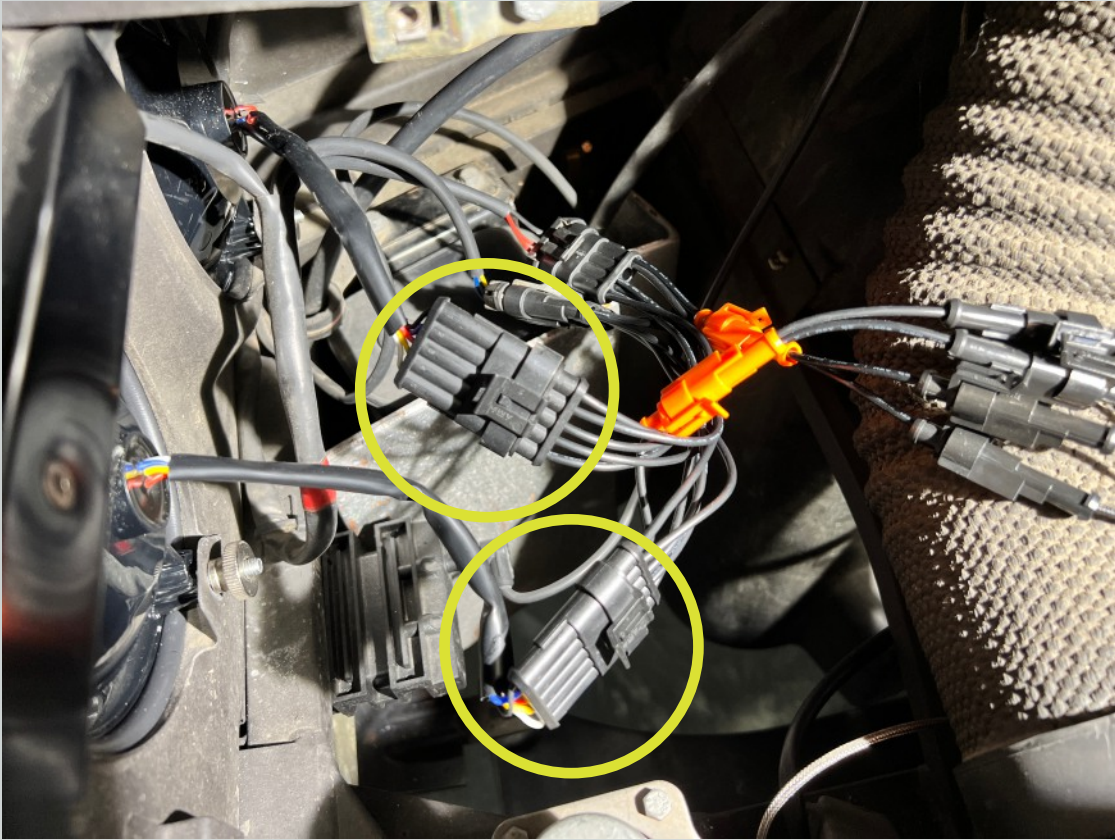

15. Mount the resistors to a metal surface. Secure excess wiring with cable ties.

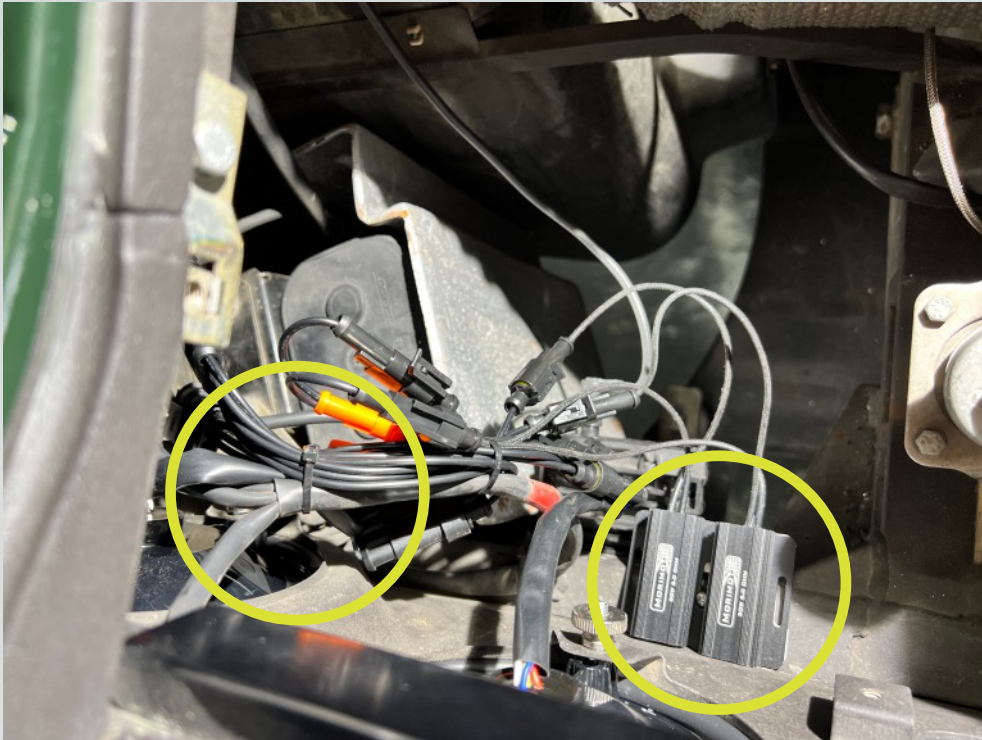

16. Reinstall the grille and trim in the reverse order of removal. Use a compatible rivet or hardware of choice to replace the drilled rivets.

-END-