



THE AUTOMOTIVE LIGHTING BENCHMARK

X3B35 & X3B40 THIRD BRAKE LIGHT INSTALLATION GUIDE

WARNING: By reading this document, you agree it is only to be used as an educational guide. Morimoto Lighting nor its dealers make guarantees on any finished results, nor are they to be held responsible for any damage, misuse, or personal injuries. If you are unable to clearly understand and adapt the information below, professional installation is recommended.

PACKAGE CONTENTS




X3B35 (W/ CAMERA)

OR



X3B40 (W/O CAMERA)

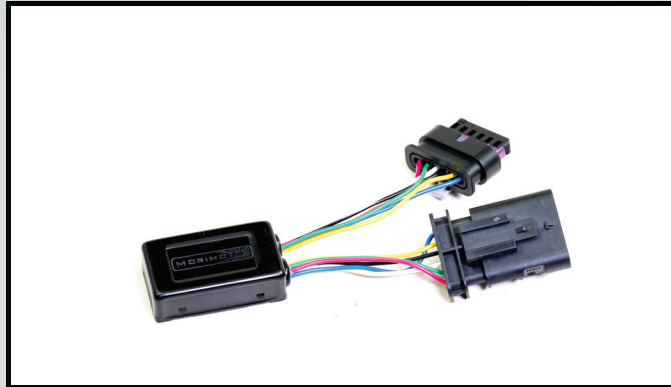

OPTIONAL X3B01 RAPID FLASH MODULE

TOOLS REQUIRED


T20 TORX BIT OR DRIVER

INSTALLATION PROCESS


1. Remove the 4x T20 Torx screws holding the brake light in place. Pull brake light away from vehicle.



2. Locate the plastic clip inside the truck cab and press down to release them.

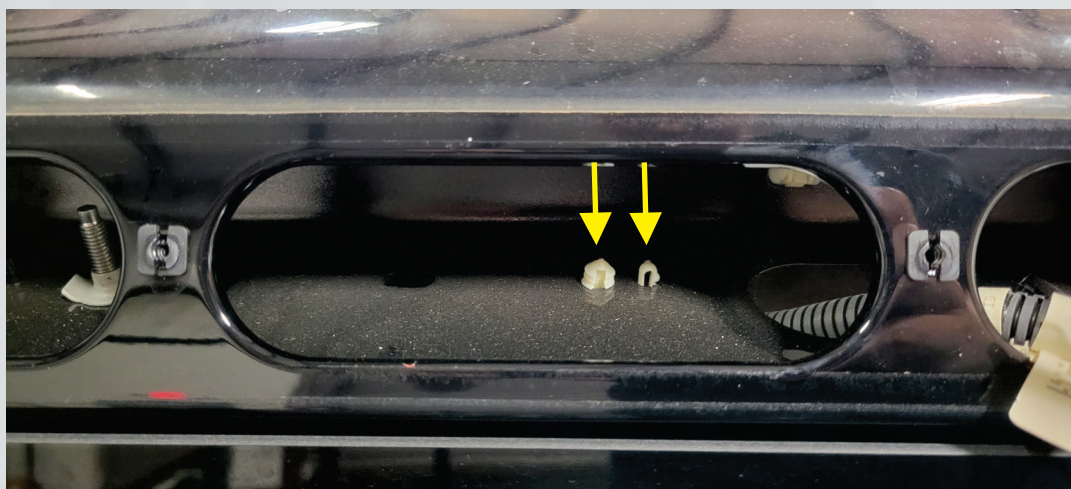


3. Slide the connector wiring over to the right and through the opening in the cab. Disconnect connection and remove the third brake light. Set aside.

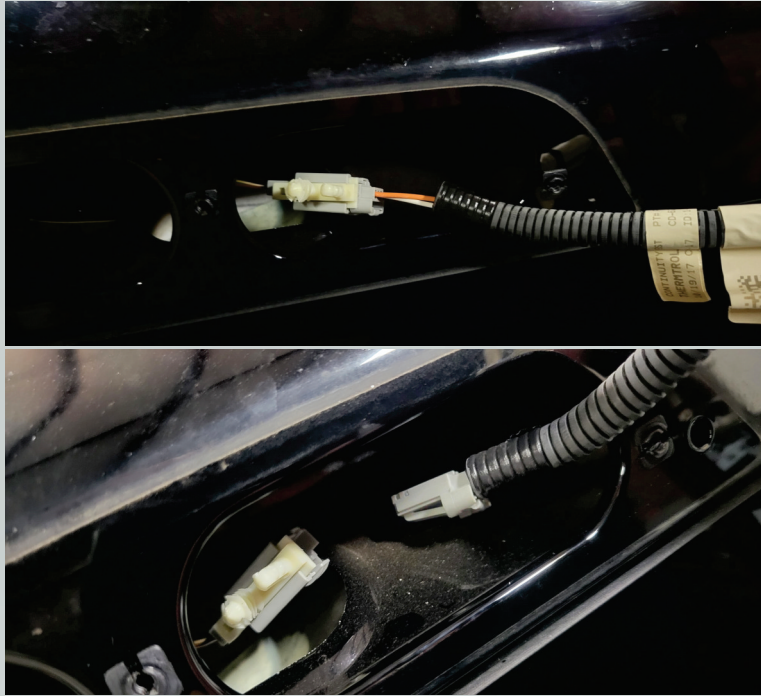

4. Remove the two plastic clips from the cab opening by first squeezing the clip together, then remove. Set aside.



5. Install the center mounting clips onto the X3B light as shown. Make sure that the tangs of the clip are pointing towards the left and right side of the light (not up and down). These clips are one-time use, but an extra set is included with your light and can be replaced if needed. Note: These clips may be already installed.

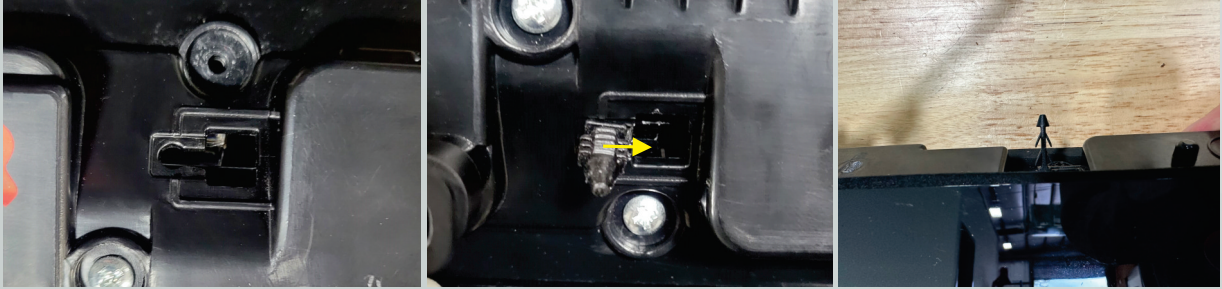


TRUCKS W/O CAMERA: SKIP TO STEP 9


6. (Trucks w/ Camera): Unplug the camera connector from the back of the factory third brake light. Remove 2 (two) screws from the camera bracket and remove the bracket.



7. (Trucks w/ Camera): Remove camera from stock brake light. Install in X3B Brake Light.

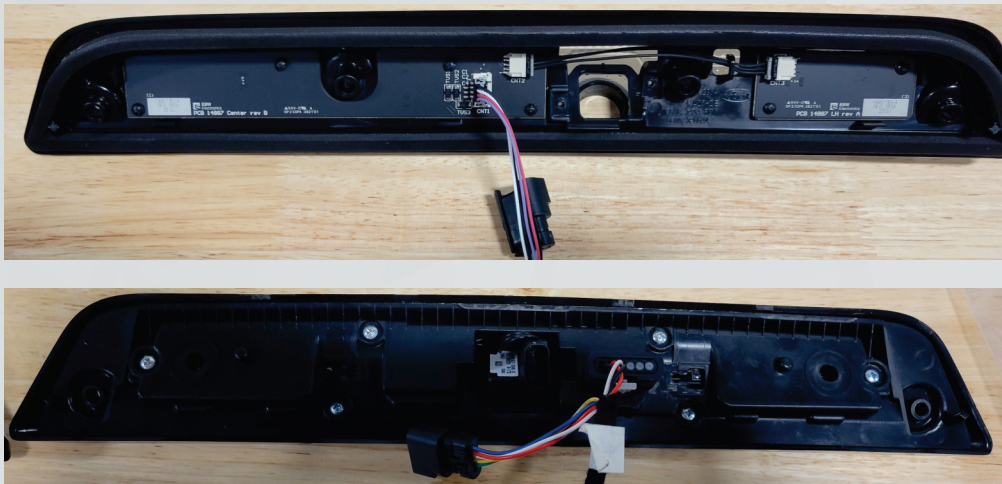

8. Install camera cover, screws, and connector on to new X3B Brake Light.

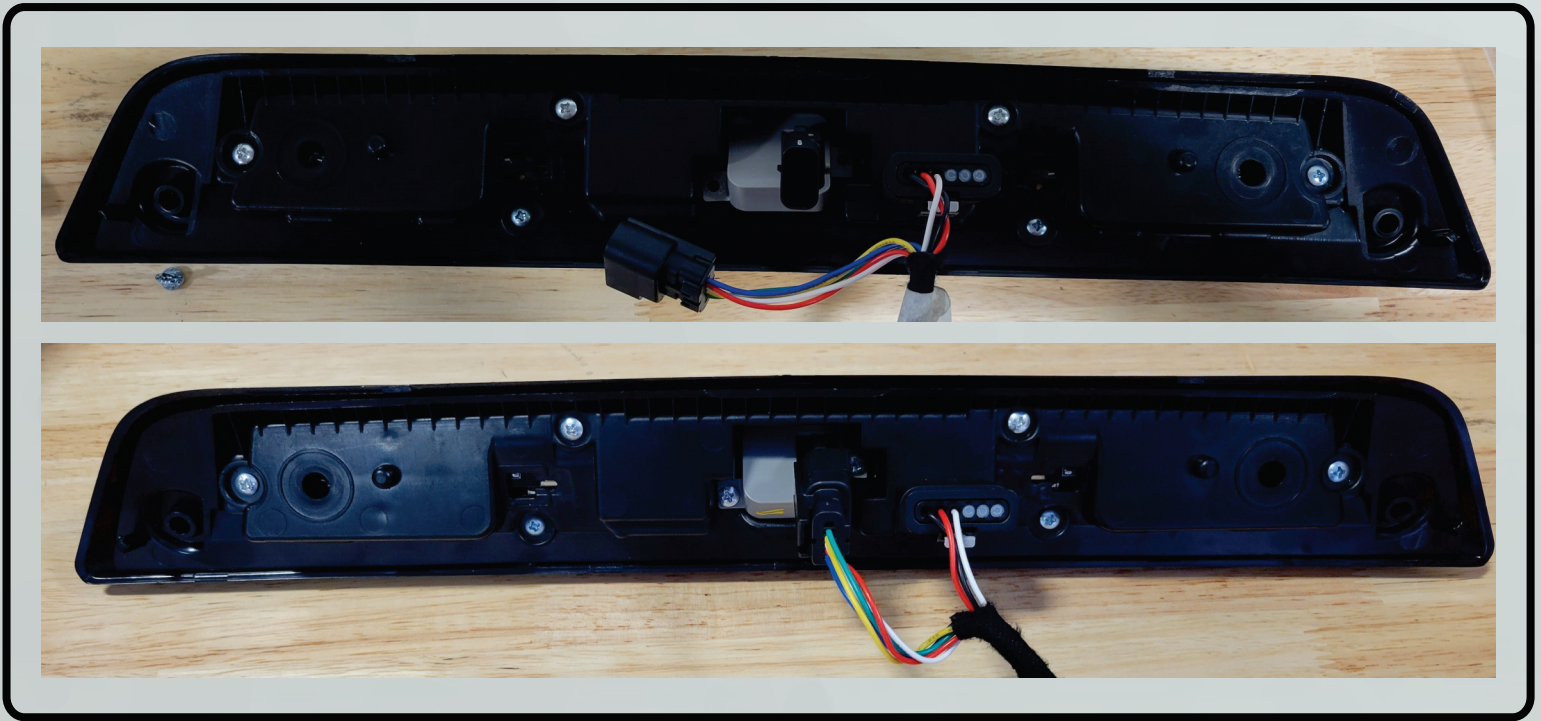

9. For steps on installing the Rapid Flash Module (SKU X3B01), see Page 6.

10. Fully clean and dry the mounting surface on your truck using rubbing / isopropyl alcohol.

11. Ensure all connections are made. Turn on the truck and go through all modes to ensure proper functionality.

Note: You will only use the two outboard screws during installation. The inboard screws have been replaced by push clips.

12. We recommend one final wipe with alcohol. Remove the paper liner from the gasket on the back of the light to expose the adhesive. NOTE: The adhesive gasket is one time use so you will only have one chance to install properly.

13. Align the clips with the square holes and install the light without the screws. Give the light a good push and the clips will engage. You may or may not hear them click into place. Install the two outboard screws (reusing your stock hardware). Do not over-tighten: these screws are threading into plastic.

-END-

RAPID FLASH MODULE INSTALLATION

1. Unclip the wiring harness from the back of the X3B Brake Light (Image 1)
2. Plug the female connector into the X3B Brake Light (Image 2)
3. Plug X3B Brake Light harness into male connector of the flasher module.
4. Peel back wrapper from double-sided tape on the flasher module. Stick and secure module onto either the back of the X3B Brake Light or the inside of the light cavity.
5. Turn on the truck and go through all modes to ensure proper functionality.
6. Enjoy your new X3B Brake Light with Rapid Flash!

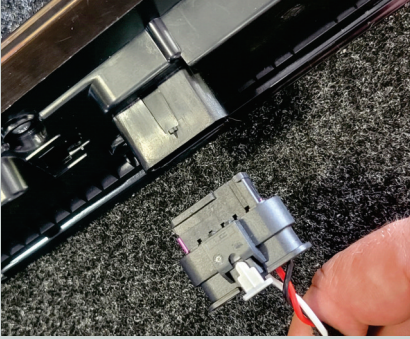


Image 1

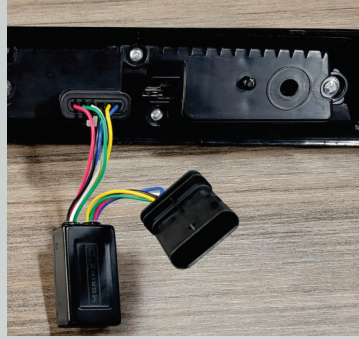


Image 2

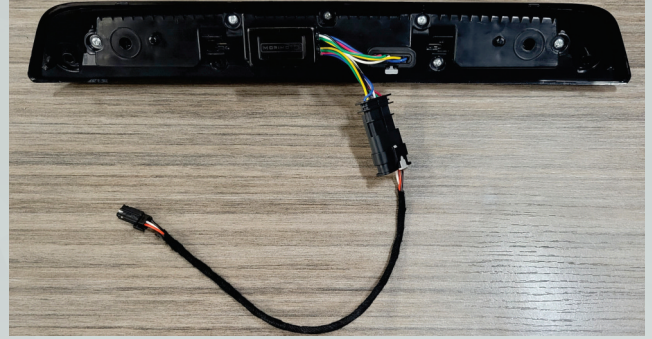


Image 3

-END-