
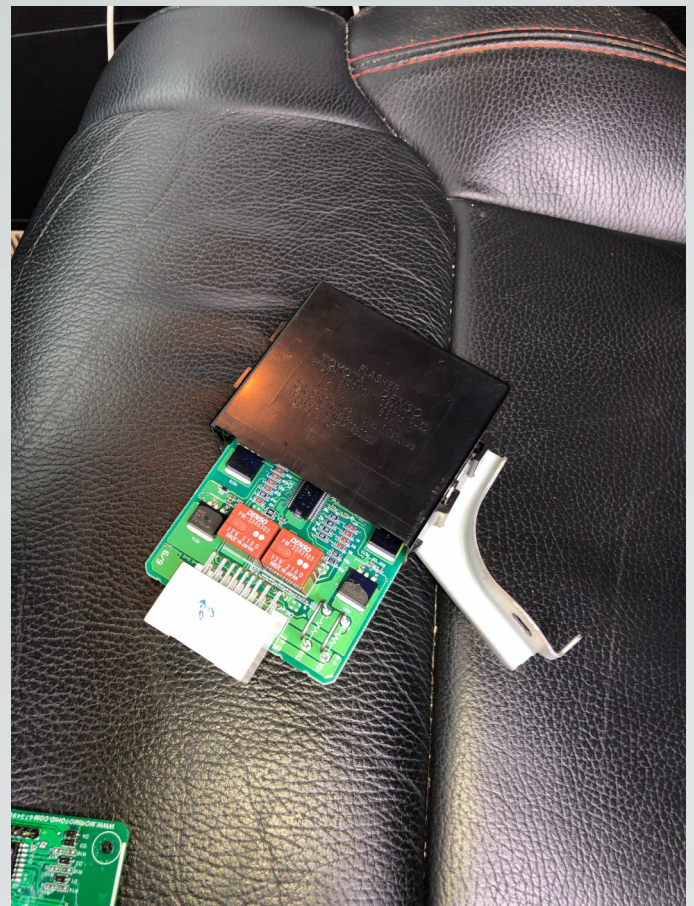


10. If your truck's DRL (Daytime Running Light) is on the turn signal (amber light), we recommend that you replace your factory relay with one that does not have a DRL (Toyota PN 81980-0C020). It is replaced using the below process, and needs only a 10mm socket to do so.

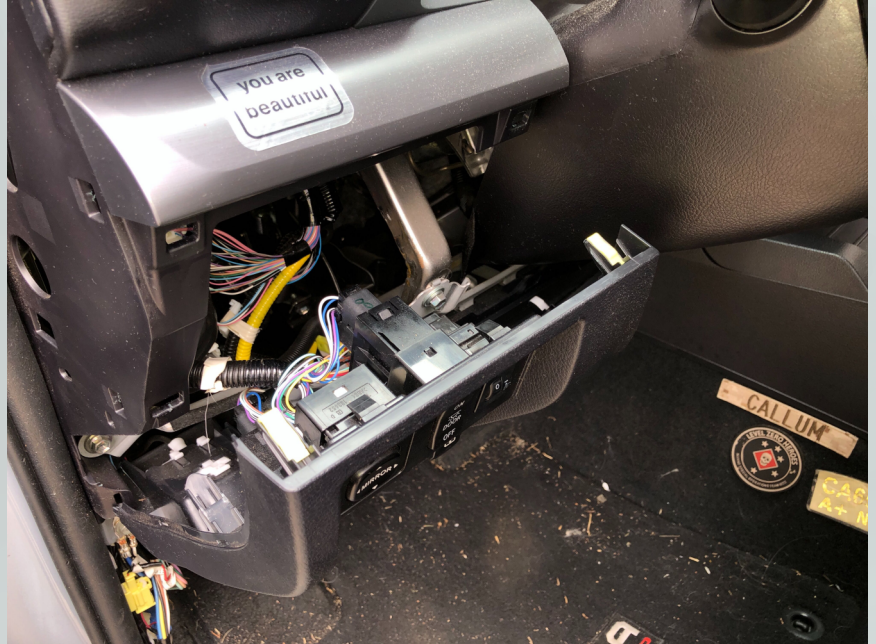

-END-