


Dashed lines for trucks without bedliners, Cut along solid lines

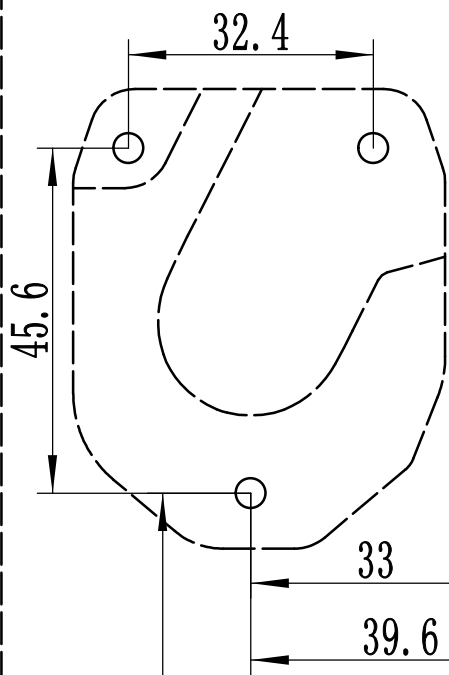

213

TRUCK BED

ARC Drill template for Bed Extender mounting brackets

Facing rear side for right bracket installation

Dashed lines for trucks without bedliners, Cut along solid lines

