



## FORD 2015-23 F150 / 2022 LIGHTNING / 2017-23 SUPERDUTY

**Thank you for choosing Rough Country for all your suspension needs.**

Rough Country recommends a certified technician install this system. In addition to these instructions, professional knowledge of disassemble/reassembly procedures as well as post installation checks must be known. Attempts to install this system without this knowledge and expertise may jeopardize the integrity and/or operating safety of the vehicle.

Please read instructions before beginning installation. Check the kit hardware against the parts list on the last page. Be sure you have all needed parts and know where they go. Also please review tools needed list and make sure you have needed tools.

**Kit Contents:**



- 1- Dr Step
- 1- Pass Step
- 4 - End Cap
- 8 - Tube Protector
- 1- RCF1596CCABAG1
  - 18 - 8mm Lock Nut
  - 18 - Flat Washer

**Tools Needed:**


- Ratchet
- 13mm Socket
- Torque Wrench



1. Locate the driver and passenger side steps.
2. Place the step brackets on the studs in the rocker panel of the truck. **See Photo 1.**
3. Use the supplied 8mm flat washers and lock nuts to attach the step.
4. Tighten the nut using a 13mm socket. Torque to 15ft-lbs. **See Photo 2.**

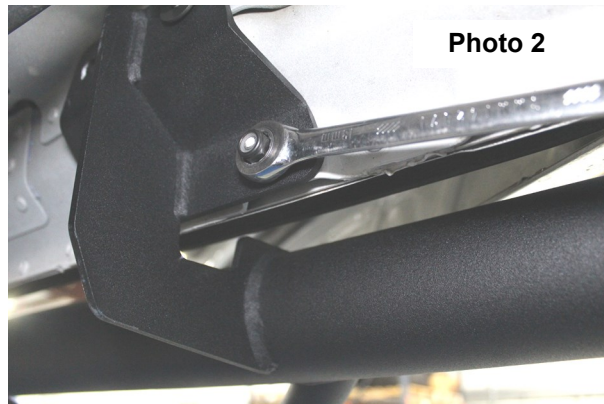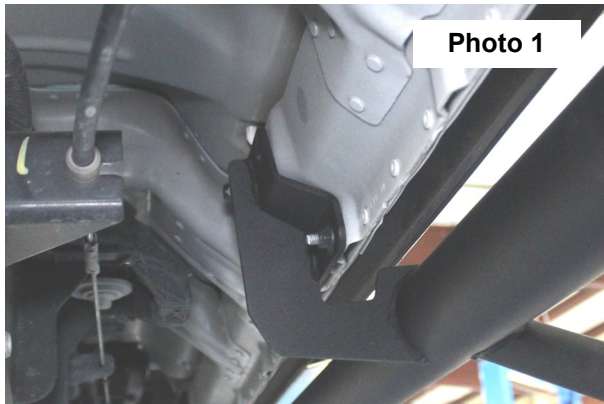

5. Repeat process on the opposite side of the truck.
6. Place endcaps in the tubes. **See Photo 3.**
7. Place two tube protectors on the each of the steps. **See Photo 4.**

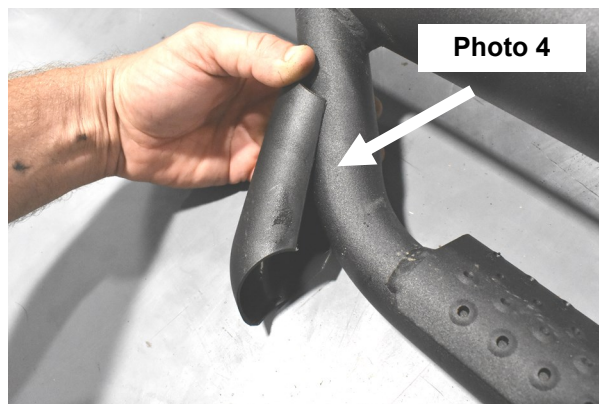

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable , State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

