

# Installation Instructions

Eibach Inc. 264 Mariah Circle Corona, CA 92879  
USA Tech Support 800-507-2338 ext. 114



## E30-82-096-01-20

XK70 TUNDRA

### Notes

The Pro Truck Leveling springs must not be used with the OE shocks. Extended travel shocks are required to avoid damage to the suspension.

### Kit Contents

Description	Part Number	Quantity
Front Spring	F31-82-096-01-FA	2
Bump Stop Spacer	UB0097	2

### Installation Notes

#### Read all instructions before beginning installation

- Only qualified mechanics experienced in the installation and removal of suspension components should perform this installation.
- Use of a hoist and screw jack is highly recommended and will substantially reduce installation time.
- Never work on or under a vehicle unless it is properly supported by safety stands and wheels are blocked.
- Never use impact wrenches or impact guns to install or remove shock absorber piston components, shafts and Piston rod nuts.
- All Eibach springs should be installed with the Eibach logo right-side-up. All original stock spring isolators and dampers should be retained from the stock springs when installing Eibach springs.
- After Installation, inspect and adjust the following: Wheel Alignment; tire/wheel fender clearance when using aftermarket wheels or tires; brake line clearance and attachments; anti-lock-brake system sensors.
- Tire Rotation: In order to increase the life of your tires, it is recommended to rotate your tires every 3,000 miles.
- For MacPherson Strut type front suspension, it is important to mark the orientation of the upper perch with respect to the lower perch before disassembly. This orientation must remain the same with the installation of the springs. Noise may result if this procedure is not performed correctly.

Eibach Kits	Part Number	Description	Front	Rear
PRO-TRUCK SPORT SHOCK Front	E60-82-096-01-10	Ride Height Adjustable	+0-2.6"	
PRO-TRUCK SPORT SHOCK Rear	E60-82-096-01-01	Extended Length Rear Shock		+0-1.5"

# Installation Instructions


Eibach Inc. 264 Mariah Circle Corona, CA 92879  
 USA Tech Support 800-507-2338 ext. 114



Additional Eibach  
 Components for  
 your Vehicle

Eibach Kits	Part Number	Description	Front	Rear
-------------	-------------	-------------	-------	------

## Spring Seat Fitting Instructions for Eibach Pro Truck Sport Shocks

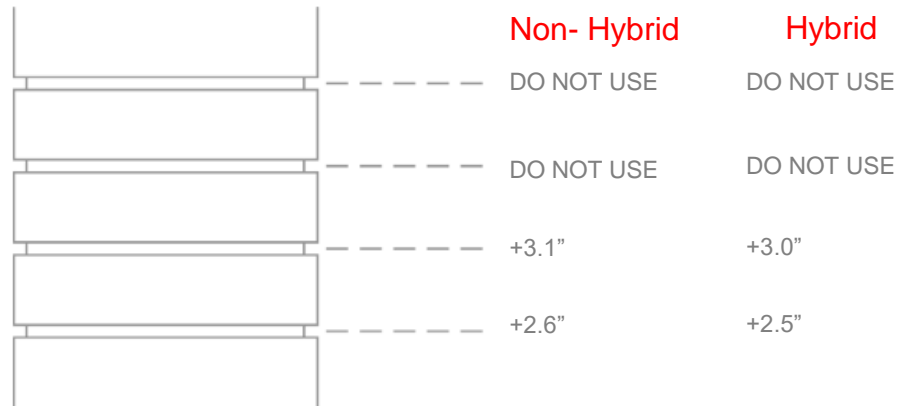

### Spring Seat Notes


- Do not use the top 2 clip grooves, with Eibach PRO-LIFT spring as suspension damage will occur.
- Average lift measurements shown are for Pro Truck Sport Dampers when used in conjunction with Eibach Pro Lift Springs. The lift amounts are based on a stock vehicle with no added aftermarket accessories or additional weight.
- **Important:** Ensure that the snap ring is fully seated in the snap ring groove (you should be able to rotate the snap ring manually/by hand). **Note: Improper installation will cause permanent damage to the shock. Please refer to the Pro Truck Sport Damper instructions for more info regarding proper installation and fitment.**

# Installation Instructions

Eibach Inc. 264 Mariah Circle Corona, CA 92879  
USA Tech Support 800-507-2338 ext. 114



## Bump Stop Spacer Installation

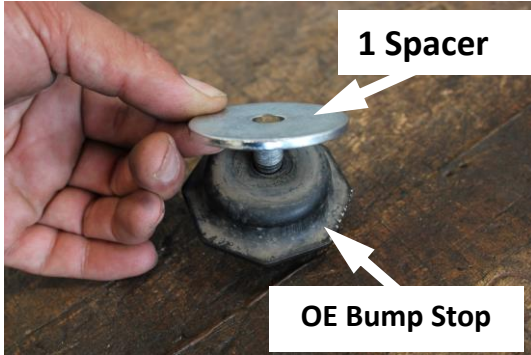

**Note: The provided bump stop spacer must be installed as shown in order to insure proper travel and to avoid possible damage to shock if not properly installed.**

