


# 81-2005 Silicone Body Mount Kit

## GMC/Chevy/Cadillac 2006-2014 Tahoe, Suburban, Avalanche, Yukon, Escalade

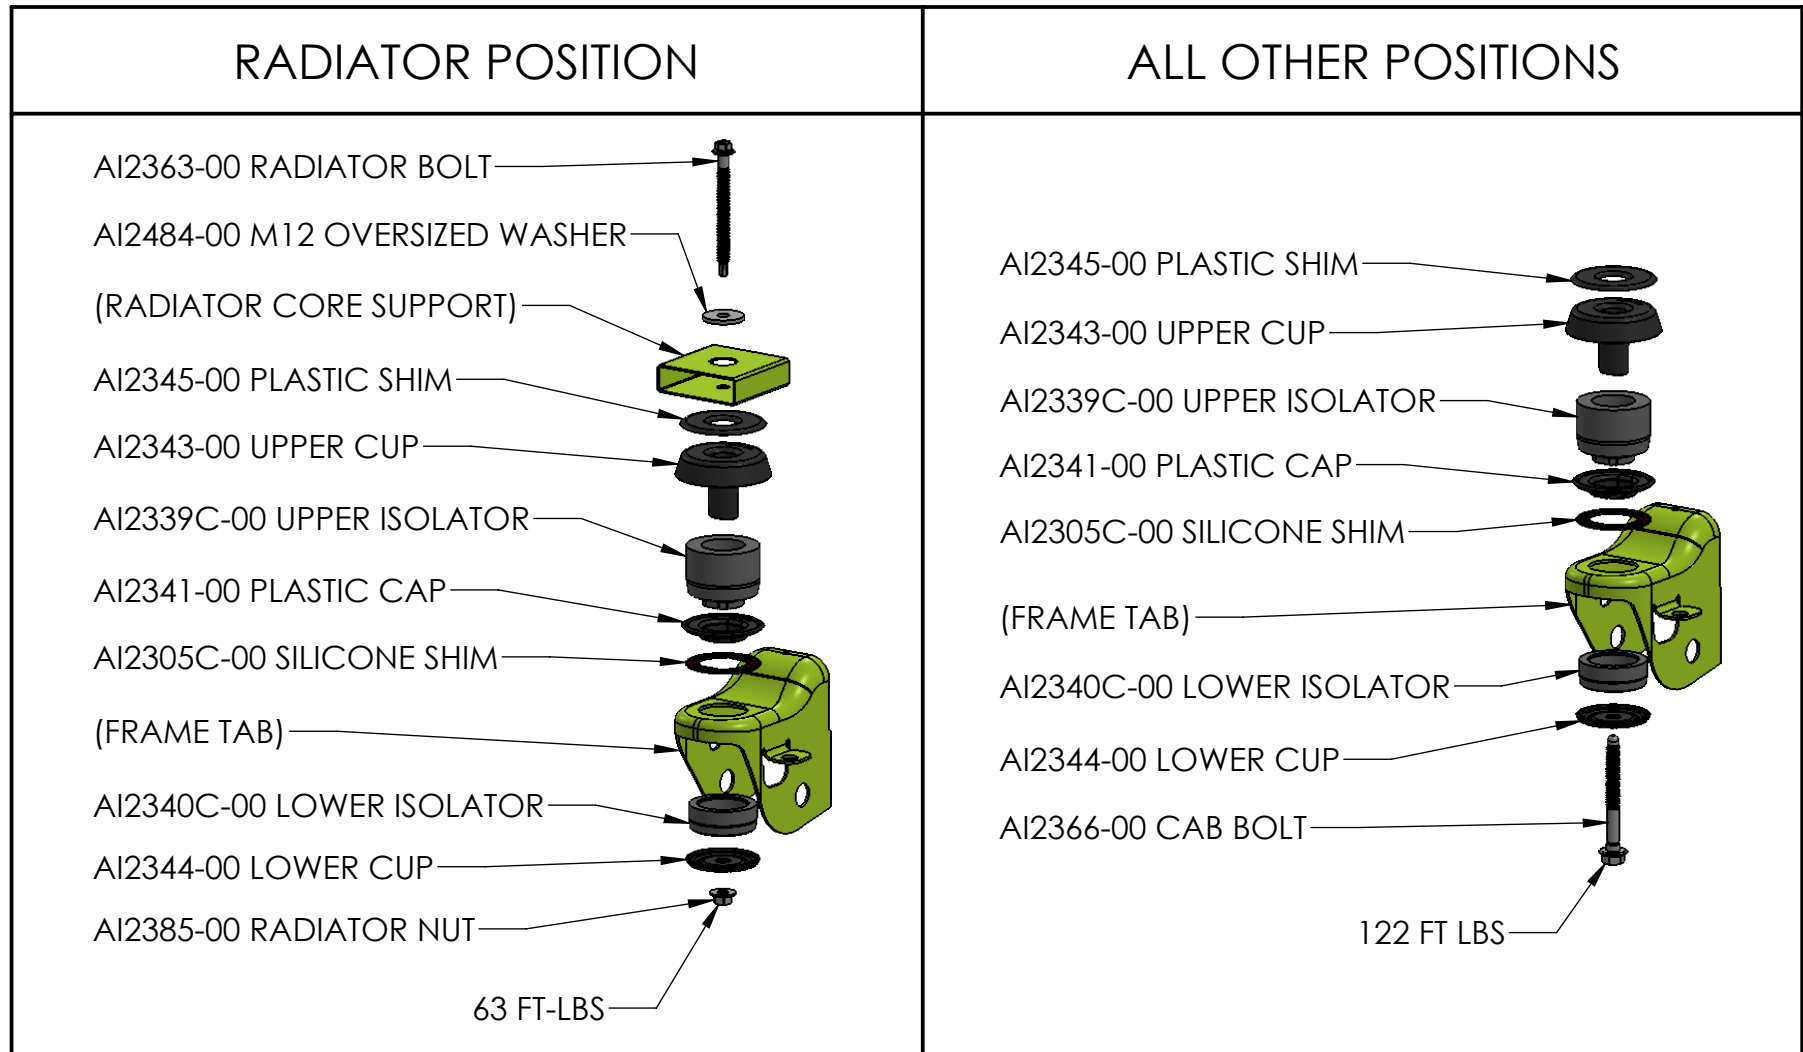

INSTALL COMPONENTS IN THE CORRECT LOCATION ACCORDING TO THIS DIAGRAM. COMPONENTS INSTALLED INCORRECTLY WILL CAUSE CLUNKING NOISE AND MAY RESULT IN DAMAGE TO THE VEHICLE. USE HAND TOOLS ONLY TO REMOVE OR INSTALL BOLTS! USING AN IMPACT WRENCH MAY RESULT IN DAMAGE TO THE BOLTS OR NUT ASSEMBLIES.

Warning: Qualified professional installation of this product in accordance with GM service procedures using proper equipment is required. S&B shall not be liable for any loss, damage, including any incidental or consequential damages, fire, explosion, injury, or death as a result of self-installation of this product. The S&B Warranty will be voided if this product is not installed by a qualified professional or if an impact wrench is used. Visit [sbfilters.com](http://sbfilters.com) for warranty and other information.