



CS-DATB-03

We Recommend installation be performed by a trained professional. Please review the product instructions prior to attempting installation to ensure installer is equipped with all tools and capabilities necessary to complete the product installation. We recommend thoroughly reading the instructions at least twice prior to attempting Installation.

Before beginning disassembly of the vehicle, check the “What’s Included” section of the instructions to ensure you’ve received all parts necessary to complete installation. Further, verify that the parts received are PROPER TO YOUR application (year range, motor, etc.) to avoid potential down-time in correcting potential discrepancies. Any discrepancies will be handled by Carli Suspension and the correcting products will be shipped UPS Ground.

LIFETIME PRODUCT WARRANTY

Carli Suspension provides a limited lifetime product warranty against defects in workmanship and materials from date of purchase to the original purchaser for all products produced by Carli Suspension. Parts not manufactured by, but made to Carli Suspension’s specifications by third party manufacturers will carry a warranty through their respective manufacturer. (i.e. King Shocks, Bilstein Shocks, Fox Shocks). Deaver Leaf Spring’s warranty will be processed by Carli Suspension.

Proof of purchase (from the original purchaser only) will be required to process any warranty claims. Carli Suspension products must be purchased for the listed Retail Price reflected by the price listed on the Carli Suspension Website at the time of purchase. Carli Suspension reserves the right to refuse warranty claims made by any customer refusing or unable to present proof of purchase, or presenting proof of purchase reflecting a price lower than Carli Suspension’s Retail Price at the time the item was purchased.

Carli Suspension’s Limited Lifetime Warranty excludes the following parts which are subject to wear: Track Bar Bushings, Track Bar Heim Joints, Limit Straps, Control Arm Bushings, Radius Arm Bushings, Shock Bushings, Sway Bar End Link Heim Joints, Shock Seals, Shock Bearings, and Corrosion on Shock Shafts or Bodies. These items will be warranted for a period of 60 days from the date of purchase only if determined to be installed properly signifying manufacturing defect. Carli Suspension cannot warrant a product’s cosmetic finish due to the varying extreme elements that may be encountered.

Any alterations, modifications, or improper installation, of the product will void this warranty. Products should be inspected for defect upon receipt and approved before installation. Any defect in NEW product will be warranted if returned before installation in its original packaging. Carli Suspension’s obligation under this warranty is limited to the repair or replacement of the defective product only. All costs of removal, installation or reinstallation, freight charges, incidental or consequential damage are expressly excluded from this warranty.

Carli Suspension is not responsible for damages and/or warranty of other vehicle parts related or non-related to the installed Carli Suspension product. This warranty shall not apply to any product that has been subjected to accident, negligence, alteration, abuse or misuse as determined by Carli Suspension. Carli Suspension reserves the right to refuse warranty claims if produced parts are combined and/or substituted with other aftermarket suspension products. Combination and/or substitution of other aftermarket suspension components may cause premature wear and/or product failure. Carli Suspension reserves the right to change/alter product without obligation to update any previously purchased products.

NOTE:

This Track Bar is adjustable from 38-7/8” to 39-1/4”. There must be a minimum of 1” of thread engagement, anti-seize on the threads in the bar and Red-loctite on the jam nut. No warranty will be provided for pulled-threads.



What's Included

- Track Bar
- CUB Joint (Pre-installed at Frame End)
 - (Qty 1) 16MM Silver Spacer - Small
 - (Qty 1) 16MM OD Green Spacer – Large + Rubber Washer (Wobble Stopper)
 - (Qty. 1) 16MM-14MM Reducer Sleeve
- Jammit Jam Nut
- 7/8"x7/8" RHT FK Bearing Heim Joint
 - (Qty 2) 16MM Gold Spacers
 - (Qty. 1) 16MM-14MM Reducer Sleeve

Disassembly:


1. With the truck on the ground, remove O.E.M track bar from the vehicle. The truck can be under its own weight or on a lift; this step is at the discretion of the installer. If you're disassembling with the truck on the ground, steering the truck all the way to the right will help gain access to the lower track bar bolt without removing the steering. This will require an 18mm socket or 21mm socket depending on the year of the vehicle.

Installation:

2. Remove the heim joint from the Carli track bar.
3. Apply a light coat of anti-seize to the inside threads of the track bar.



4. Thread the provided jam nut all the way to the end of the shank on the heim-joint so it's tight against the housing. Thread the heim joint 1-2 threads into the track bar. Apply RED LOCTITE to **ALL** the exposed threads of the track bar. These are the threads on which the Tapered-Jam Nut will sit.

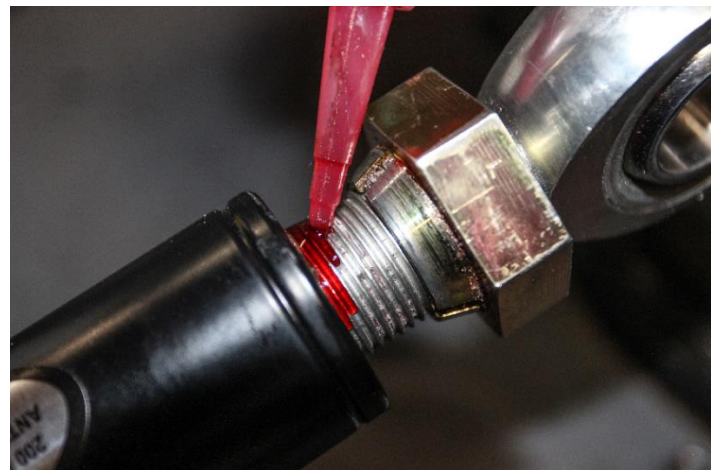

5. Insert the **SILVER (short) Misalignment Spacer in the front** and **OD GREEN (long) in the rear** (side with the exposed snap ring) of the Uniball on the frame side of the Track bar. Looking from top, down, the spacers will protrude the same amount from the outside of the cup with this configuration; if the green sticks out way past the housing and the silver is flush with it, your orientation is likely reversed.

6. Secure the frame end of the track bar (with mis-alignment spacers installed) in a bench vice and use a block of wood to elevate the heim joint (axle) end. If you're not worried about scratching the housing, you can secure the housing itself into the vise to prevent the bar from rolling before you torque it.



7. Setting the Br Length: All measurements are from the center of the Heim to the center of the Uniball
Stock Height or any lift that utilizes a track bar drop bracket meant for the factory track bar: **38.875"**
Carli 6" Lift with Carli Track Bar Drop: **39"**
2.5-3" Lift: **39.125"**
NOTE: MAX ADJUSTED LENGTH: 39-1/4" for proper thread engagement. 1" MINIMUM Thread Engagement.



8. **AGAIN, APPLY RED-LOCTITE TO THE THREADS** where the jam nut will assemble to the end of the track bar if you've not already.

9. **THIS STEP IS VERY IMPORTANT:** Torque the Gold, Tapered Jam Nut to 200 ft.lbs. (preferably using a 1-3/8" crow's foot or huge crescent wrench) ensuring the alignment of the rod-ends is parallel to one another. It may take a few tries to get the two ends parallel as the rod end often turns when nearing 200ft.lbs or, you can use a large wrench to orient the rod end after torquing. The Jam-Nut is what holds the axle end together and it's **IMPERATIVE** for it to be extremely tight and have red-loctite on it. The actual yield of the Rod end is in excess of 500lb/ft. A large (24"-36") pipe wrench/crescent wrench will tighten beyond 200lb.ft. is preferred. **There will be NO WARRANTY for pulled threads.**



10. Confirm ends remained parallel during torquing.

NOTE: Note the position of the jam nut. The flat part of the “hex” on the jam nut is indexed so it is parallel to the rod-end’s orientation. This will ensure that the jam nut does not rub the factory track bar pocket. If the “point” of the jam nut faces the rear of the track bar, the jam nut will rub the bracket and could loosen.



11. Assemble (qty. 2) - GOLD mis-alignment spacers to the heim joint.



12. Remove the track bar from the vice

13. If your truck is equipped with 14mm hardware at the **AXLE** (18mm Bolt-Head), inset the supplied reducer sleeve into the misalignment spacers. If your truck is equipped with 16mm hardware (21mm Bolt-Head), install without the supplied reducer sleeve. (Shown with silver spacer/jam nut for reference only, yours will be gold)



14. Slide the assembled heim joint with misalignment spacers (and reducer where applicable) into the axle pocket and assemble with the factory hardware to be torqued later.

NOTE: The bend at the frame side of the track bar should protrude forward.

15. Again, If your truck is equipped with 14mm hardware at the **FRAME** (18mm Bolt-Head), inset the supplied reducer sleeve into the misalignment spacers. If your truck is equipped with 16mm hardware (21mm Bolt-Head), install without the supplied reducer sleeve.

16. Slide the Uniball assembly into the frame side bracket (Short-Silver Spacer in front, Long-OD Green Spacer in the rear with wobble stopper installed over the rear spacer – highlighted in red on the picture to the right - AND reducer sleeve where applicable) and install factory bolt and nut to secure the frame end.

NOTE: If the bar won't align with the upper bracket, key the truck on and have someone move the steering wheel until you're able to insert the bolt. You will need to extend the drag link to recenter the steering wheel after lifting the vehicle during your alignment anyway.

17. Torque the upper assembly to:

- 185ft.lbs if utilizing the factory, 14MM hardware and reducer sleeve
- 225ft.lbs if utilizing the factory 16MM hardware

18. Torque the lower assembly to:

- 185ft.lbs if utilizing the factory, 14MM hardware and reducer sleeve
- 225ft.lbs if utilizing the factory 16MM hardware

19. Have truck aligned, or straighten wheels and adjust the steering drag link (longer) to straighten the steering wheel.

20. Periodically, check the assembly to ensure it remains torqued!



NOTE

If there's an issue with torque retention on the 14mm factory hardware, purchase a 16mm or 5/8" drill bit and bore the factory holes. Order the following PN from your local Ram dealer or online:

- Track Bar Bolt - 16mm 6508942AA
- Track Bar Nut - 16mm 6509070AA

With the above part numbers (will work on both frame and axle side) the reducer sleeves can be removed and assemblies torqued to 225lb/ft.