



Installation Guide for 2016-21 Honda Civic | 2017-21 Civic Type-R FK8 Headlights

ALPHAREX specializes in designing and producing superior and uniquely stylish aftermarket automotive performance lighting with unrivalled innovative technology. This installation guide takes you through the step-by-step process of installing your new **ALPHAREX HEADLIGHTS** for your 2016-21 Honda Civic | 2017-21 Civic Type-R FK8

DO NOT USE DIELECTRIC GREASE!



Table of Contents



PART I REMOVE HEADLIGHTS

- **INSTALLATION TOOLS**
- **STEP 1.** Disconnecting the negative battery terminal
- **STEP 2.** Remove the front bumper
- **STEP 3.** Remove the headlight bolts
- **STEP 4.** Remove the headlights

PART II INSTALL HEADLIGHTS


- **STEP 1.** Transfer the bracket
- **STEP 2.** Tap the fuse and route the DRL harness
- **STEP 3.** Install the headlights
- **STEP 4.** Test the headlight functions
- **STEP 5.** Adjust headlight level
- **STEP 6.** Complete installation

Disclaimer: This installation article is a tutorial guide. By reading this article, you agree it is for reference only and AlphaRex USA and its distributors make no guarantee on the finished results. Under no circumstances whatsoever shall AlphaRex USA nor its distributors be liable for any damage, misuse or personal injuries. If you do not fully understand the installation procedure, it is highly recommended that you seek help from professional mechanics to do the installation.


PART I REMOVE HEADLIGHTS

INSTALLATION TOOLS


PREPARE THESE TOOLS FOR INSTALLATION

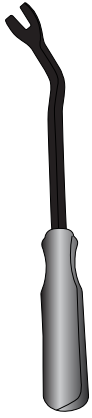

Metal Panel Popper



Flat Screwdriver

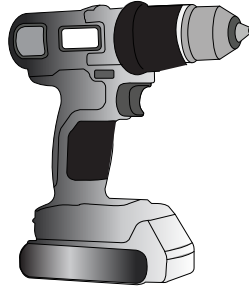

Power Tool



Wrench



1/4 Ratchet



1/4 Extension

10mm



Hex 5



NOTE: Whenever using a power tool, please make sure do not overtighten the bolts.




STEP 1. DISCONNECTING THE NEGATIVE BATTERY TERMINAL

Whenever working on your vehicle, always start by disconnecting the negative battery terminal.




STEP 2. REMOVE THE FRONT BUMPER

Start by extracting the push-in pins from the radiator shroud, then carefully remove and set it aside for future reinstallation.

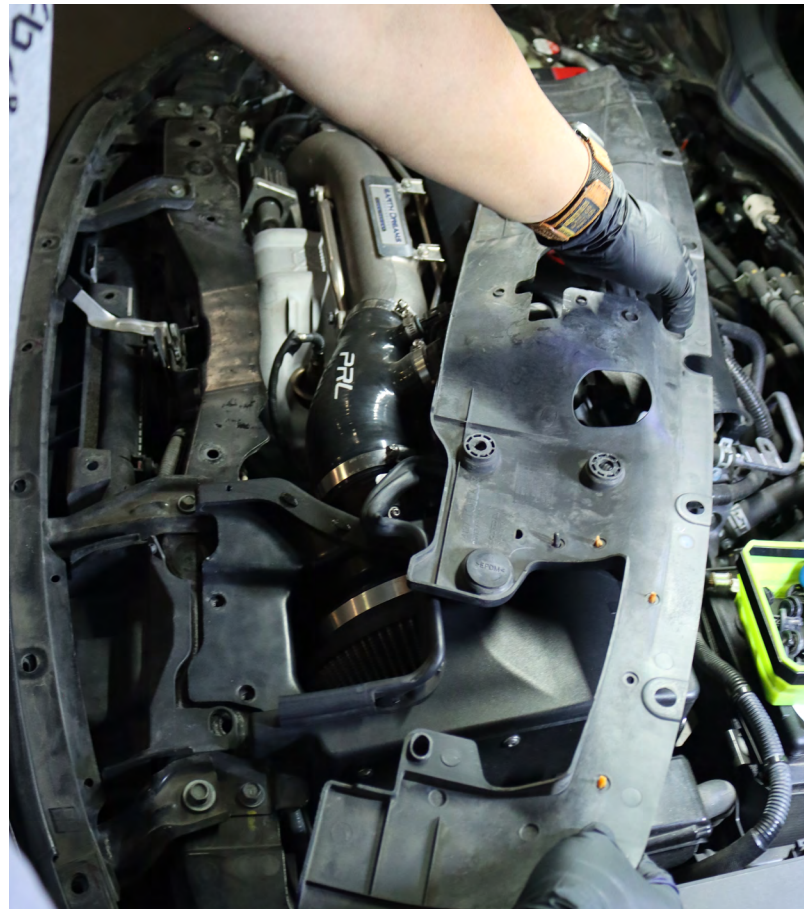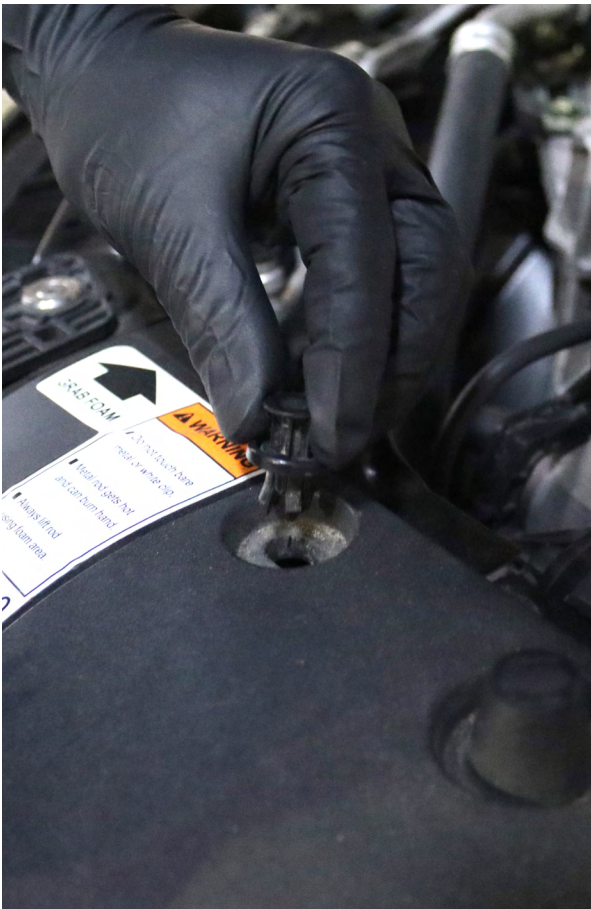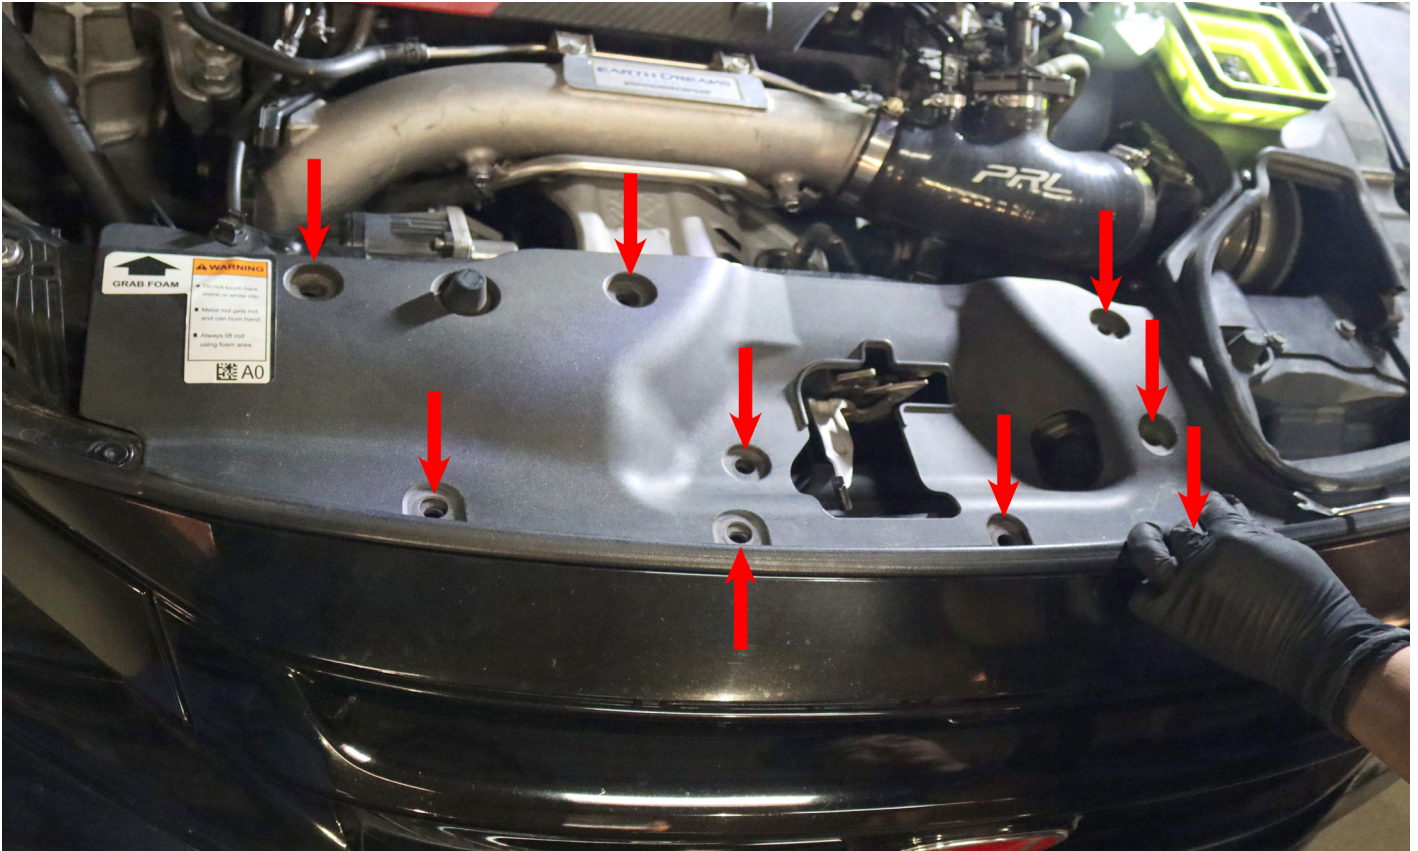

Remove the push-in pins securing the upper bumper retainer and proceed to remove it.

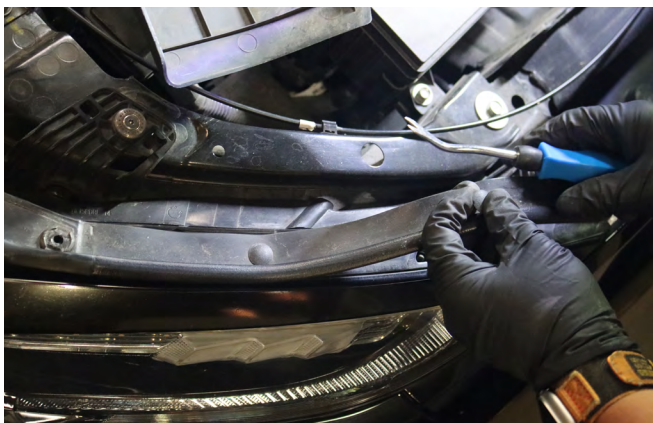



Remove the 2 screws from both sides of the wheel fender.





Gently detach the front bumper by pulling outward from the side, disengaging it from the mounting clips.



Next, use a flat screwdriver to disengage the insert clips that secure the upper bumper trim. Repeat these steps on the opposite side to completely free the upper portion of the bumper.

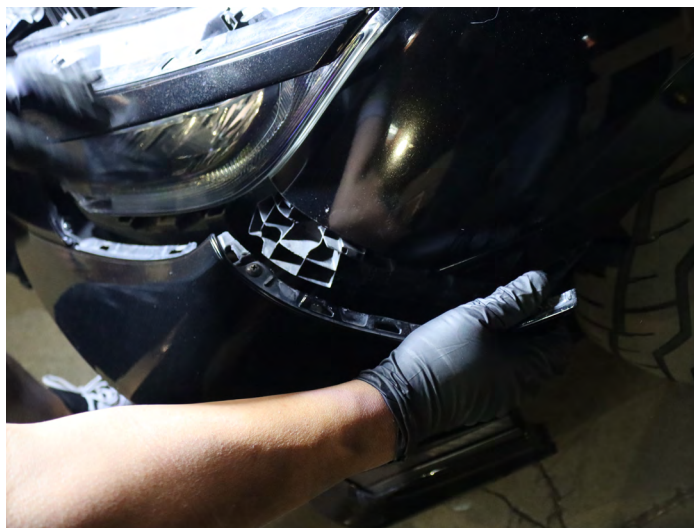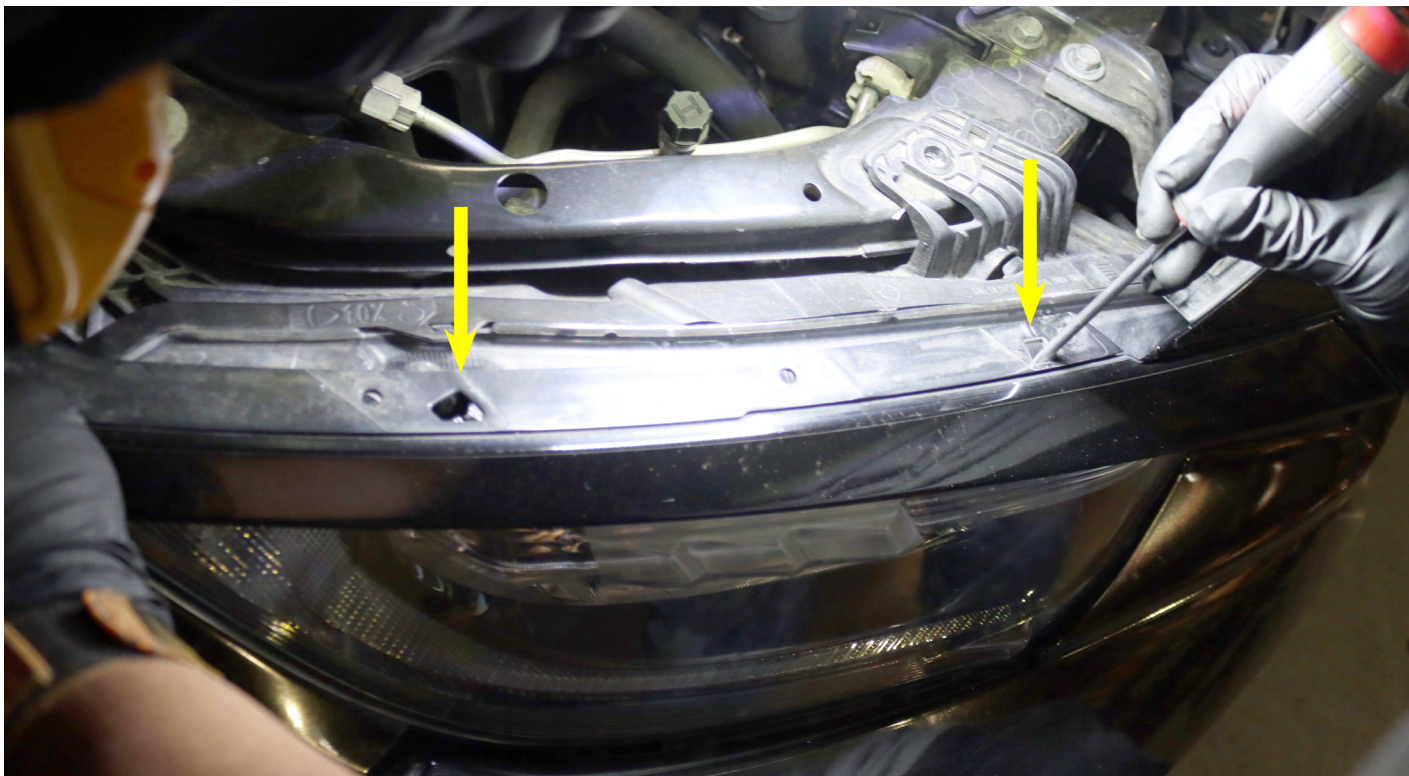

To detach the entire bumper, uninstall the bolts, hex screws and push-in pins located beneath the front bumper that are securely fastened. Make sure to disconnect the fog light connections then proceed to remove the front bumper entirely. Set it aside for later reinstallation.

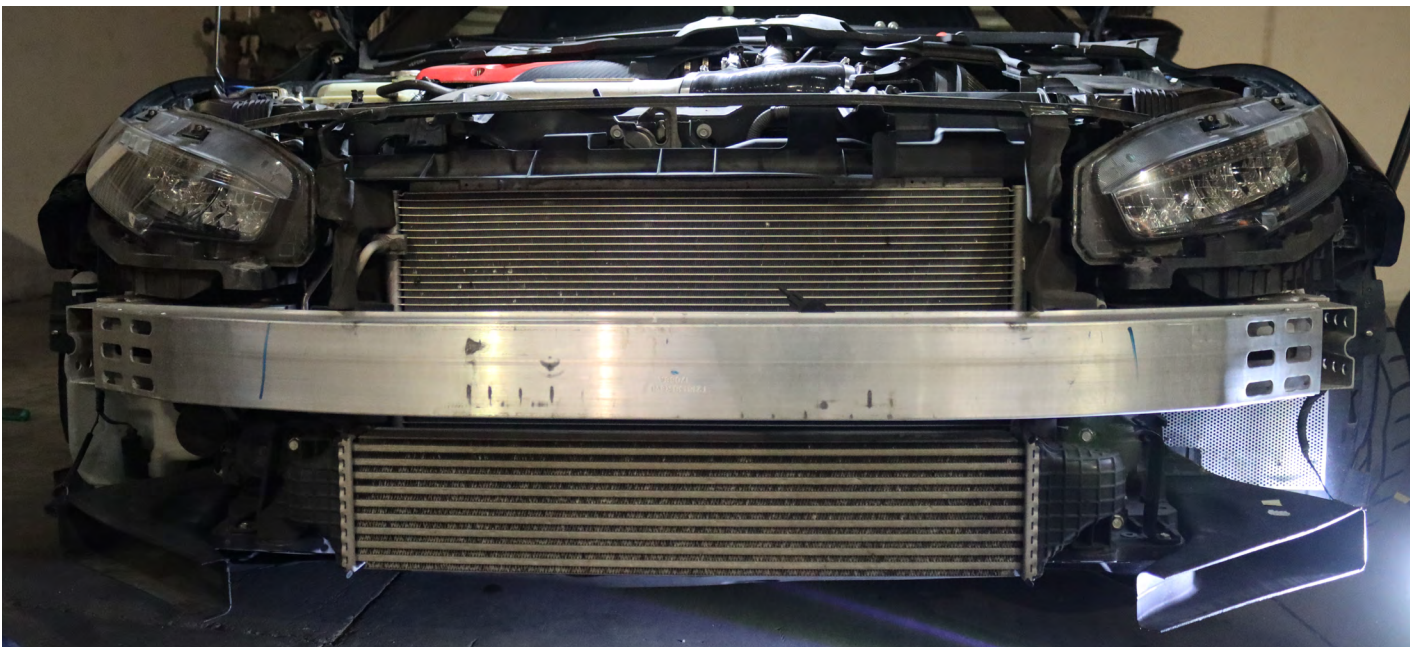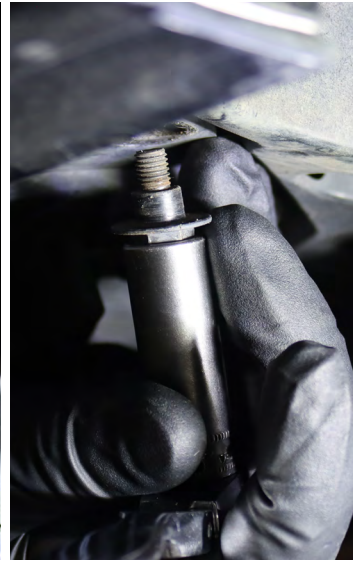


STEP 3. REMOVE THE HEADLIGHT BOLTS

Remove the 5 X 10mm bolts from the headlight assembly.
Follow the same steps for the other side.





STEP 4. REMOVE THE HEADLIGHTS

Gently pull the headlight assembly outward to disengage.
Unplug the headlight's sockets to complete the headlight's removal.

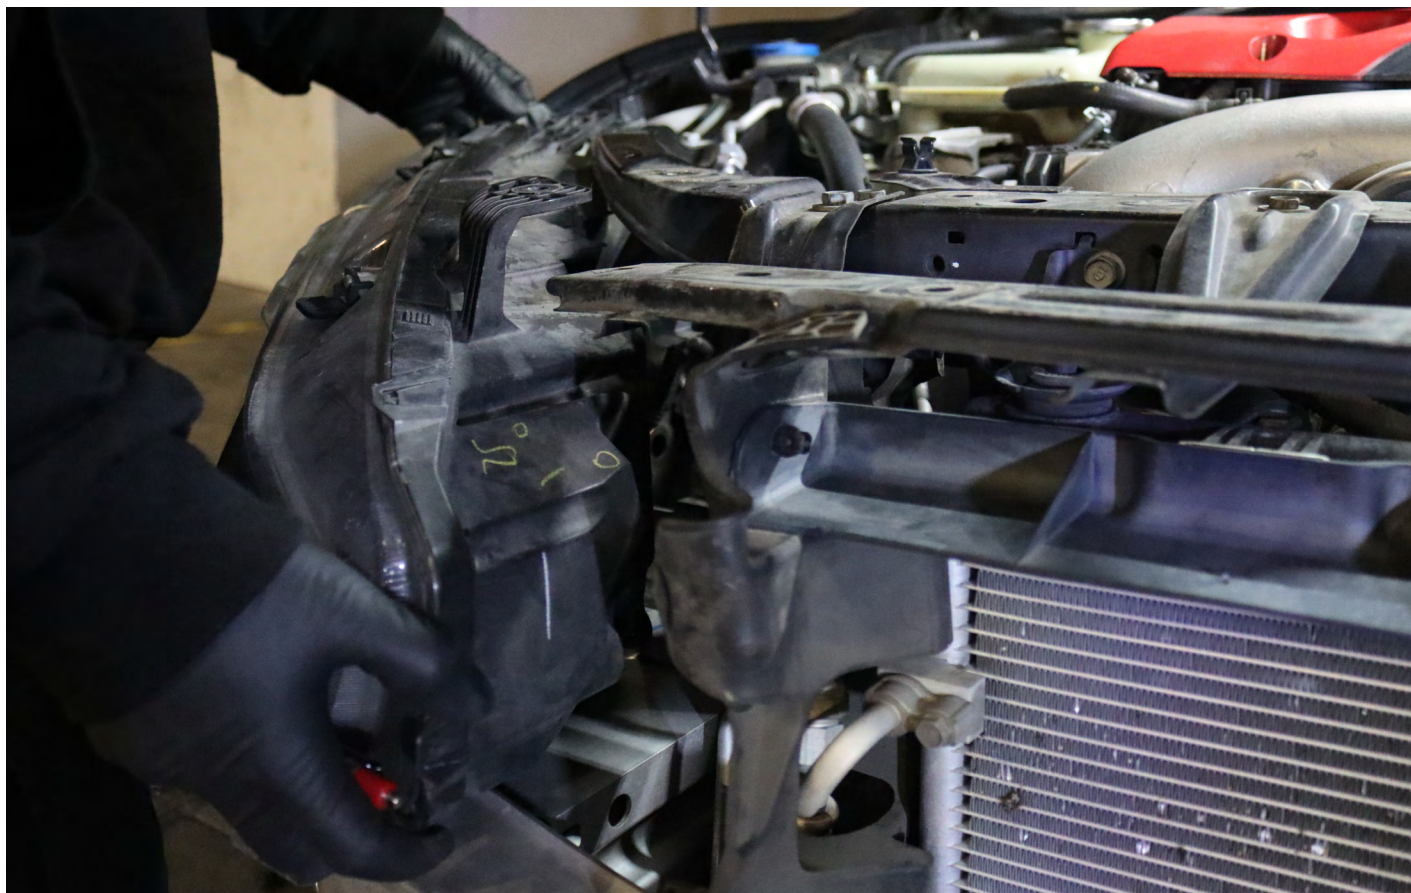

Follow the same steps to remove the other side of the headlight.

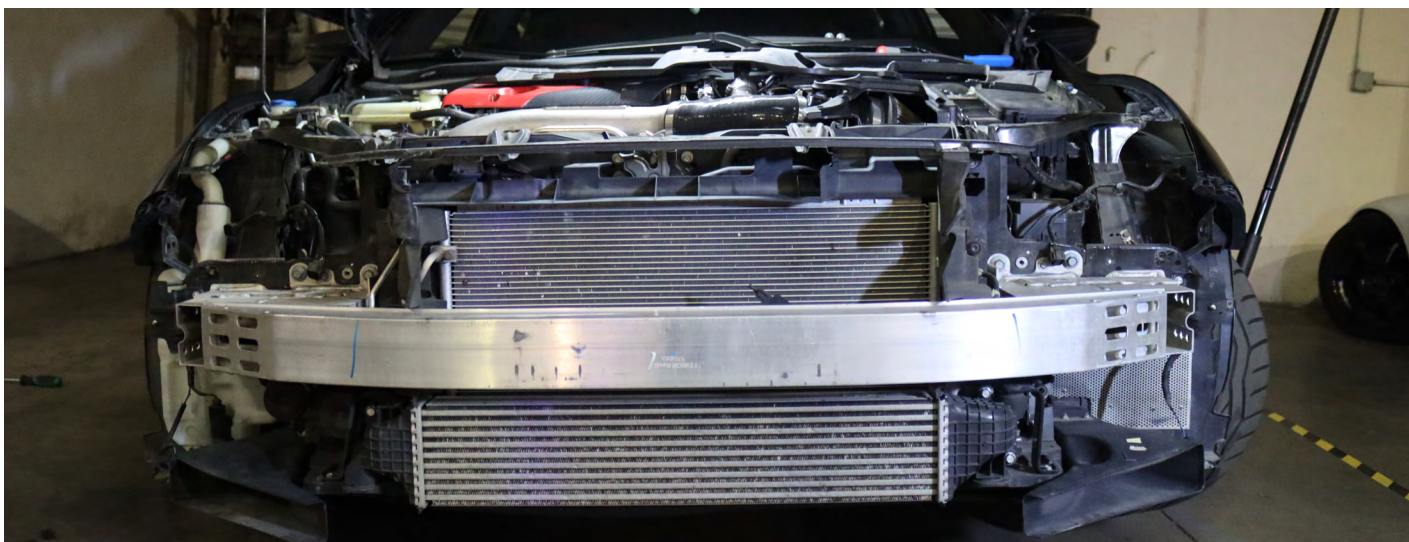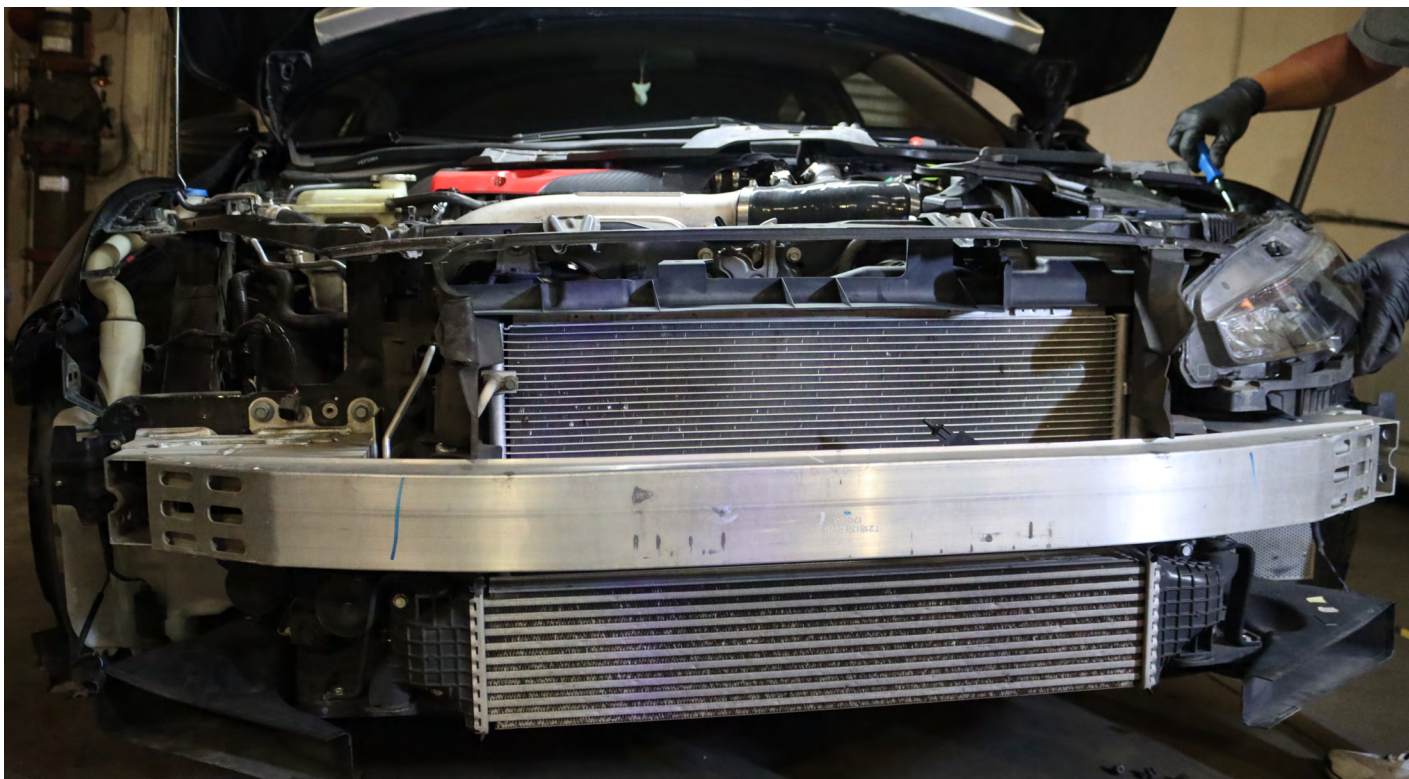


PART II INSTALL HEADLIGHTS






STEP 1. TRANSFER THE BRACKET

Prior to installing the headlights, it's essential to transfer the mounting bracket from the original equipment (OE) headlight assembly to the new ALPHAREX headlight assembly.

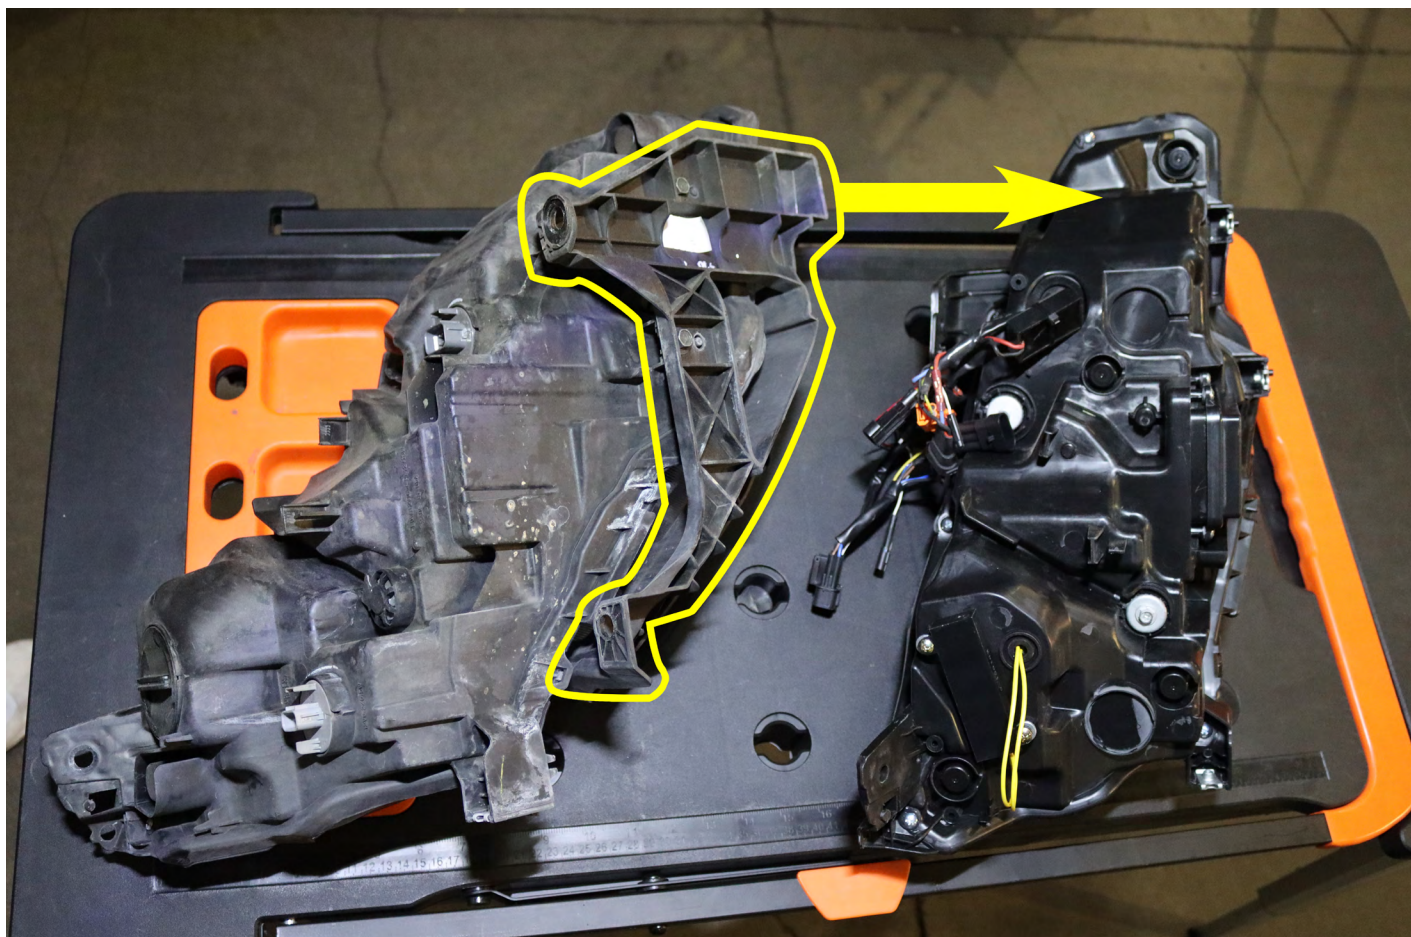


Loosen the two 10mm bolts, and proceed to transfer and install the mounting bracket onto the new ALPHAREX headlight assembly. Repeat the same steps for the other headlight assembly.

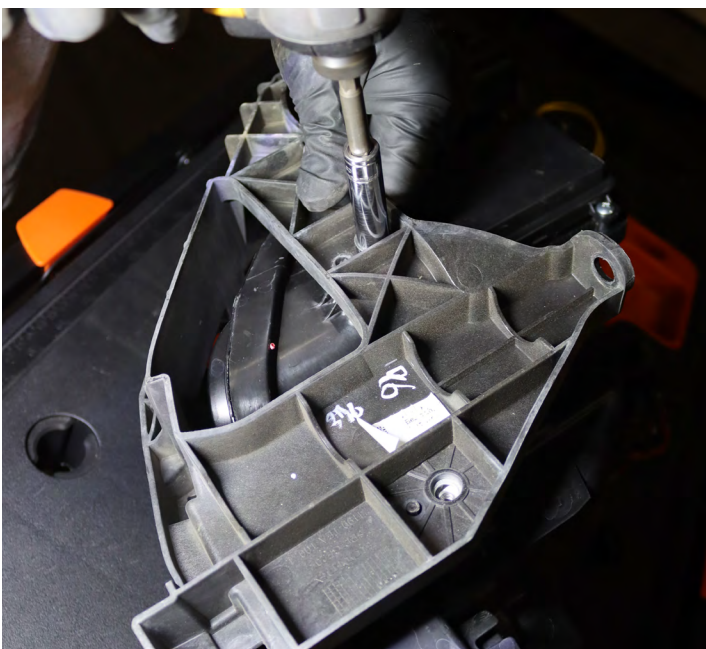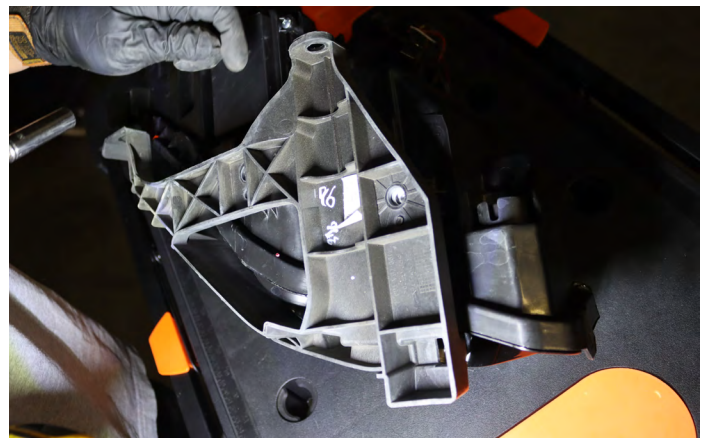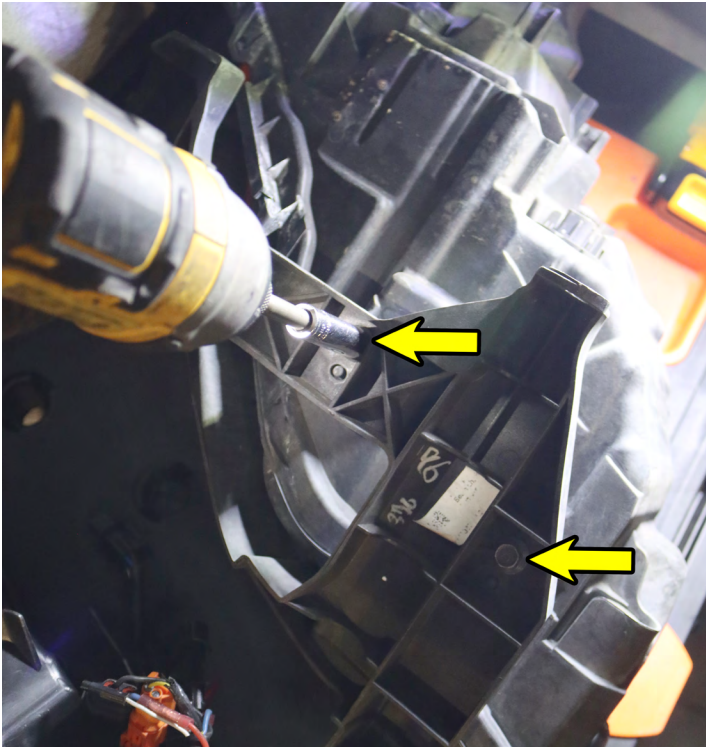


STEP 2. TAP THE FUSE AND ROUTE THE DRL HARNESS

The installation of the DRL harness is optional, base on your preference. When the DRL harness is installed, you can activate the activation light each time you lock/ unlock your vehicle using the vehicle's remote control. Conversely, if the DRL harness is not installed, there's no activation light with keyless entry.

Begin by locating the fuse box. Then, attach the red wire to the positive (+) battery terminal and the black wire to the negative (-) battery terminal.

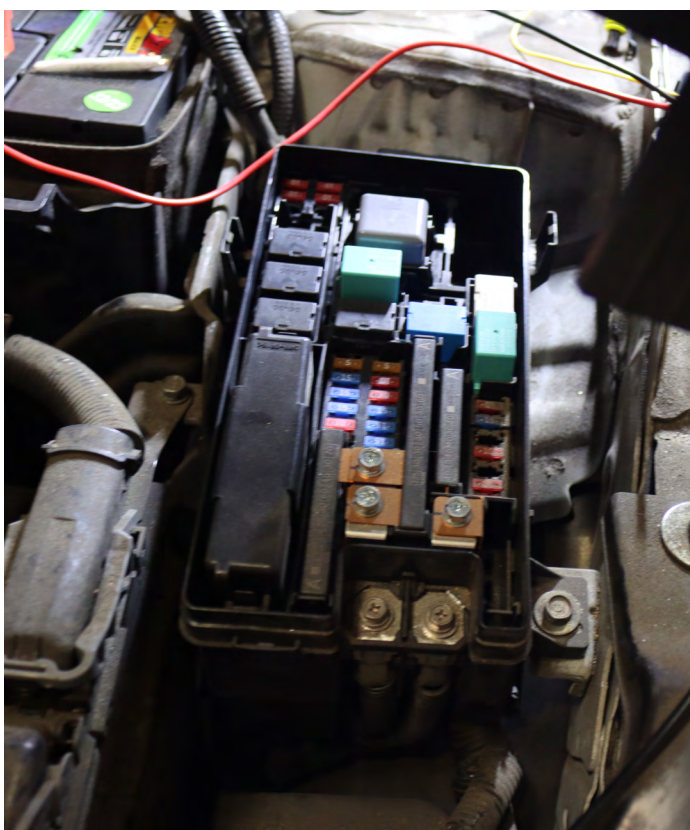

To initiate, open the fuse box cover and tap the red wire into the fuse number 11.

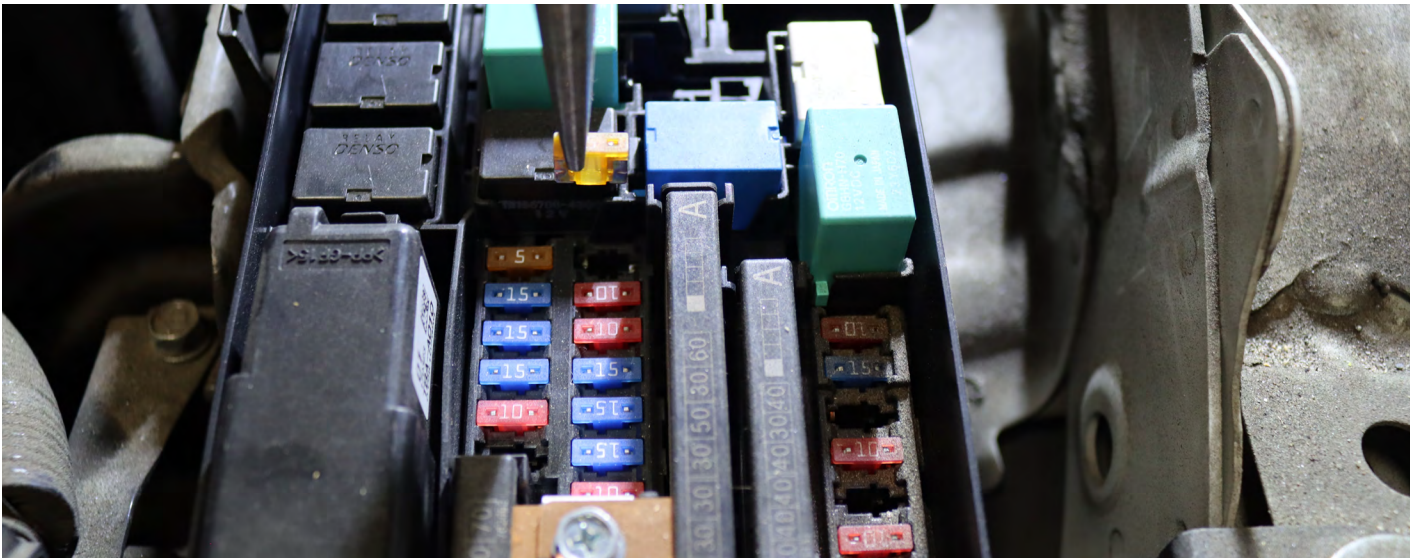

Close the fuse box cover and proceed to route the DRL wire harness towards the headlights.





STEP 3. INSTALL THE HEADLIGHTS

Start by disconnecting the DRL connector from the headlight assembly in order to connect it to the DRL red wire connector.



Connect the DRL red wire connector and the turn signal connector to the new ALPHAREX headlight assembly. **DO NOT USE DIELECTRIC GREASE!**

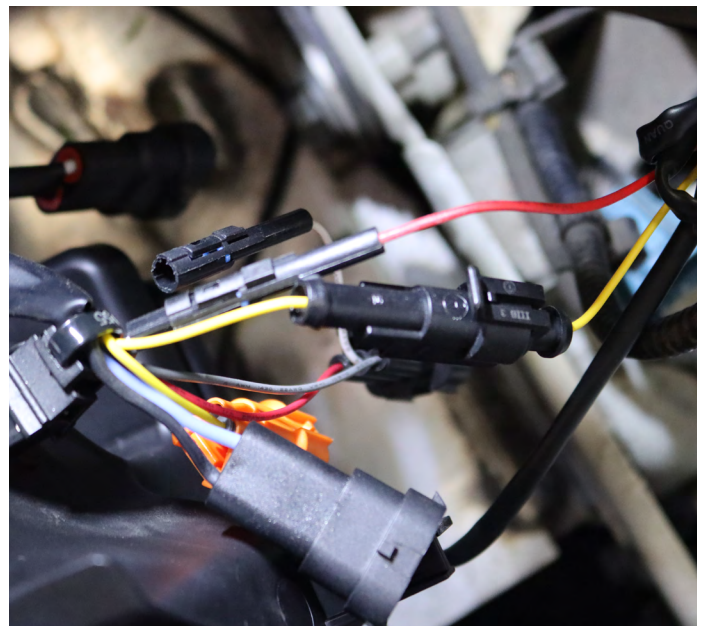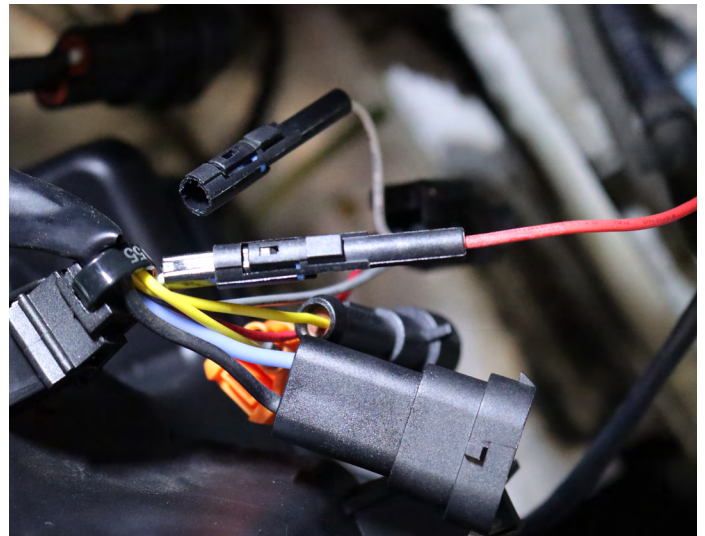

Connect the headlight sockets to the new ALPHAREX headlight assembly.

DO NOT USE DIELECTRIC GREASE!




Install the headlight securely into the vehicle and screw the 5 X 10mm bolts into place securely. Repeat the same steps for the other side of the headlights.



To complete the installation, reverse the removal process, ensuring all previous steps are followed in the opposite order.



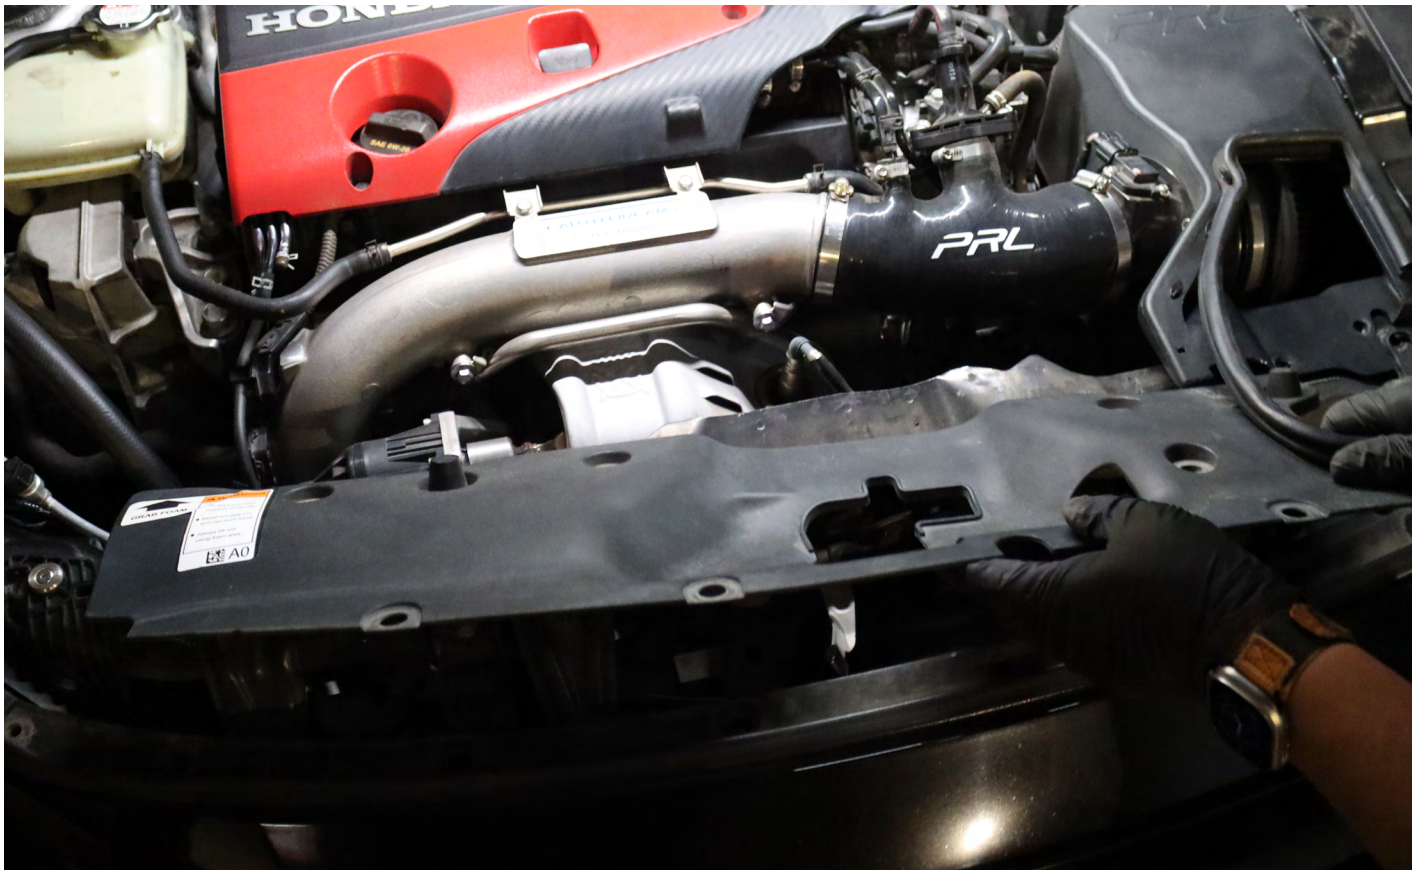


STEP 4. TEST THE HEADLIGHT FUNCTIONS

Test the functions of your ALPHAREX headlights to ensure everything works properly.



STEP 5. ADJUST HEADLIGHT LEVEL

Once everything has been tested, aim your ALPHAREX headlights by parking 25ft from a wall and level the headlight evenly.

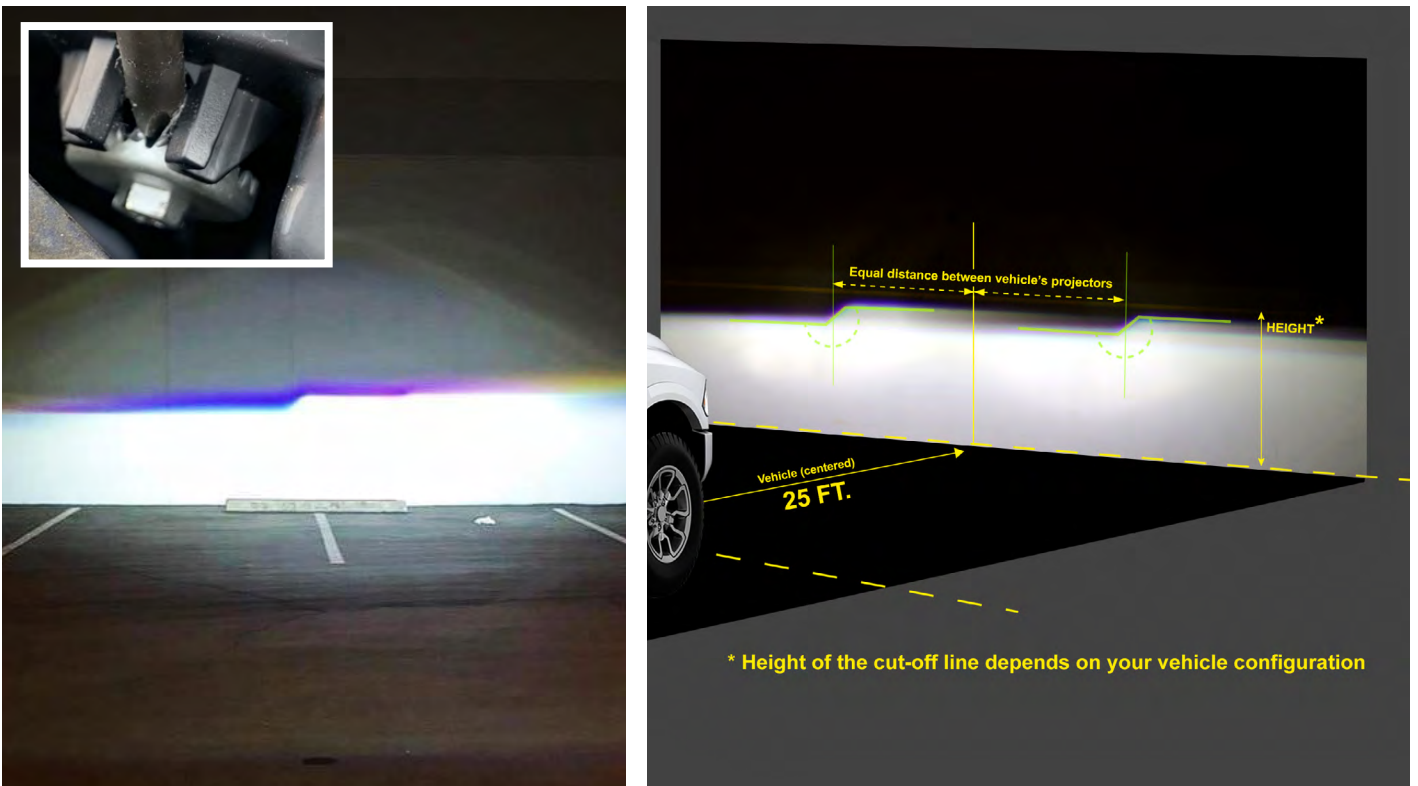

STEP 6. COMPLETE INSTALLATION

Congratulations! You have completed the installation for ALPHAREX 16-21 Honda Civic | 17-21 Civic Type-R FK8 HEADLIGHTS.

