



THE AUTOMOTIVE LIGHTING BENCHMARK

INSTALL GUIDE

C6 CORVETTE XB TAILLIGHTS



PACKAGE CONTENTS



1 X SET OF TAIL LIGHTS

(RED OR SMOKED)



REVERSE HARNESS

REQUIRED TOOL

- T15 TORX SCREWDRIVER

WARNING: IT IS THE INSTALLERS RESPONSIBILITY TO CONFIRM COMPLIANCE WITH STATE AND LOCAL LAWS. BY READING THIS DOCUMENT, YOU AGREE IT IS ONLY TO BE USED AS AN EDUCATIONAL GUIDE. MORIMOTO LIGHTING NOR ITS DEALERS MAKE GUARANTEES ON ANY FINISHED RESULTS, NOR ARE THEY TO BE HELD RESPONSIBLE FOR ANY DAMAGE, MISUSE, OR PERSONAL INJURIES. IF YOU ARE UNABLE TO CLEARLY UNDERSTAND AND ADAPT THE INFORMATION BELOW, PROFESSIONAL INSTALLATION IS RECOMMENDED.

IMPORTANT: IF YOUR VEHICLE IS EQUIPPED WITH ANYTHING BUT MORIMOTO OR OEM TAILLIGHTS, SIDE MARKERS OR OTHER OEM EXTERIOR LIGHTING; YOU MAY EXPERIENCE A HYPER FLASH AND/OR PROBLEM WITH THE SEQUENTIAL SIGNAL SETTING ON THESE HEADLIGHTS. THIS IS NOT A DEFECT IN THE HEADLIGHT AND CAUSED BY UN-MATCHED IMPEDANCE WITH YOUR ORIGINAL VEHICLE SETTINGS.



C6 CORVETTE XB TAILLIGHTS

1. REMOVE THE T15 TORX SCREW FROM THE TOP OF THE HOUSING THAT SECURES IT TO THE CAR



2. TILT THE TOP OF THE ASSEMBLY AWAY FROM THE CAR AND PULL THE HOUSING OUT



C6 CORVETTE XB TAILLIGHTS

- DISCONNECT THE VEHICLE WIRING FROM THE TAILLIGHT SOCKET, AND REMOVE THE LIGHT FROM THE VEHICLE




- REPEAT STEPS 1-3 FOR THE OTHER 3 TAILLIGHTS
- LOCATE THE MAIN REAR LIGHTING HARNESS 8-PIN CONNECTOR LOCATED BEHIND THE BUMPER ON THE PASSENGER SIDE, AND DISCONNECT IT



C6 CORVETTE XB TAILLIGHTS

6. CONNECT THE REVERSE LIGHT HARNESS IN-LINE BETWEEN THE TWO CONNECTORS

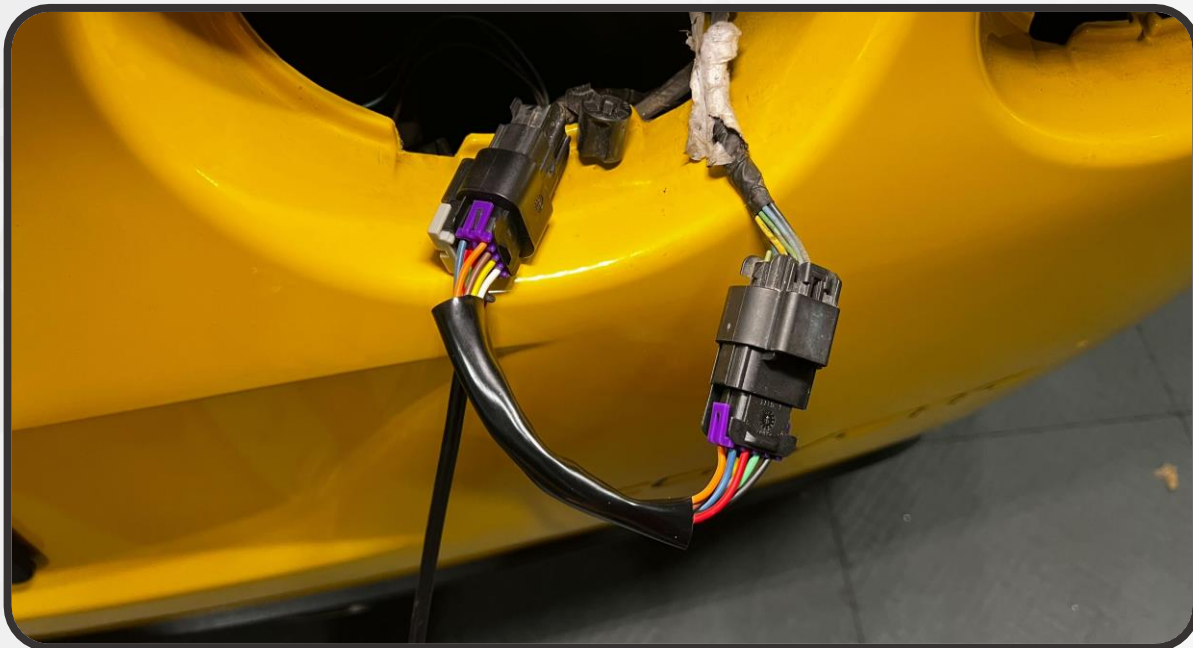


7. ROUTE THE TWO SHORT ENDS OF THE REVERSE LIGHT HARNESS TO EACH OF THE TAILLIGHT HOUSING OPENINGS ON THE PASSENGER SIDE



C6 CORVETTE XB TAILLIGHTS

8. ROUTE THE LONG END OF THE HARNESS BEHIND THE BUMPER TO EACH OF THE TAILLIGHT HOUSING OPENINGS ON THE DRIVER SIDE

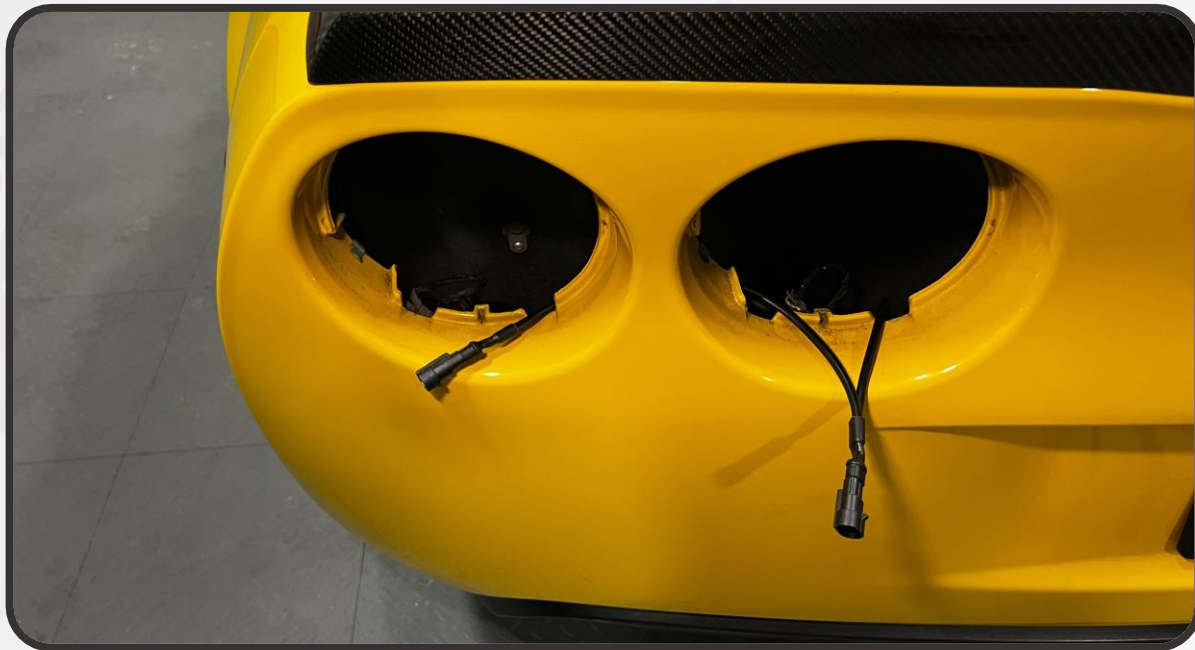


9. CONNECT THE TAILLIGHT PLUG AND REVERSE HARNESS PLUG TO THE NEW TAILLIGHT ASSEMBLY



C6 CORVETTE XB TAILLIGHTS

10. ALIGN THE TWO TABS ON THE BOTTOM OF THE TAILLIGHT WITH THE TWO NOTCHES IN THE BUMPER AT THE BOTTOM OF THE TAILLIGHT OPENING

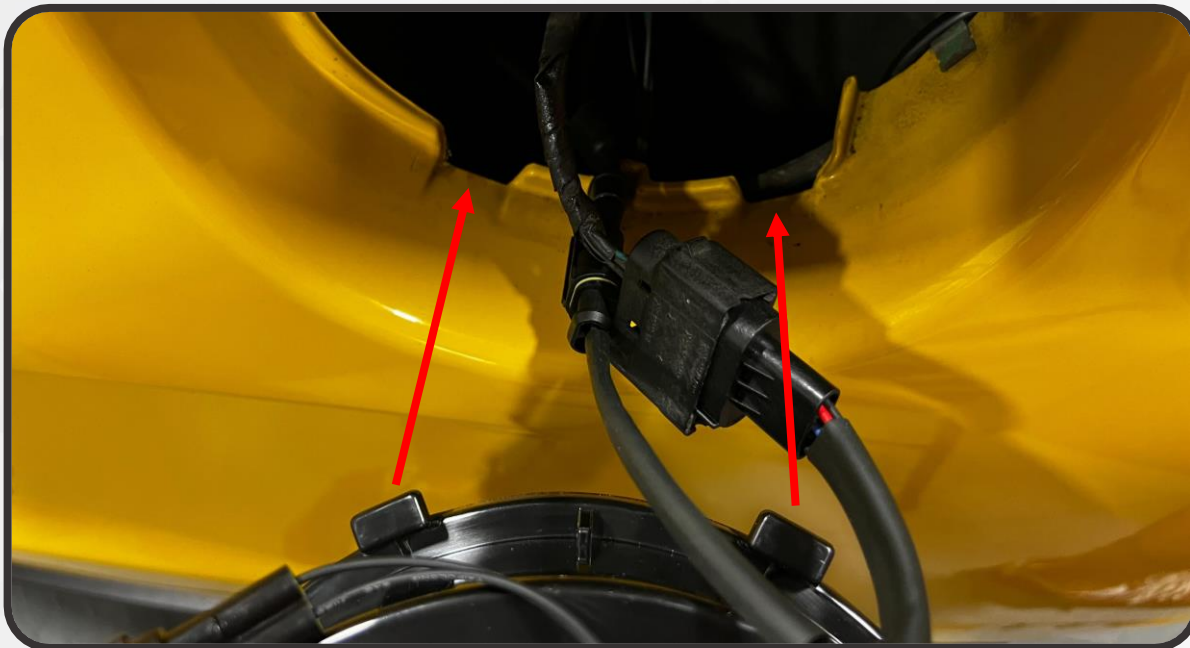


11. INSERT THE BOTTOM OF THE HOUSING INTO THE TAILLIGHT OPENING, ENSURING THAT THE TWO TABS ON THE LIGHT HOOK INTO THE BUMPER NOTCHES



C6 CORVETTE XB TAILLIGHTS

12. FIRMLY PRESS THE TOP OF THE HOUSING BACK INTO THE CAR UNTIL IT POPS INTO POSITION. RESECURE THE LIGHT USING THE T15 TORX SCREW

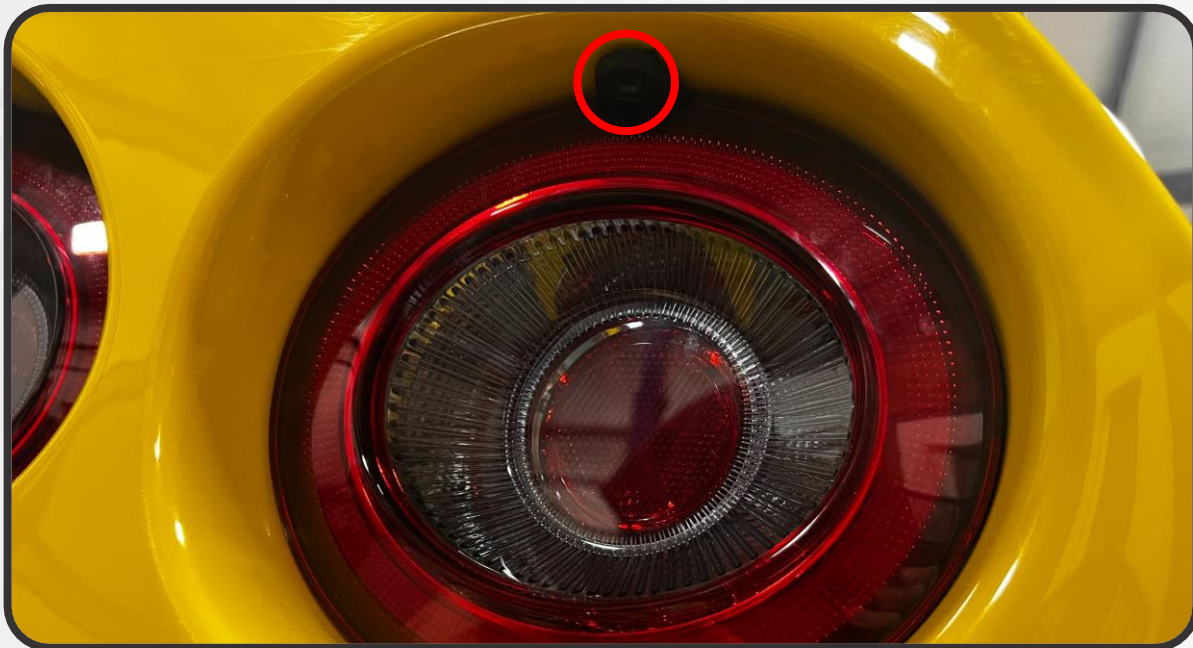

13. REPEAT STEPS 9-12 FOR THE OTHER THREE ASSEMBLIES
14. TEST YOUR LIGHTS TO CONFIRM THAT ALL ARE WORKING PROPERLY



- ENJOY YOUR NEW MORIMOTO XB TAILLIGHTS! -

