

## Chainsaw Carrier

**Thank you for choosing Rough Country for all your vehicle needs.**

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.

Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.

Periodically check all hardware for tightness.

### KIT CONTENTS:


- Spacers x8
- Carrier Plates x2
- Carrier Mounting Bracket x1
- Carrier X Bracket x2
- Rubber Bed Mounts x2

### TOOLS NEEDED:

- 13mm Wrench or Socket

### HARDWARE INCLUDED:

- 8mm T-Handle bolt x2
- 8mm Hex Bolts x8
- 8mm Hex Nut x8

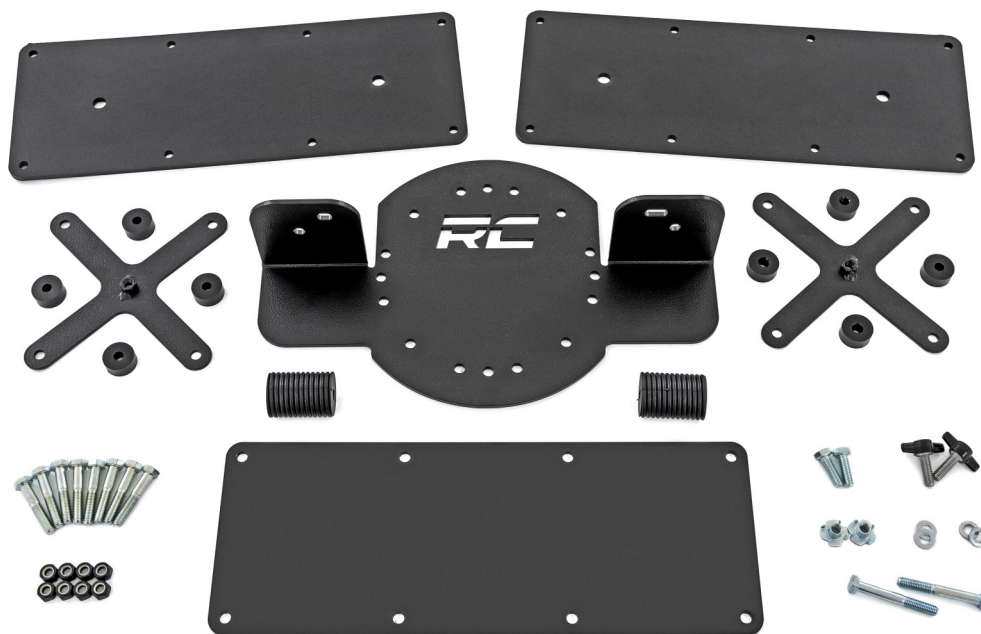


### Torque Specs:

| Size  | Grade 5   | Grade 8   | Size | Class 8.8 | Class 10.9 |
|-------|-----------|-----------|------|-----------|------------|
| 5/16" | 15 ft/lbs | 20ft/lbs  | 6MM  | 5ft/lbs   | 9ft/lbs    |
| 3/8"  | 30 ft/lbs | 35ft/lbs  | 8MM  | 18ft/lbs  | 23ft/lbs   |
| 7/16" | 45 ft/lbs | 60ft/lbs  | 10MM | 32ft/lbs  | 45ft/lbs   |
| 1/2"  | 65 ft/lbs | 90ft/lbs  | 12MM | 55ft/lbs  | 75ft/lbs   |
| 9/16" | 95 ft/lbs | 130ft/lbs | 14MM | 85ft/lbs  | 120ft/lbs  |
| 5/8"  | 135ft/lbs | 175ft/lbs | 16MM | 130ft/lbs | 165ft/lbs  |
| 3/4"  | 185ft/lbs | 280ft/lbs | 18MM | 170ft/lbs | 240ft/lbs  |





## INSTALLATION INSTRUCTONS


1. Choose the angel you will need the mounting bracket to be in and align (4) mounting holes. **See Photo 1.**
2. Install the (4) 8mm 1.25 x 45mm hex head bolts into the (2) brackets. **See Photo 2.**

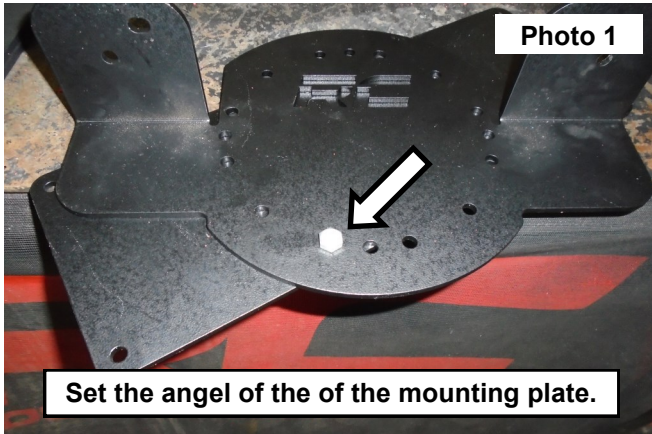

3. Place the spacer onto the installed bolts use (1) pre bolt. **See Photo 3.**
4. Place the back plate with the (2) center holes onto the spacers. **See Photo 4.**

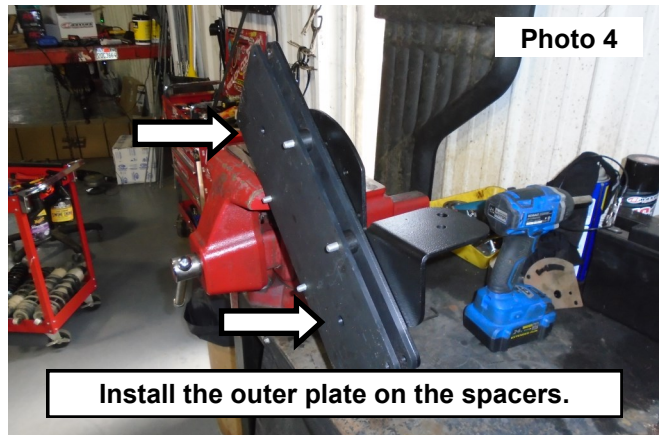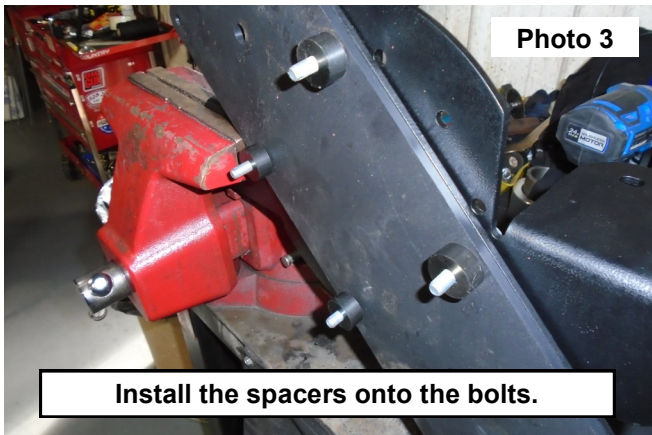


5. Place the X bracket onto the installed bolts and secure using (4) of the supplied 8mm hex head bolts. **See Photos 5 and 6.**

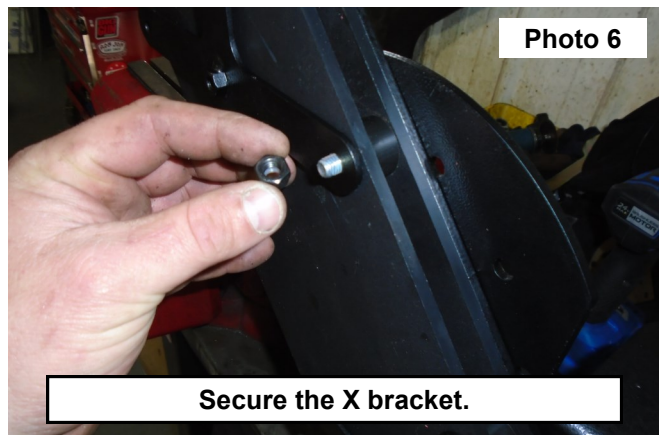

6. Insert the spacers in-between the mounting plates in the remaining holes. Secure using (4) 8mm 1.25 x 45mm hex head bolts into the (2) brackets. **See Photo 7.**
7. Tighten the (8) bolts using a 13mm socket and wrench. **See Photo 8.**




**Install the spacer between the bracket.**

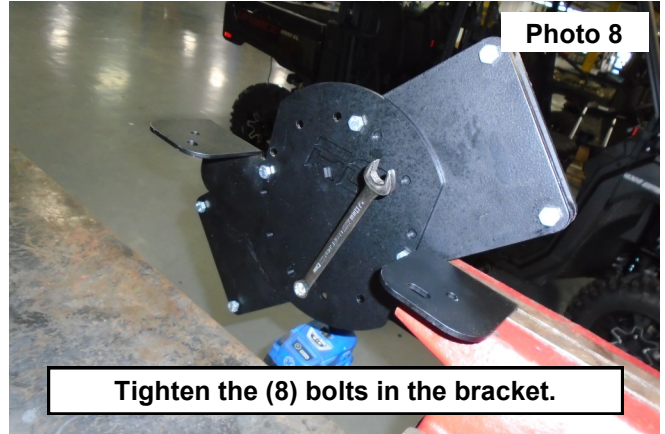

**Tighten the (8) bolts in the bracket.**

8. Install the 8mm T-Handle bolts into the X brackets. **See Photo 9.**
9. Install the rubber mount just below the taper in the top of the bed. Then remove the eye bolt and washer. Retain for reuse. **See Photo 10.**

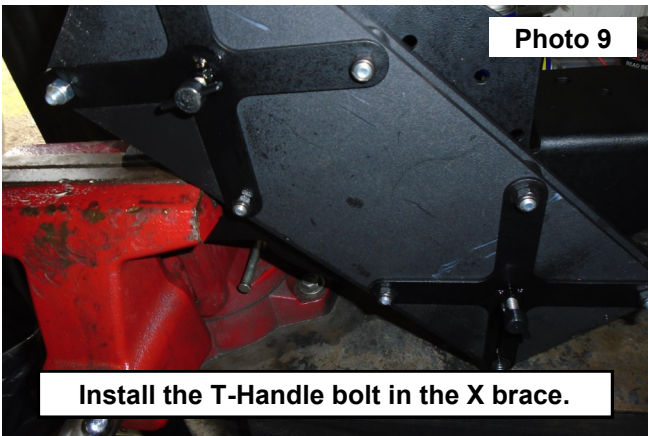


**Install the T-Handle bolt in the X brace.**




**Install the rubber mount into the bed.**

10. Install the bracket assembly onto the bed and align the mounting holes. Secure using the supplied eye bolts and washers. **See Photo 11.**
11. When using the chainsaw carrier rack place the saw into the slot between each bracket, secure the saw using the bolts in the X bracing. **See Photo 12.**

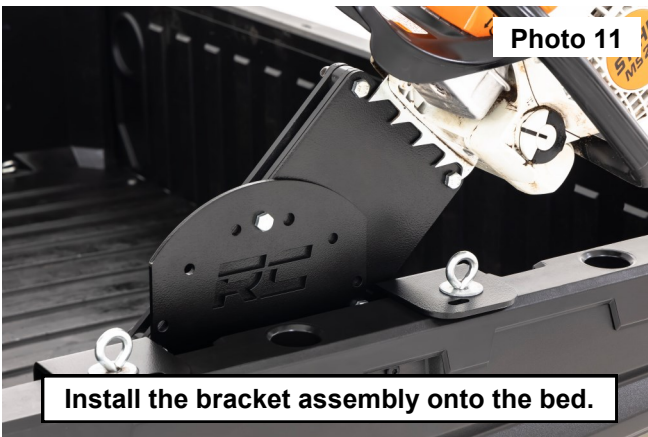

**Install the bracket assembly onto the bed.**

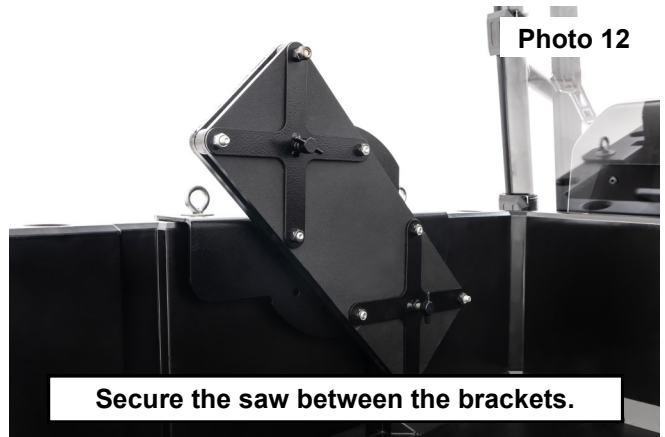

**Secure the saw between the brackets.**

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.



