

advanced FLOW engineering

Cold Air Intake System

Instruction Manual P/N: 56-10057D / 56-10057R

Make: Hyundai

Model: Elantra N

Year: 2022-2023

Engine: L4-2.0L(t)



- Please read the entire instruction manual before proceeding.
- Ensure all components listed are present.
- If you are missing any of the components, call customer support at 951-493-7185.
- Ensure you have all necessary tools before proceeding.
- Do not attempt to work on your vehicle when the engine is hot.
- Retain factory parts for future use.


| Label | Qty. | Description | Part Number |
|-------|------|--|--------------|
| A | 1 | Air Filter (Pro 5R) For 56-10057R | 24-91144 |
| A | 1 | Air Filter (Pro DRY S) For 56-10057D | 21-91144 |
| B | 1 | Tube | 05-5670057B1 |
| C | 1 | Housing | 05-5610057B2 |
| D | 1 | Coupling, Silicone Reducer: (2-1/2" x 3") ID x 3'L | 05-01736 |
| E | 1 | Clamp, #048 (2-9/16" - 3-1/2 ") | 03-50007 |
| F | 1 | Clamp, #044 (2-5/16" - 3-1/4") | 03-50019 |
| G | 1 | Fitting, Aluminum 11mm | 03-50615 |
| H | 1 | Seal Trim, double bulb (33.5" Length) | 05-01534 |

Installation will require the following tools:

8mm and 10mm socket, extension, ratchet, 16mm or adjustable wrench, pliers, and a flat-head screwdriver

Warranty Information available at: <https://afepower.com/contact#warranty>

Emissions Disclaimer: This product is not currently CARB exempt and is not available for purchase in California or for use on any vehicle registered with the California Department of Motor Vehicles.

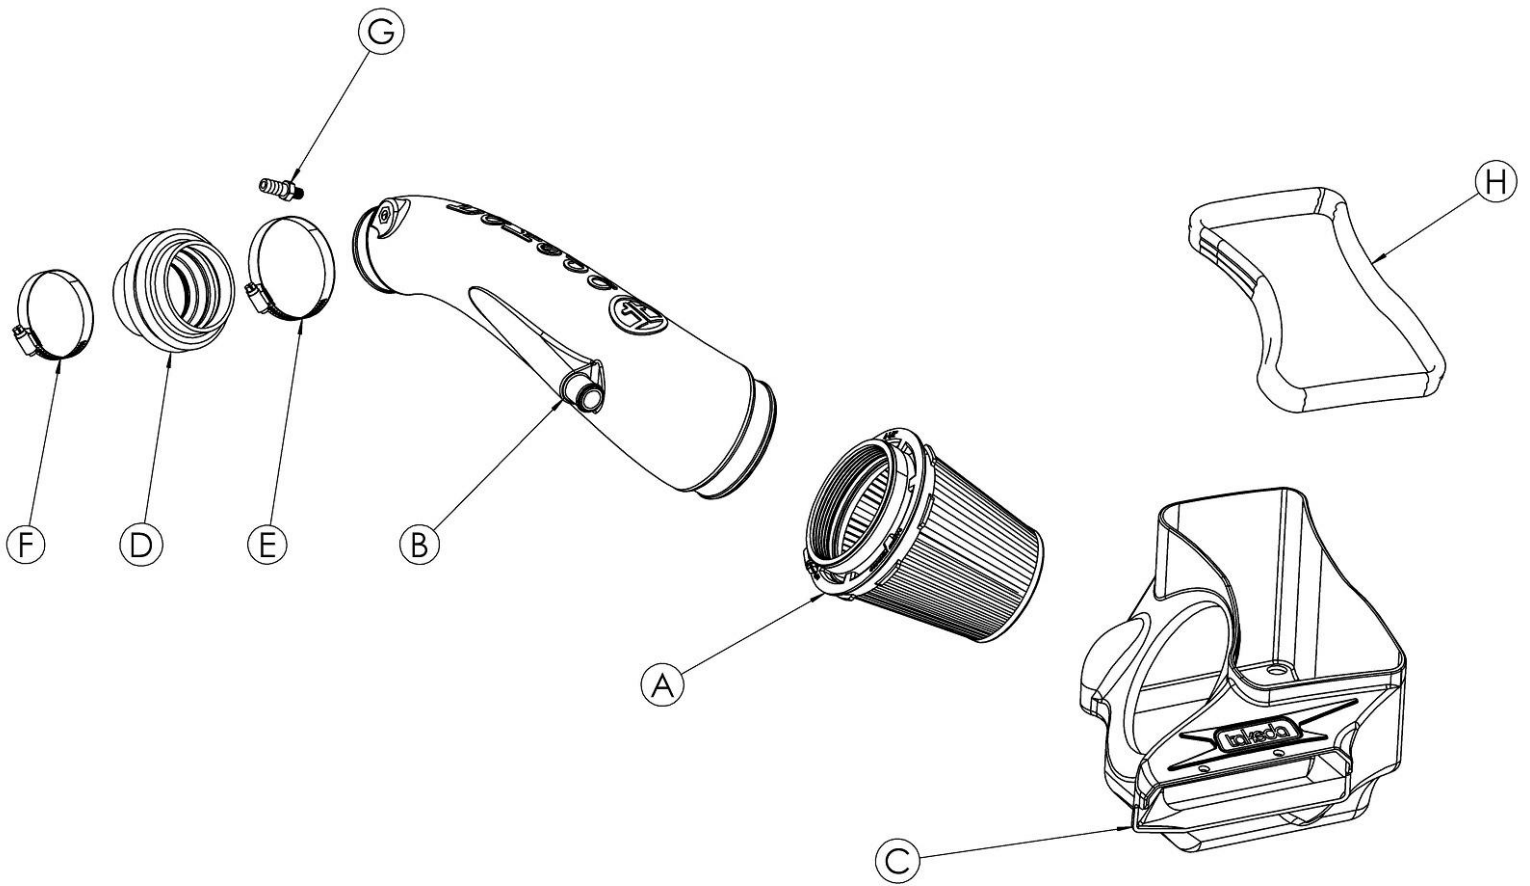

**Figure A****Refer to Figure A for Steps 1-2**

Step 1: Using pliers, open the clamp securing the larger hose to the air intake tube, and then slide the clamp away from the intake tube. This clamp will be re-used. Disconnect the rubber hose from the air intake tube.

Step 2: Using pliers, open the clamp securing the smaller hose to the air intake tube, and then slide the clamp away from the intake tube. This clamp will be re-used. Disconnect the rubber hose from the air intake tube.

**Figure B****Refer to Figure B for Step 3-4**

Step 3: Loosen the clamp at the turbo inlet using a 10mm socket and ratchet.

Step 4: Unclip the two latches at the front of the airbox, then remove the intake tube and the top of the air box from the vehicle.

Note: If the rubber gasket remains when the tube is removed, simply pull it off of the turbo inlet.

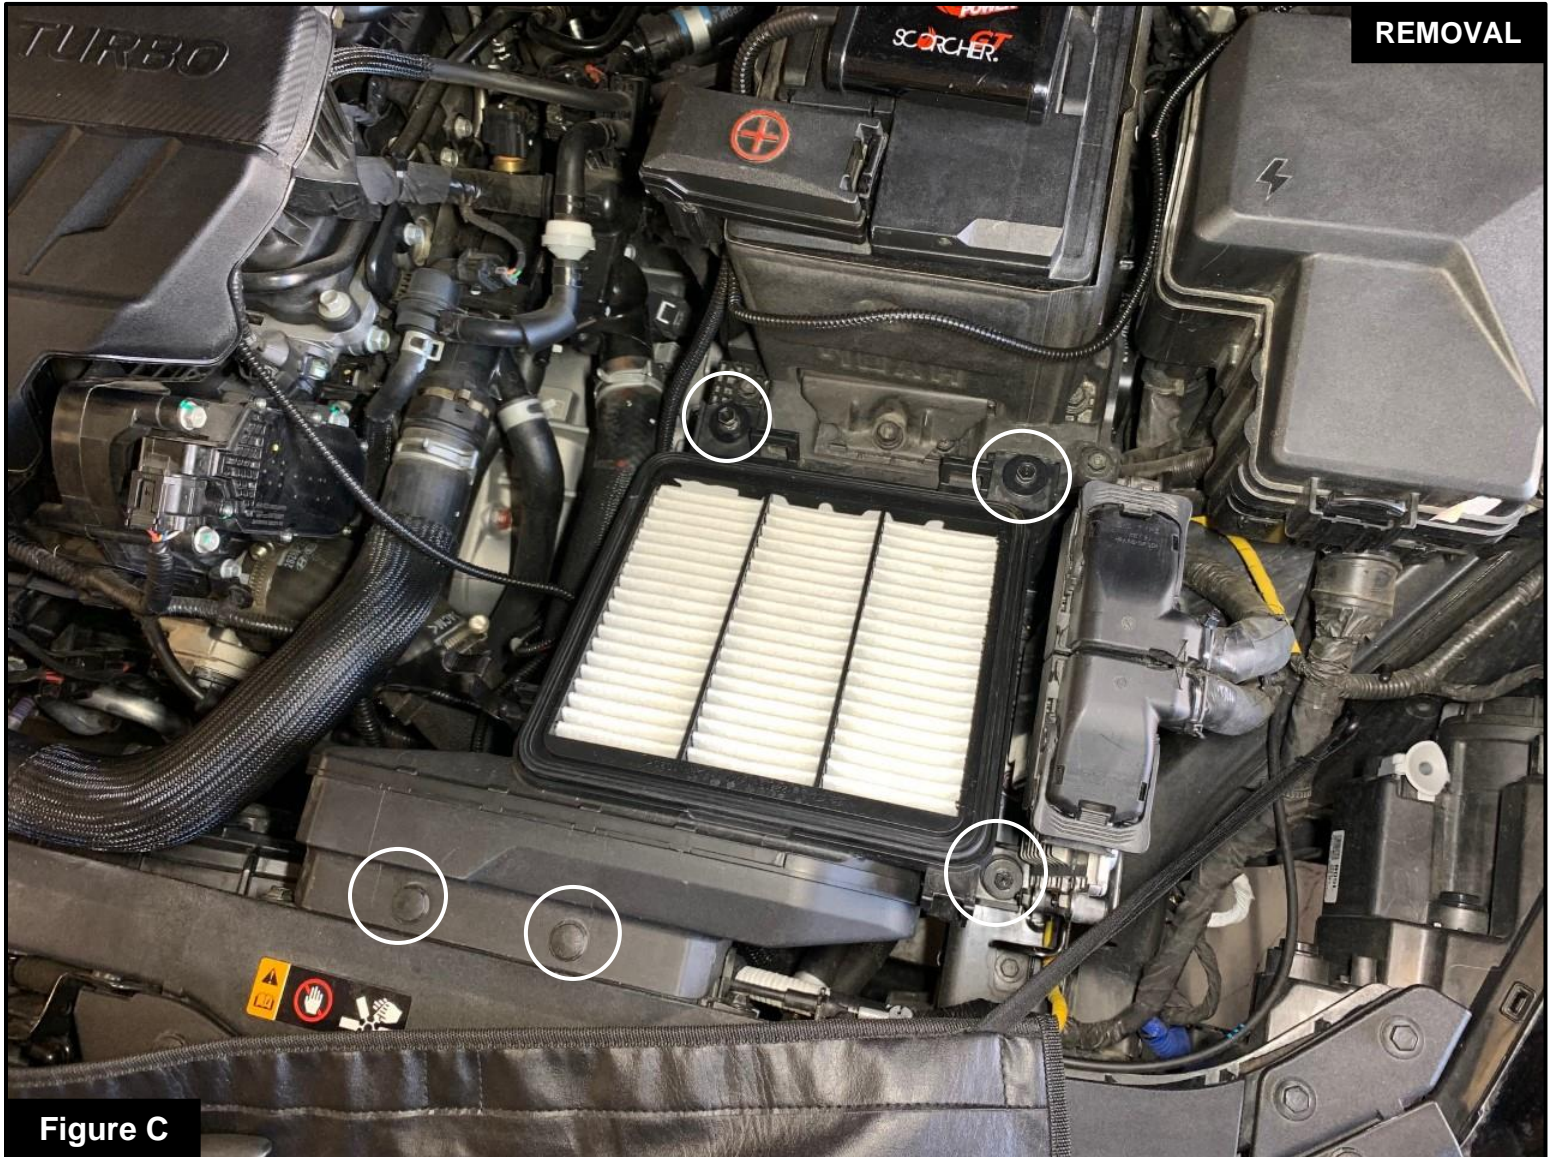


Figure C

Refer to Figure C for Steps 5-7

- Step 5: Remove the two plastic rivets connecting the factory air inlet to the front of the car. These plastic rivets will be reused.
- Step 6: With a 10mm socket, extension and ratchet, loosen the three bolts securing the factory housing to the vehicle. Two of these three bolts will be re-used during the installation of the Takeda air intake system.
- Step 7: Remove the bottom of the factory housing and air inlet as one piece out of the vehicle.

**Figure D****Refer to Figure D for Steps 8-9**

Step 8: Transfer two of the mounting grommets and sleeves from the bottom of the factory housing to the Takeda housing.

Step 9: Install the seal trim around the top edge of the housing.

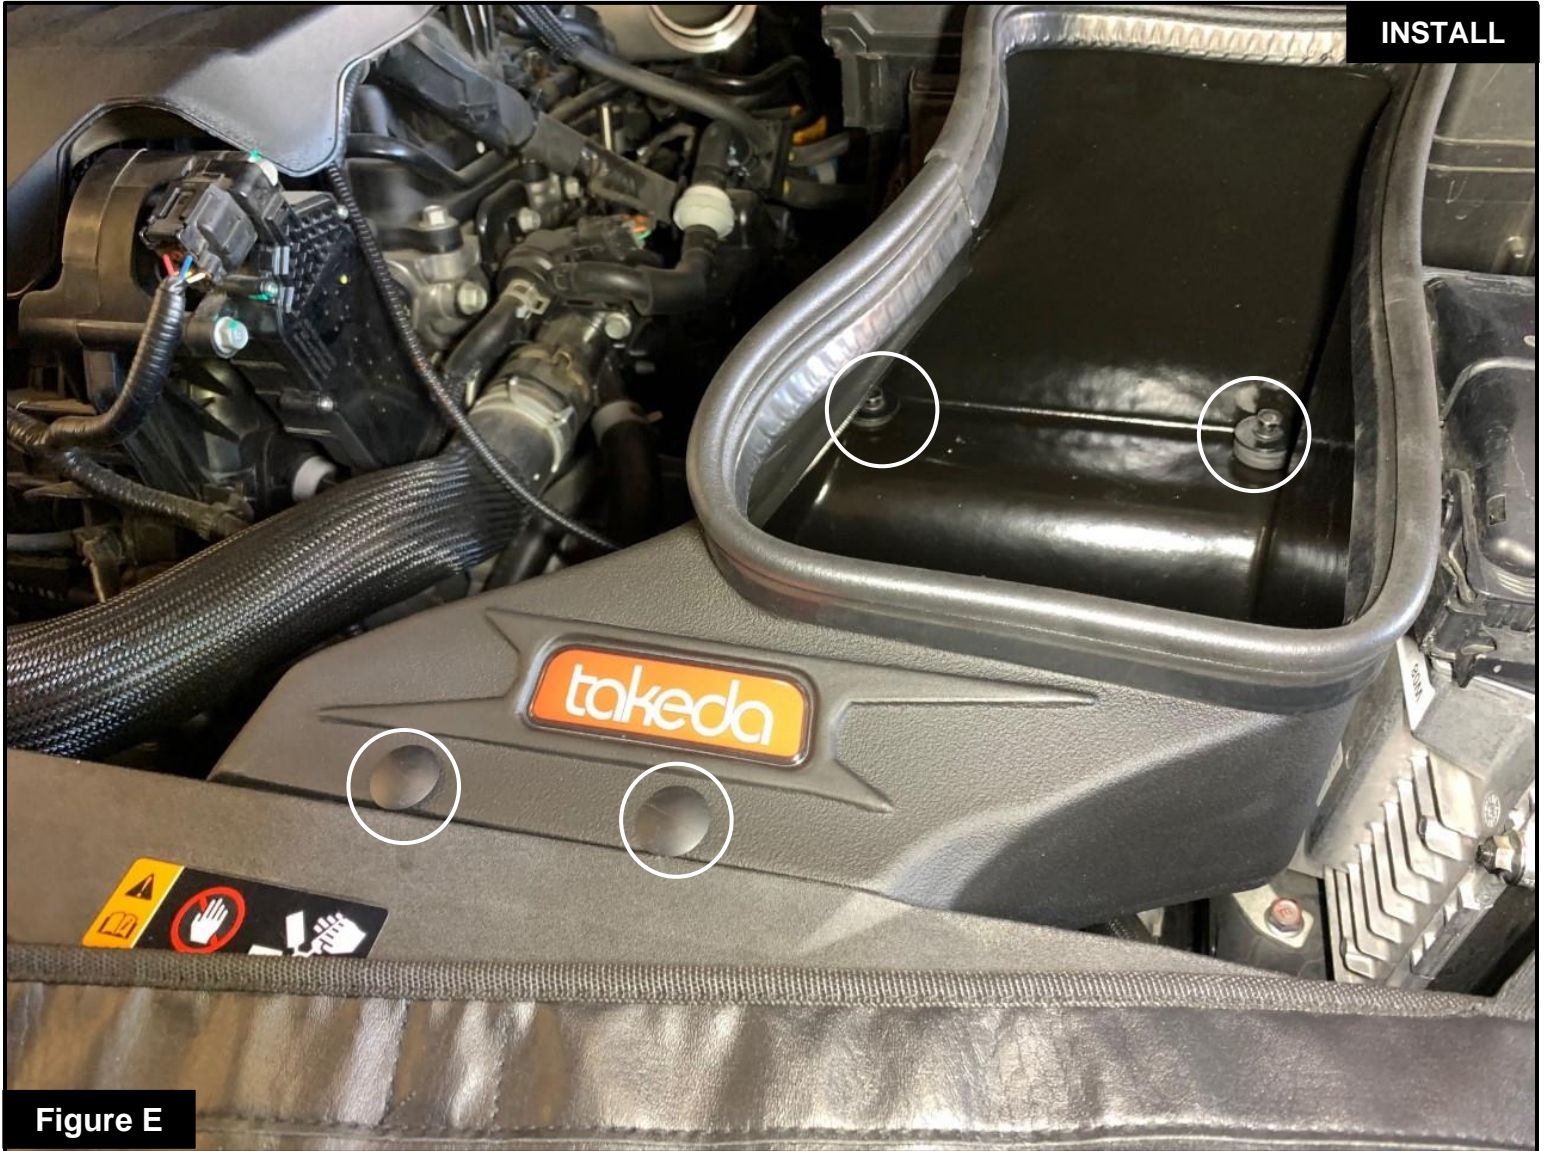


Figure E

Refer to Figure E for Steps 10-11

Step 10: Install the Takeda housing into the vehicle. Secure it with two of the bolts removed during Step 6.

Step 11: Secure the housing to the air inlet with the two clips removed during Step 5.



Refer to Figure F for Step 12

Step 12: Install the air filter into the housing by firmly pushing it into the round opening of the housing until the filter tabs lock it into place.



Figure G

Refer to Figure G for Step 13

Step 13: Using a 16mm wrench, install the aluminum fitting into the Takeda air intake tube.

Note: This is an NPT fitting, the small gap between the 16mm hex and the tube is normal.

**Figure H****Refer to Figure H for Step 14**

Step 14: Install the coupling onto the turbo inlet (the longer end of the coupling goes onto the turbo inlet).

Install the provided clamps over the coupling, but do not tighten it yet.



Figure I

Refer to Figure I for Steps 15-16

Step 15: Install the Takeda intake tube by sliding it into the coupling then into the air filter.

Step 16: Align the tube, filter, and coupling then tighten all clamps.

**Figure J****Refer to Figure J for Steps 17-18**

Step 17: Connect the small rubber hose to the aluminum fitting on the tube. Secure it with the factory spring clamp.

Step 18: Connect the bigger rubber hose to the Takeda air intake tube. Secure it with the factory spring clamp.



Figure K


Refer to Figure K for Step 19

Step 19: Make sure all clamps and connections are secured. Your installation is now complete. Thank you for choosing Takeda USA!

NOTE: Check all screws, clamps, and connectors are secure after 100-200 miles.



PAGE LEFT BLANK INTENTIONALLY

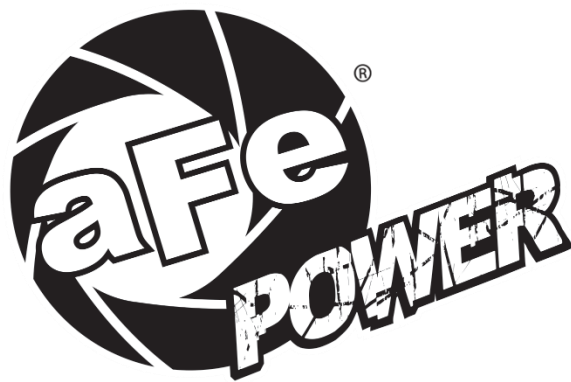

advanced FLOW engineering, inc.

252 Granite Street Corona, CA 92879

<https://afepower.com/contact>