




INSTALLATION INSTRUCTIONS

MAKE: Volkswagen
MODEL: Beetle Turbo
YEAR: 2012-2016
ENGINE: L4-2.0L (t)

Cat-Back
304 Stainless Steel
49-36407

aFe recommends professional installation on our products.

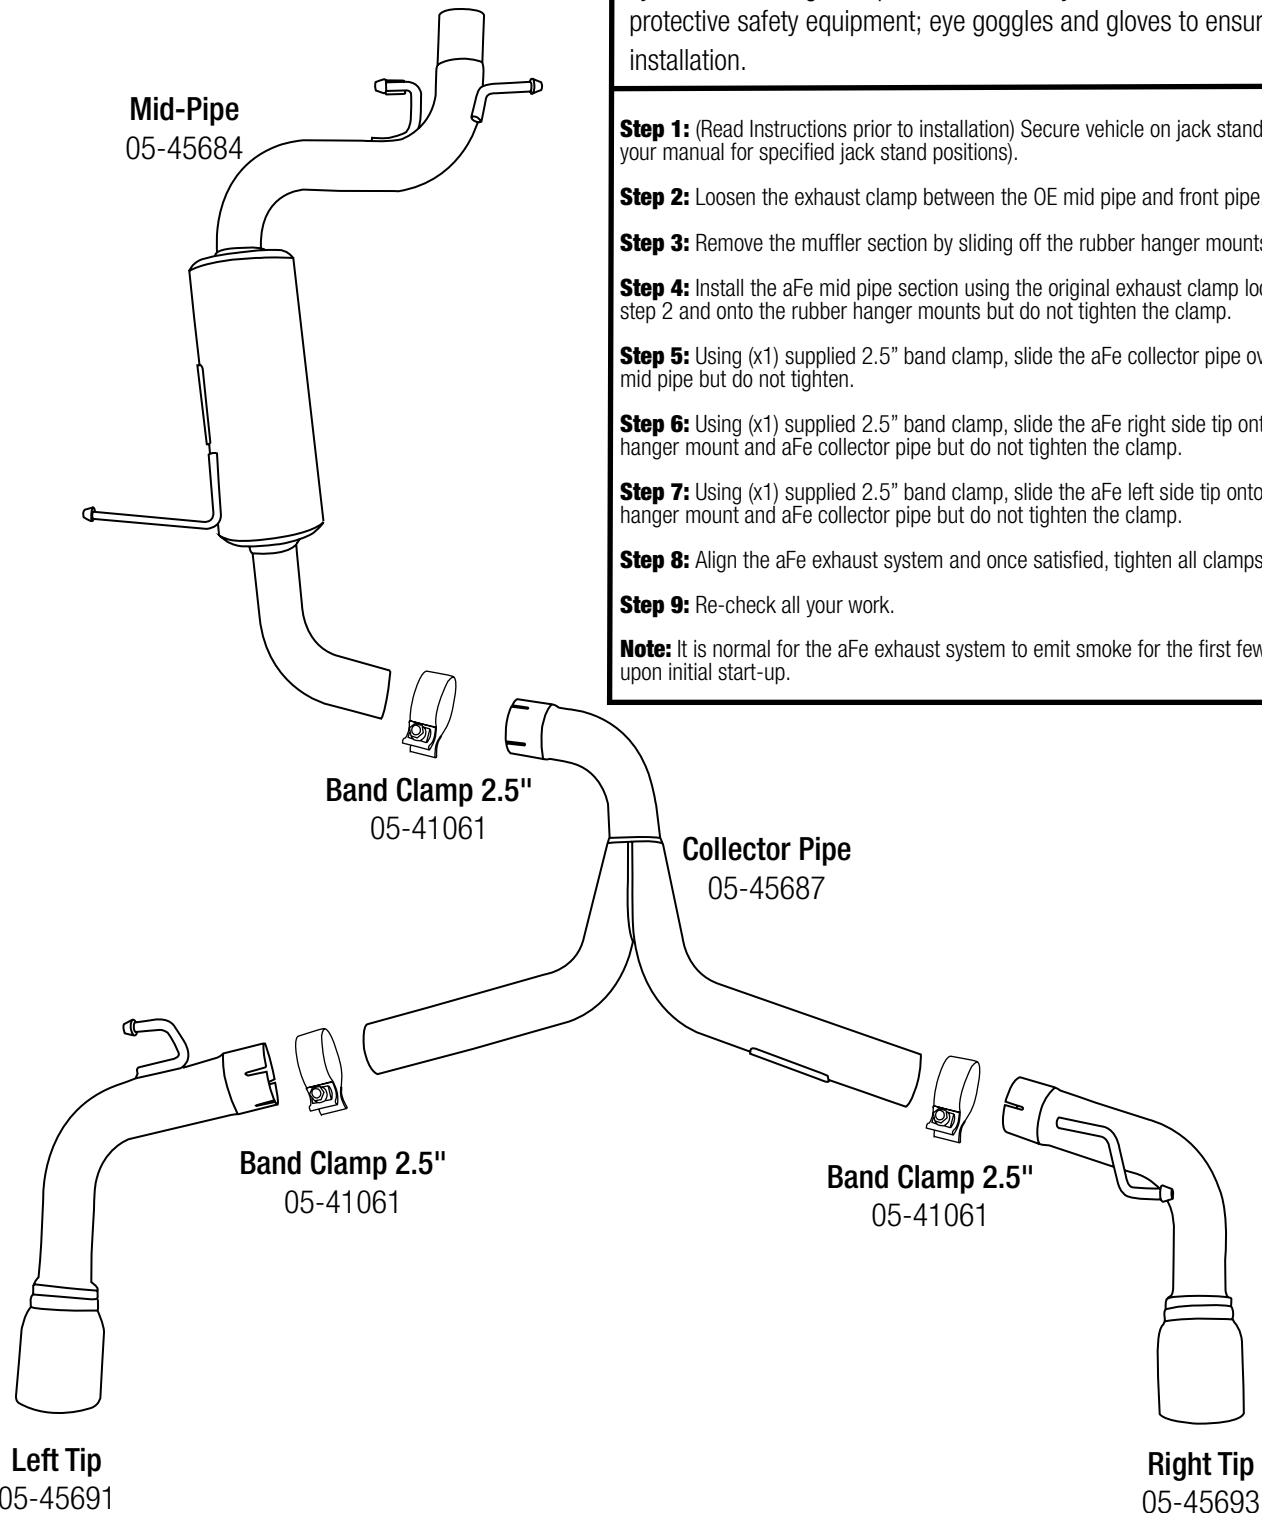

Caution: Allow time for your vehicle to cool down prior to installation. When working on or under your vehicle proceed with caution. Exhaust systems reach high temperatures and may cause serious burns. Wear protective safety equipment; eye goggles and gloves to ensure a safe installation.

- Step 1:** (Read Instructions prior to installation) Secure vehicle on jack stands (Refer to your manual for specified jack stand positions).
- Step 2:** Loosen the exhaust clamp between the OE mid pipe and front pipe.
- Step 3:** Remove the muffler section by sliding off the rubber hanger mounts.
- Step 4:** Install the aFe mid pipe section using the original exhaust clamp loosened from step 2 and onto the rubber hanger mounts but do not tighten the clamp.
- Step 5:** Using (x1) supplied 2.5" band clamp, slide the aFe collector pipe over the aFe mid pipe but do not tighten.
- Step 6:** Using (x1) supplied 2.5" band clamp, slide the aFe right side tip onto the rubber hanger mount and aFe collector pipe but do not tighten the clamp.
- Step 7:** Using (x1) supplied 2.5" band clamp, slide the aFe left side tip onto the rubber hanger mount and aFe collector pipe but do not tighten the clamp.
- Step 8:** Align the aFe exhaust system and once satisfied, tighten all clamps.
- Step 9:** Re-check all your work.
- Note:** It is normal for the aFe exhaust system to emit smoke for the first few minutes upon initial start-up.