




INSTALLATION INSTRUCTIONS

Cat-Back Exhaust

49-36453

MAKE: VW
MODEL: Atlas Cross Sport
YEAR: 20-23
ENGINE: V6-3.6L/L4-2.0(t)

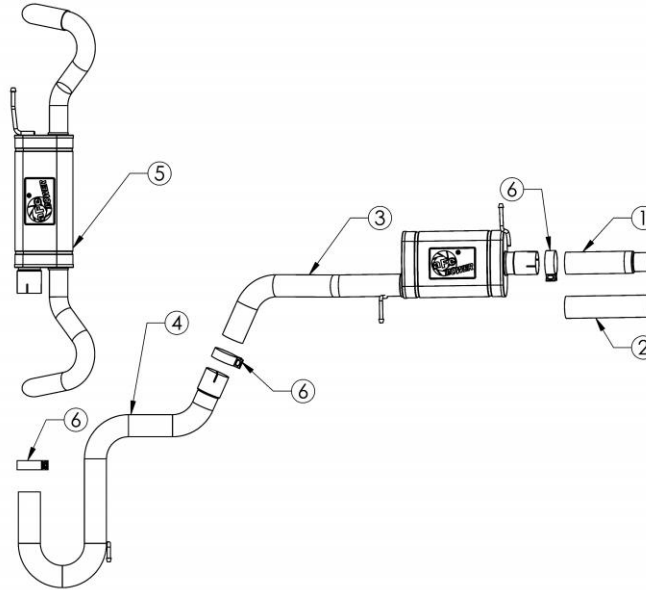

| Item | Description | Part Number | Quantity |
|-------------|------------------------|--------------------|-----------------|
| 1 | Front Pipe 2.0L | 05-245463 | 1 |
| 2 | Front Pipe 3.6L | 05-245464 | 1 |
| 3 | Front Muffler Assembly | 05-145953 | 1 |
| 4 | Mid Pipe Assembly | 05-245482 | 1 |
| 5 | Rear Muffler Assembly | 05-245483 | 1 |
| 6 | Clamp, Band: 3" | 05-41055 | 3 |

aFe POWER recommends professional installation on this product. Thoroughly inspect the aFe POWER exhaust system to make sure there is no damage from shipping (if damage is noted, immediately contact aFe POWER customer service). Allow time for your vehicle to cool down prior to installation. When working on your vehicle proceed with caution. Wear protective safety equipment; eye goggles and gloves to ensure a safe installation.

Install band clamps to proper torque specifications of 40-45 ft-lb.





INSTALLATION INSTRUCTIONS

Cat-Back Exhaust

49-36453

MAKE: VW
MODEL: Atlas Cross Sport
YEAR: 20-23
ENGINE: V6-3.6L/L4-2.0(t)

1. **(Read instructions prior to installation.)** It is recommended to not fully tighten the exhaust until it has been fully installed. Leave loose for adjustability.
2. Secure vehicle on jack stands (refer to your manual for specified jack stand positions).
3. For faster installation, spread out the parts of the exhaust alongside your vehicle as shown in the diagram above.
4. Secure the stock exhaust with jack/stands.
5. Remove the OE exhaust by loosening the (x2) 13mm nuts on the OE sleeve clamp.
6. Remove the (x4) hanger rods from the OE isolation mounts using a prybar or a hanger rod tool.
7. Install the aFe Power Front Pipe based on the engine displacement using the OE sleeve clamp and tighten the (x2) 13mm nuts.
8. Install the aFe Front Muffler Assembly using the supplied 3" Band Clamp.
9. Install the aFe Mid-Pipe assembly using the supplied 3" Band Clamp.
10. Install the aFe Rear Muffler Assembly using the supplied 3" Band Clamp.
11. Ensure that all the components of the aFe POWER exhaust system are aligned and are at a safe clearance from all wires, hoses, brake lines, body parts, and tires.
12. Start from the front of the aFe exhaust system and evenly tighten all clamps and fasteners.
13. Start the vehicle and check for any leaks. If any leaks are found, determine cause and repair as necessary.
14. Remove vehicle from jacks stands.
15. It is recommended to re-tighten all clamps and hardware after 50-100 miles.