




## INSTALLATION INSTRUCTIONS

MAKE: Audi  
MODEL: A4 (B8)  
YEAR: 2009-2016  
ENGINE: L4-2.0L (t)  
ENGINE: Will NOT fit Allroad (Wagon) Models.

**Cat-Back**  
**409 Stainless Steel**  
**49-46403**

**aFe recommends professional installation on our products.**

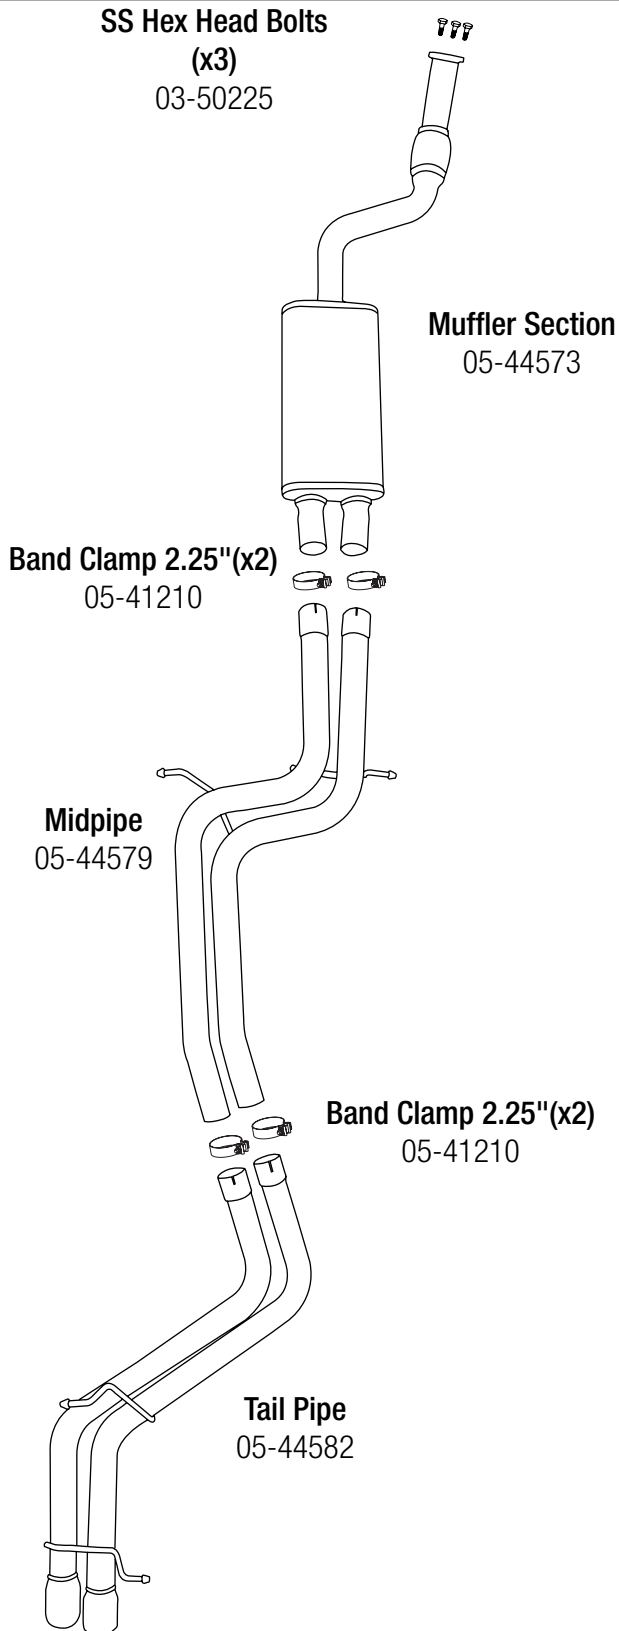

**Caution:** Allow time for your vehicle to cool down prior to installation. When working on or under your vehicle proceed with caution. Exhaust systems reach high temperatures and may cause serious burns. Wear protective safety equipment; eye goggles and gloves to ensure a safe installation.

**Step 1:** (Read Instructions prior to installation) Secure vehicle on jack stands (Refer to your manual for specified jack stand positions).

**Step 2:** Loosen clamp securing the stock muffler/center resonator section to the downpipe resonator.

**Step 3:** Remove stock muffler/center resonator section.

**Step 4:** Remove the stock downpipe resonator by removing the three nuts. Set these nuts and gasket aside as they will be re-used.

**Step 5:** Using the original gasket, the three nuts from step 4 and (x3) supplied hex head bolts, install the aFe muffler section and tighten.

**Step 6:** Using (x2) supplied 2.25" aFe band clamps, install the aFe mid pipe onto the aFe muffler section and rubber hanger mounts but do not tighten.

**Step 7:** Using (x2) supplied 2.25" aFe band clamps, install the aFe tail pipe onto the aFe mid pipe and rubber hanger mounts but do not tighten.

**Step 8:** Align aFe Exhaust System.

**Step 9:** Tighten all band clamps.

**Step 10:** Double check all your work.

**Step 11:** Remove vehicle off jack stands.

**Note:** It is normal for the aFe exhaust system to emit smoke for the first few minutes upon initial start-up.