



## INSTALLATION INSTRUCTIONS

MAKE: VOLKSWAGEN


MODEL: GTI (MKVI)

YEAR: 2010-2014

ENGINE: L4-2.0L (t)

**Cat Back  
Stainless Steel  
49-46405**

**aFe recommends professional installation on our products.**

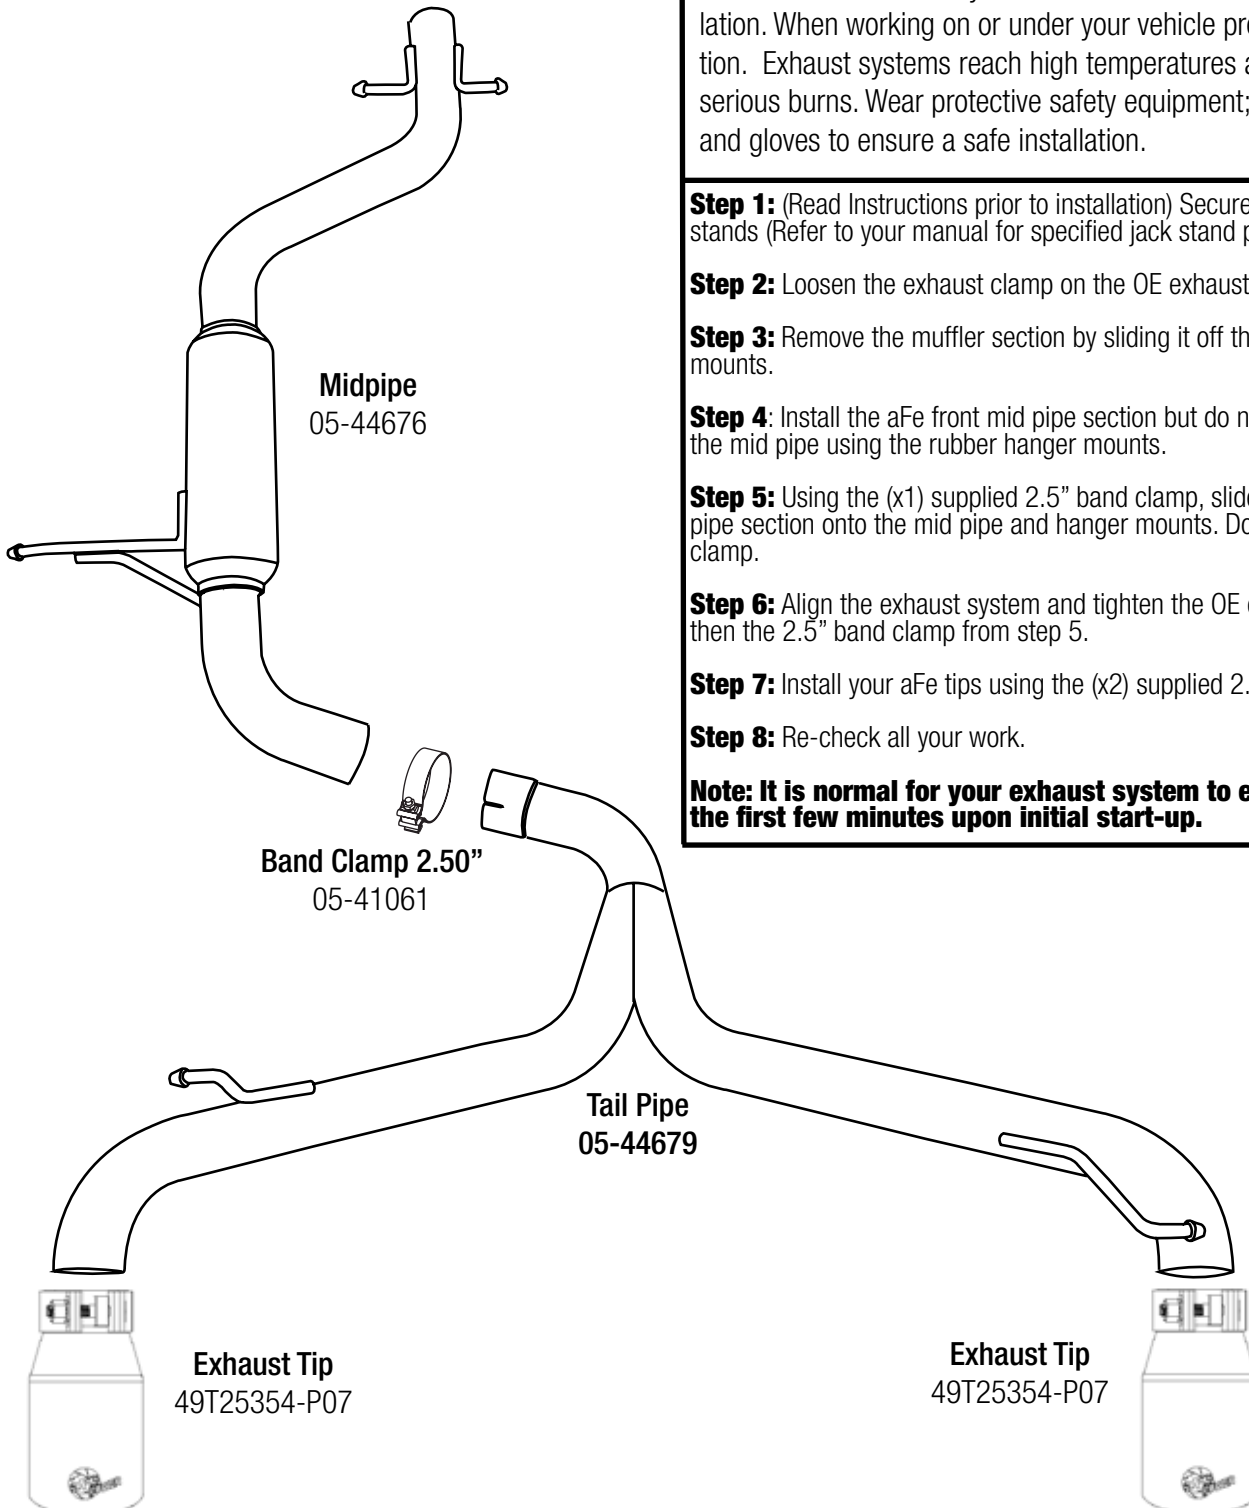

**Caution:** Allow time for your vehicle to cool down prior to installation. When working on or under your vehicle proceed with caution. Exhaust systems reach high temperatures and may cause serious burns. Wear protective safety equipment; eye goggles and gloves to ensure a safe installation.

**Step 1:** (Read Instructions prior to installation) Secure vehicle on jack stands (Refer to your manual for specified jack stand positions).

**Step 2:** Loosen the exhaust clamp on the OE exhaust mid pipe.

**Step 3:** Remove the muffler section by sliding it off the rubber hanger mounts.

**Step 4:** Install the aFe front mid pipe section but do not tighten, secure the mid pipe using the rubber hanger mounts.

**Step 5:** Using the (x1) supplied 2.5" band clamp, slide the aFe tail pipe section onto the mid pipe and hanger mounts. Do not tighten band clamp.

**Step 6:** Align the exhaust system and tighten the OE exhaust clamp, then the 2.5" band clamp from step 5.

**Step 7:** Install your aFe tips using the (x2) supplied 2.5" band clamps.

**Step 8:** Re-check all your work.

**Note: It is normal for your exhaust system to emit smoke for the first few minutes upon initial start-up.**