

FORD 2021-23 BRONCO DASH MOUNT

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.

Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.

Periodically check all hardware for tightness.

KIT CONTENTS:


Dash Rail
Driver Side Mount
Passenger Side Mount
Center Mounting Plate

Hardware Included:

4 - 6mm x 14mm Button Head Bolt
2 - 6mm Lock Nut
2 - 6mm Body Clip
1 - 1/4" x 3/4" Button Head Bolt
2 - Phillips Head Screw

TOOLS REQUIRED:

4mm Allen Wrench
10mm Wrench
Phillips Head Screwdriver

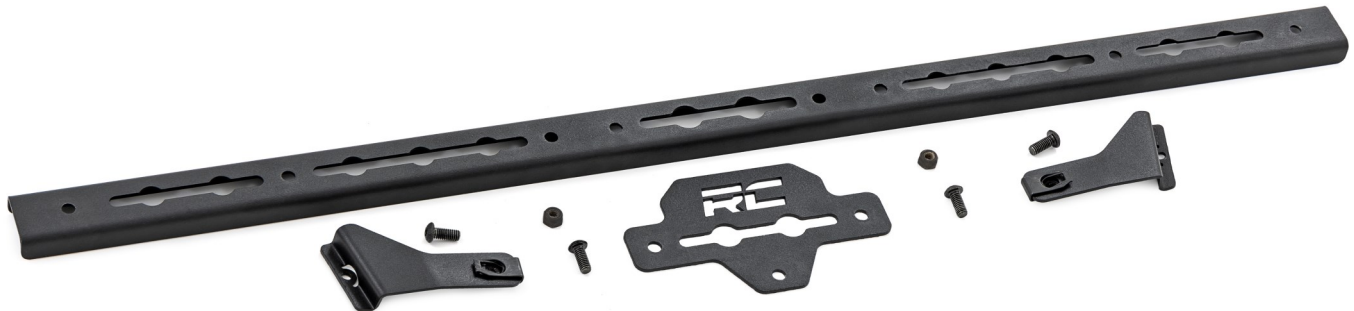


Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs





INSTALLATION INSTRUCTONS



1. Place a supplied 6mm body clip onto the driver side and passenger side mounts. See Photo 1.
2. Install the driver side and passenger side mounts to the dash rail using supplied 6mm button head bolts and lock nuts. Secure with a 4mm Allen wrench and 10mm wrench. Do not fully tighten. See Photo 2.

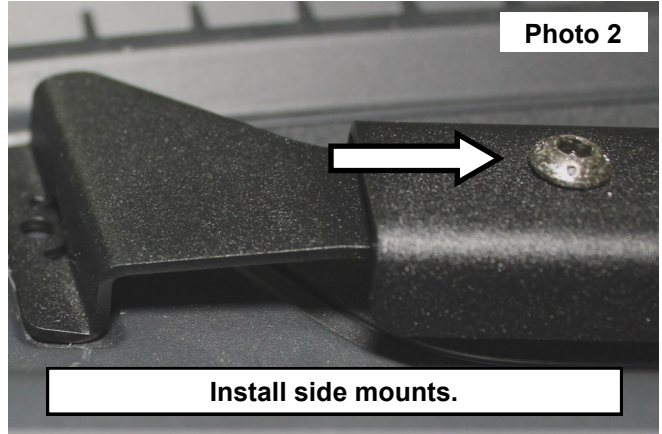

3. Install the center mounting plate to the dash rail using the supplied 6mm button head bolts and 6mm lock nuts. Tighten using a 4mm Allen wrench and 10mm wrench. See Photo 3.
4. Place the assembled dash mount on the dash of the vehicle. Align the open hole of the center mount over the threaded insert in the vehicle dash. See Photo 4.

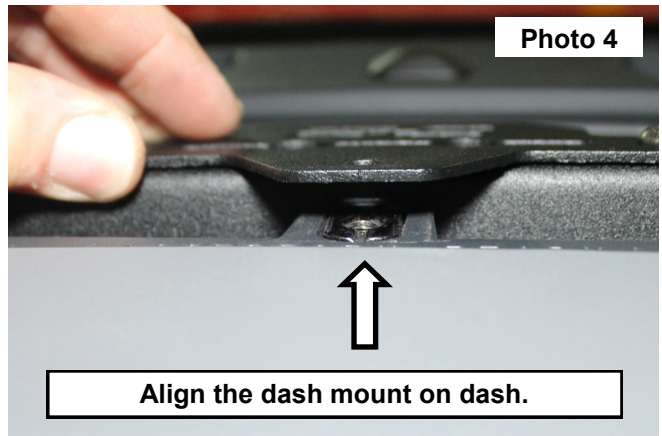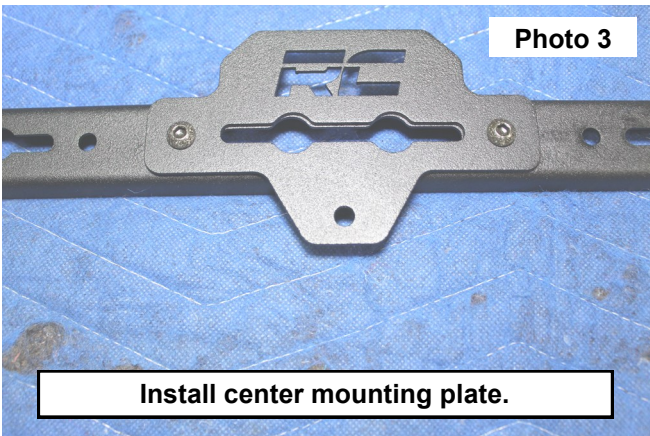

5. Secure the dash mount to the center threaded insert using the supplied 1/4" x 3/4" button head bolt. Tighten with a 4mm Allen wrench. See Photo 5.
6. Where the side mounts line up in the dash, use the Philips head screws to secure the side mounts into the dash. Tighten with a Philips head screwdriver. See Photo 6.
7. Tighten all hardware.
8. Install accessories.

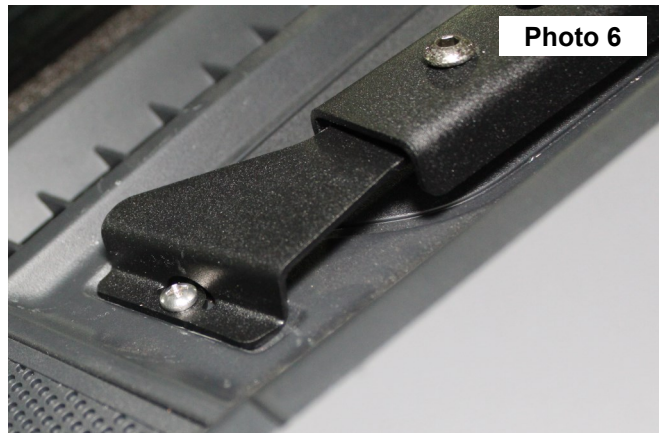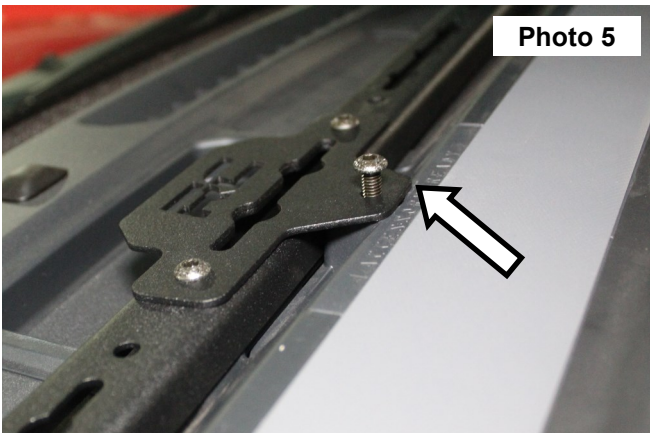

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

