

ROUGH COUNTRY

SUSPENSION SYSTEMS®



WARNING: This product contains a chemical known to the State of California to cause Cancer and Reproductive Harm. For more information, go to www.P65Warnings.ca.gov.

2013-2023 DODGE RAM 1500 SPORT STYLE FLARES PLASTIC BUMPER ONLY

PRIOR TO INSTALLATION

- A) Install the flares according to these written instructions with the hardware provided. **WARNING:** Failure to install according to these instructions will invalidate the warranty. This includes, but is not limited to, using alternative installation methods, hardware, or materials. **DO NOT USE:** Loctite, Superglue, or similar products on the hardware or the flares. Install flares on cleaned vehicle surfaces.
- B) **Fit:** Verify the fit of the flares to vehicle prior to installation (some filing, sanding, or cutting may be necessary to ensure proper fit).
- C) **Painting:** (Optional) if paint is desired it must be done prior to installing flares on vehicle. Clean outer surface with a good grade degreaser. **DO NOT USE LACQUER THINNER OR ENAMEL REDUCER AS A DEGREASER.** Wipe outer surface thoroughly with a tack rag prior to paint. Application of plastic adhesion promoter for ABS plastic as per your paint system manufacturer's recommendations is required. Paint flares using a high-quality enamel, or polyurethane automotive paint. If painting edge trim (not recommended), use a flex additive.
- D) **Performance:** Using larger tires may increase the area required to turn the vehicle. Some tire/rim combinations may require lowering bump stops and or installing steering stops to prevent tire from contacting flare.
- E) **Exhaust System:** Modifications may be necessary to maintain a minimum 4" clearance between flares and exhaust pipes. (Exhaust gases should not vent directly onto flares)
- F) **Metal Protection:** All exposed fasteners and bare metal should be treated with rust resistant paint **BEFORE** installing flares. Spray inner fender wells with undercoating **AFTER** flare attachments have been completed.
- G) **Decals:** Flares may interfere with existing decals on vehicle. If you wish, remove decals prior to installation of flares.
- H) **Care & Cleaning:** Fender flares are built to last; any detergent you use to wash your vehicle is sufficient to clean the flare. Do not use any harsh abrasive detergents.

TOOLS FOR EASY INSTALLATION:

- Soft Cloth or Alcohol Wipe
- Utility Knife
- Awl
- Pry Tool
- Socket Wrench
- 8mm Socket
- Phillips Screwdriver

PLEASE READ: Dirt and debris can become lodged between the fender flares and the vehicle's fenders, causing scratching and paint wear from vibration. Manufacturer is not responsible for any damage, and the installation of our fender flares is done with the buyer's understanding that this scratching and paint wear may occur.

LIMITED LIFETIME WARRANTY AGAINST ANY MANUFACTURING DEFECTS: To claim warranty you must provide Proof of Purchase.

INCLUDED IN HARDWARE KIT:

1.



Mounting Tab
4 pcs

2.



"U" Clip
4 pcs

3.



Truss Head Screw
4 pcs

4.



Med. Wiper Style
Edge Trim
346 inches



IF YOU PURCHASED GLOSSY BLACK FLARES (CODE "RCGB"):



Prior to beginning installation process, peel the protective liner from each plastic piece included in the flare kit – all flares and inner pieces.

NOTE: It will be difficult to remove liner once edge trim and hardware are installed.

Once liner is removed, take care not to scratch flare surfaces. If flare needs to be cleaned, wipe gently with a clean soft cloth.




SECTION 1: EDGE TRIM INSTALLATION

Using a debris-free soft cloth or alcohol wipe, clean vehicle at areas of installation.

Peel 2-3 inches of red vinyl backing away from supplied edge trim tape. Applying the adhesive side of the edge trim to the inner side of the flare, affix the edge trim to the top edge of the flare (the portion that comes in contact with the side of the vehicle).

Press edge trim into place along the top edge of the flare in one-foot increments, pulling red vinyl backing free as you continue to work your way around the top edge of the flare. Trim edge trim flush with ends of flare.

On sharp corners, the edge trim must be notched to prevent stretching and bunching. Refer to Pictures 2, 3, and 4.

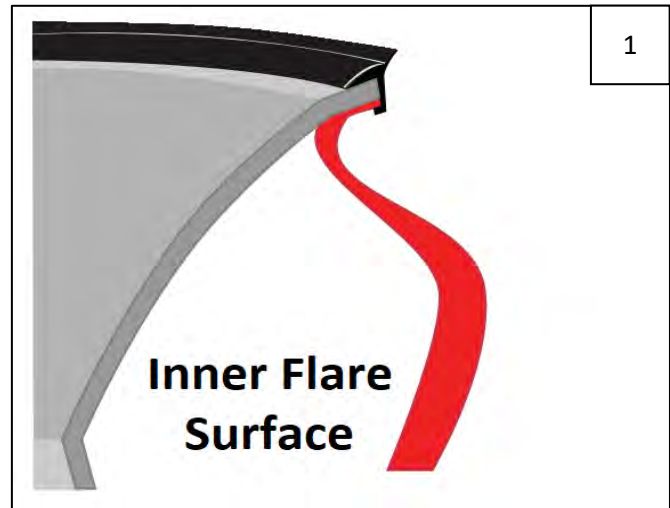

As you come to the first "point" of the flare, cut a "V" notch into the backside of the edge trim at the sharpest part of the curve. Make sure that you retain 2-3 inches of vinyl backing for ease of further installation.



As you come to the second "point" in the flare, make another "V" notch in the backside of the edge trim, retaining 2-3 inches of vinyl backing. Proceed along the rest of the flare.



Correctly-installed edge trim around sharp corners.



SECTION 2: FRONT FLARE INSTALLATION



Using an 8mm socket, remove and retain 2 factory fasteners from mud flap.



Disengage plastic retainer at underside of by using a torx bit or screwdriver and then using a pry tool. Remove and discard mud flap.



Remove 4 factory fasteners from wheel well at areas indicated by arrows. Front fasteners are Phillips head. Retain fasteners for reinstallation.



Install a supplied Mounting Tab over factory hole located at top front of wheel well.



Mounting tab location.



Slide a supplied "U" Clip over tab, centering hole in clip approximately over hole in fender. Flat side of clip faces down.



11

Use an awl to poke a hole in tab for ease of screw installation in Step 13.



12

Hold flare on fender and start 6 factory fasteners at locations as shown.



13

Install a supplied Truss Head Screw through fender flare and into clip installed in Step 10.



14


Apply pressure to flare towards vehicle body at each fastening point and tighten all fasteners.

SECTION 3: REAR FLARE INSTALLATION



15

Using an 8mm socket, remove and retain 2 factory fasteners from mudflap.

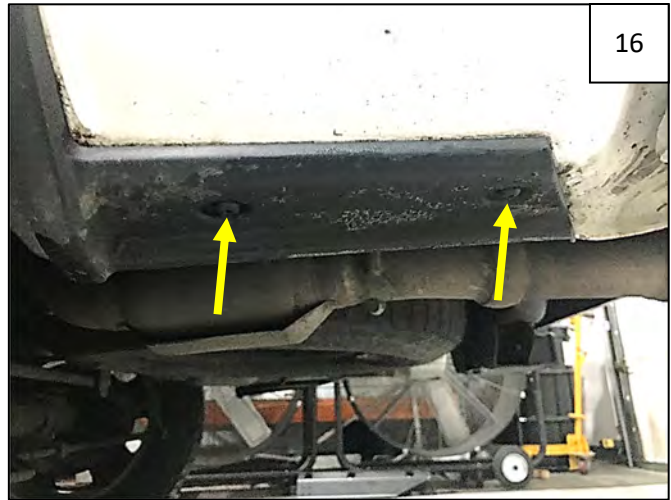

16

Use a pry tool to disengage 2 plastic retainers at underside of mudflap. Remove and discard mud flap.



17

Using an 8mm socket, remove and retain 4 factory fasteners from locations shown (there are other fasteners that will not be removed).



18

Install a supplied Mounting Tab over factory hole located at top middle of wheel well.



19

Mounting tab location.



20

Slide a supplied "U" Clip over tab, centering hole in clip approximately over hole in fender. Flat side of clip faces down.



21

Use an awl to poke a hole in tab for ease of screw installation in Step 23.



22

Hold flare on fender and start 6 factory fasteners at locations as shown.



23

Install a supplied Truss Head Screw through fender flare and into clip installed in Step 20.



24

Apply pressure to flare towards vehicle body at each fastening point and tighten all fasteners.