

LoadLifter 5000™ SERIES + Air Lift® ProSeries



Installation Guide



* LoadLifter 5000 kit shown here

RAM Chassis Cab (Dual Rear Wheel)



Watch the video
Info on Table of Contents page

Kits 57263 | 93263

For maximum effectiveness and safety, please read these instructions completely before proceeding with installation.

Failure to read these instructions can result in an incorrect installation.

Protect your Air Lift Purchase by Completing your Warranty Registration



Thank you for purchasing an Air Lift load support product!

Take a photo of your sales receipt and then scan the QR code to complete your online warranty registration.

TABLE OF CONTENTS

2 System Overview

3 Hardware and Tools

4 Introduction

Notation Explanation

Identifying the Differences Between Kits

5 Install the System

Measure the Vehicle

Assemble the Air Springs

Attach the Air Spring Assemblies

10 Install the Air Lines

11 Finished Installation

12 Before Operating

Installation Checklist

Maintenance and Use Guidelines

13 Limited Warranty and Return Policy

Video-enhanced installation guides

Visit airliftcompany.com/workshop/category/install-videos to access our installation video archive*.

System Overview

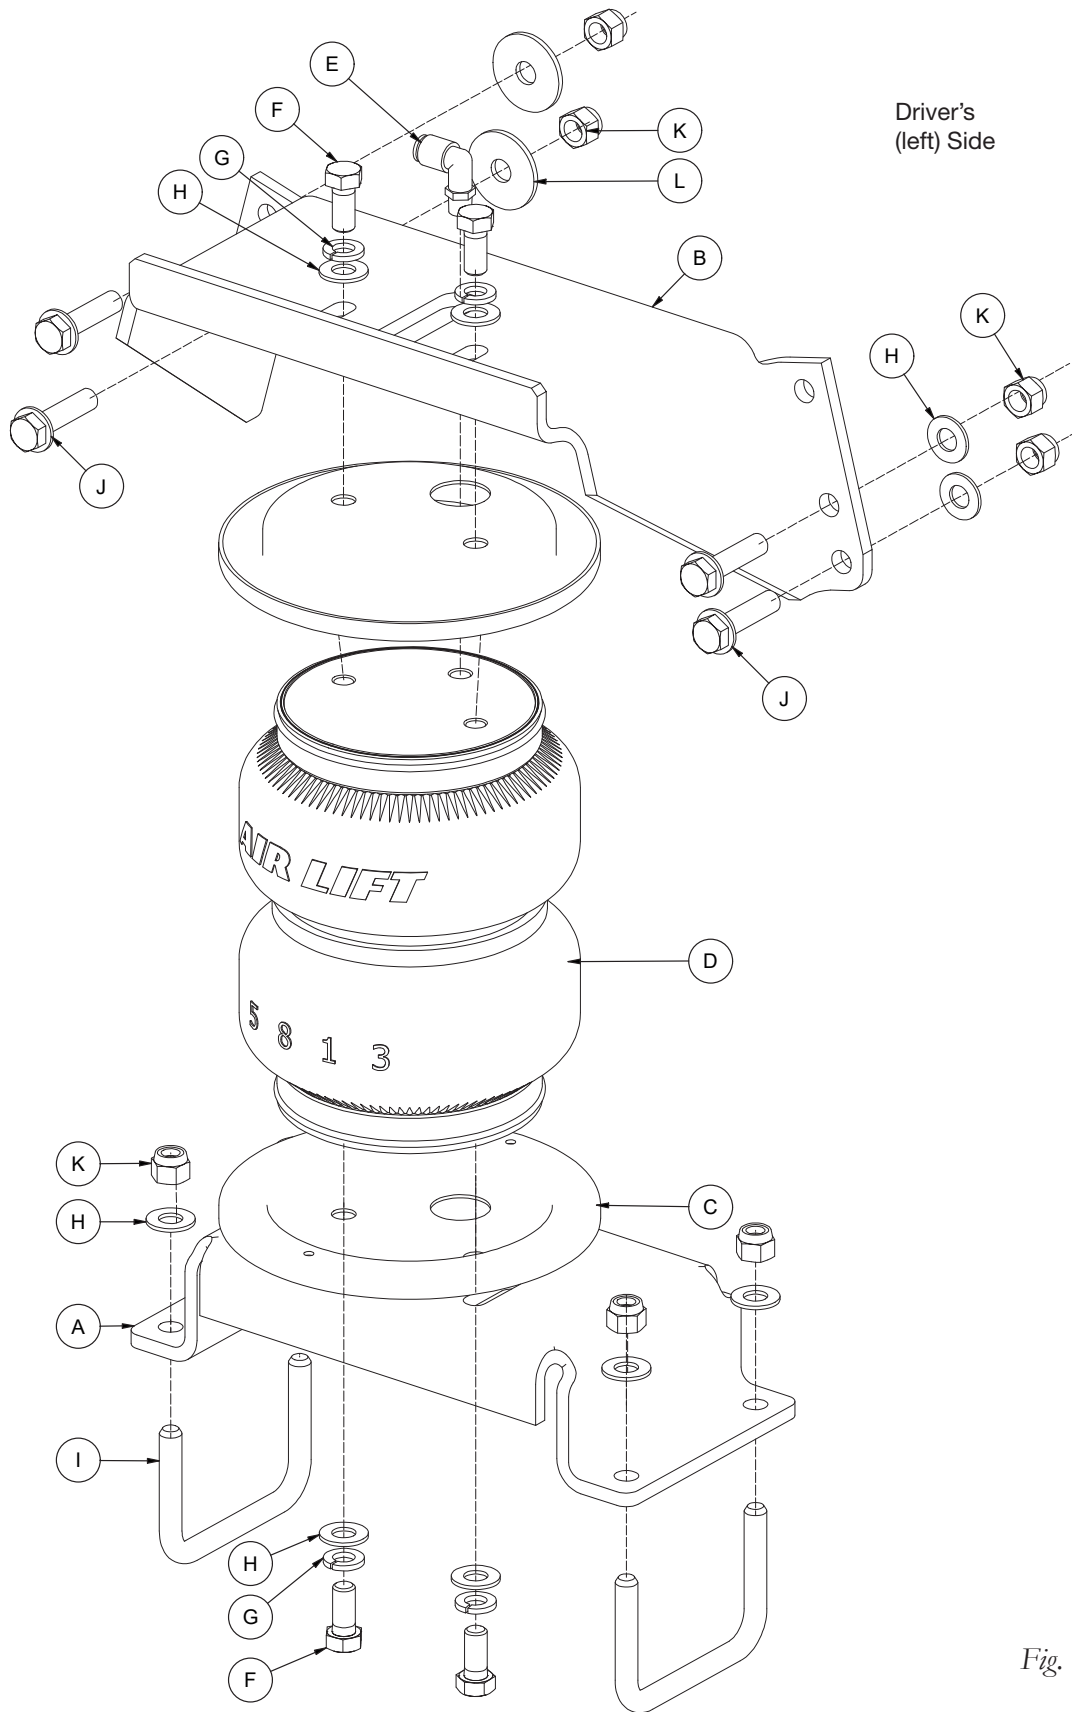


Fig. 1

Hardware and Tools

COMMON PARTS INCLUDED IN BOTH KITS

Item	Part#	Description	Qty
A	03965	Lower bracket	2
B	07475	Upper bracket	2
C	11951	Roll Plates	4
E	21837	1/8" MNPT-1/4" Swivel elbow fitting.....	2
I	10594	3/8" U-bolt	4
J	17159	3/8"-16 x 1 1/2" Hex flange bolt	8
K	18435	3/8" Nylon lock nut	16
L	18447	3/8" Large flat washer.....	4
AA*	20086	Air line assembly.....	1
BB*	10466	Zip ties.....	6
CC*	21230	Valve capG	2
DD*	18411	Star washer.....	2
EE*	21234	Rubber washer	2
FF*	18501	M8 Flat washer	2
GG*	21233	5/16" Hex nut	4

* These parts are not shown in the System Overview (Fig.1).

TOOLS NEEDED

Description.....	Qty
Standard and metric open-end or box wrenches	Set
9/16 ratchet wrench	1
Ratchet	1
Standard and metric regular and deep-well sockets	Set
Torque wrench.....	1
China marker or equivalent	1
Hose cutter, razor blade, or sharp knife	1
Hoist or floor jack	1
Safety glasses	1
Safety stands.....	2
Air compressor or compressed air source	1
Spray bottle with dish soap/water solution.....	1

The photos in this manual show the LoadLifter 5000 kit.

UNIQUE PARTS IN EACH KIT

LoadLifter 5000™ KIT 57263

Item	Part#	Description	Qty
D	58437	Air spring.....	2
F	17203	3/8"-24 x 7/8" Hex-cap screw	8
G	18427	3/8" Lock washer.....	8
H	18444	3/8" Flat washer.....	20

Air Lift® ProSeries KIT 93263

Item	Part#	Description	Qty
D	58937	Air spring.....	2
F	17284	3/8"-24 x 7/8" Stainless steel hex-cap screw.....	8
G	18504	3/8" Stainless steel lock washer	8
H	18444	3/8" Flat Washer	12
H	18507	3/8" Stainless steel flat washer.....	8



Missing or damaged parts? Call Air Lift customer service at (800) 248-0892 for a replacement part.

Introduction

The purpose of this publication is to assist with the installation and maintenance of the LoadLifter 5000 series and Air Lift ProSeries air spring kits. All LoadLifter 5000 series and Air Lift ProSeries kits utilize sturdy, reinforced, commercial-grade single or double, depending on the kit, convolute bellows.

The air springs are manufactured like a tire with layers of rubber and cords that control growth. LoadLifter 5000 series and Air Lift ProSeries kits provide up to 5,000 pounds (2,268kg) of load-leveling support with air adjustability from 5-100 PSI (.34-7BAR).

It is important to read and understand the entire installation guide before beginning installation or performing any maintenance, service or repair.

NOTATION EXPLANATION

Hazard notations appear in various locations in this publication. Information highlighted by one of these notations must be observed to help minimize risk of personal injury or possible improper installation, which may render the vehicle unsafe. Notes are used to help emphasize areas of procedural importance and provide helpful suggestions. The following definitions explain the use of these notations as they appear throughout this installation guide.

DANGER

INDICATES IMMEDIATE HAZARDS WHICH WILL RESULT IN SEVERE PERSONAL INJURY OR DEATH.

WARNING

INDICATES HAZARDS OR UNSAFE PRACTICES WHICH COULD RESULT IN SEVERE PERSONAL INJURY OR DEATH.

CAUTION

INDICATES HAZARDS OR UNSAFE PRACTICES WHICH COULD RESULT IN DAMAGE TO THE MACHINE OR MINOR PERSONAL INJURY.

NOTE

Used to help emphasize areas of procedural importance and provide helpful suggestions.

TECH TIP

Used to provide helpful tips to ease the installation process.

IDENTIFYING THE DIFFERENCE BETWEEN KITS

Should you need to contact Air Lift customer service, you will need to know which kit you are inquiring about: standard LoadLifter 5000 or standard Air Lift ProSeries. The kits are easily identifiable by looking at the end caps on the air spring.

- Standard **LoadLifter 5000®** — Plastic end cap
- Standard **Air Lift® ProSeries** — Aluminum end cap



LoadLifter 5000
Plastic end cap



Air Lift ProSeries
Aluminum end cap

Install the System

IMPORTANT: MEASURE THE VEHICLE

1. Measure the distance between the frame and the tire.
This kit requires a minimum of 8" (190mm) for a fully inflated air spring (Fig. 2).

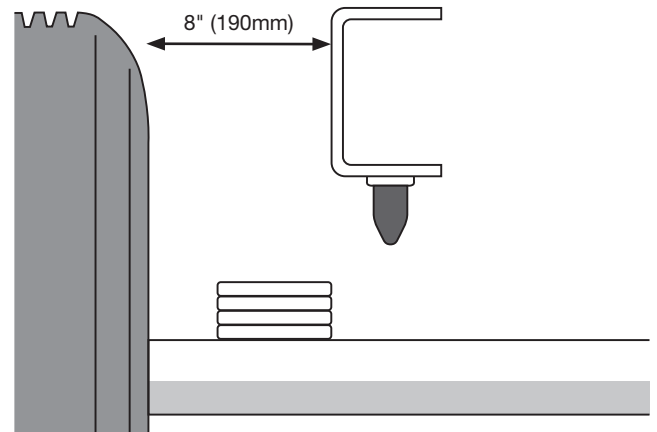


Fig. 2

2. This kit also requires that the body above the axle be at least 2.25" (57mm) in height above the frame for the kit's upper bracket to mount correctly. If this requirement can't be met, then the body must be flush with or inside the frame's web for the bracket to mount (Fig. 3).

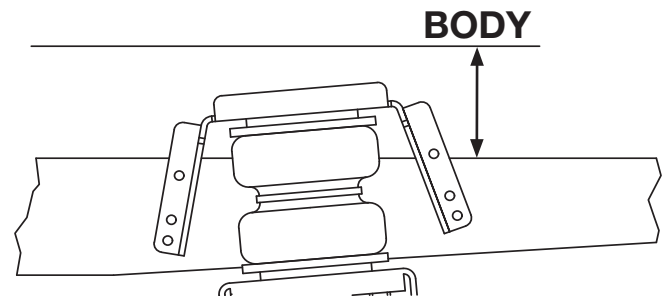


Fig. 3

ASSEMBLE THE AIR SPRINGS

1. Set the roll plates (C) on top of the air springs (D) and install the fittings (E) finger-tight into the top of the air spring. Then, tighten the fitting an additional 1 1/2 turns (Fig. 4).



Fig. 4

2. Set the upper brackets (B) on top of the air spring assemblies and attach them to the air springs with 3/8" hex cap screws (F), 3/8" lock washers (G) and 3/8" flat washers (H) (Fig. 5). Leave loose at this time.

NOTE

Pro Series use the stainless steel flat washers (H) here.

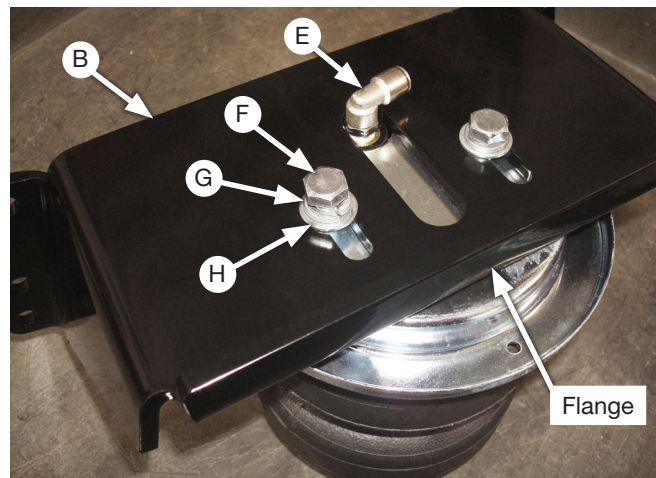


Fig. 5

3. Flip the assemblies over and set a roll plate (C) and lower bracket (A) onto the bottom of the air spring assemblies, making sure that the slot in the lower bracket is on the same side as the flange on the upper bracket (Figs. 6 & 7). Attach to the air spring with 3/8" hex cap screws (F), 3/8" lock washers (G) and 3/8" flat washers (H). Center the air spring as far as the slots will permit and torque the lower bracket hardware to no more than 20 lb.-ft. (27Nm).

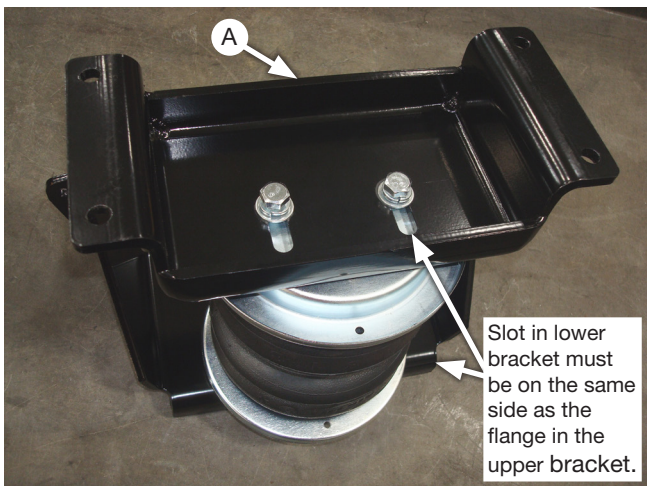


Fig. 6

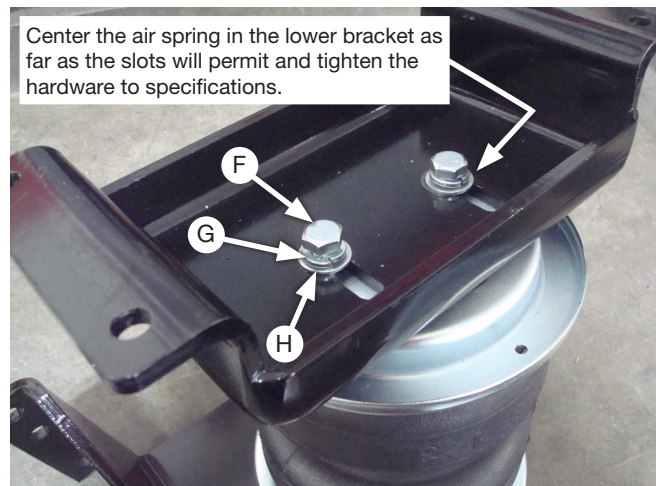


Fig. 7

- The completed assembly shown in Figure 8 will look the same for both sides of the vehicle.




Fig. 8

ATTACH THE AIR SPRING ASSEMBLIES

NOTE

Although it is not necessary in most cases to remove the rear wheels, in some applications, it may be easier to access the area the assembly must fit in by removing them.

- If you need to remove the rear wheels for the installation, lift the rear axle and support it with jackstands. Remove the rear wheels and set them aside.
- Set the air spring assemblies on the leaf springs over the axle and push the assemblies back on the leaf springs as far back as possible so that the lower brackets come in contact with the front of the leaf spring assembly upper spring retainers (Fig. 9).

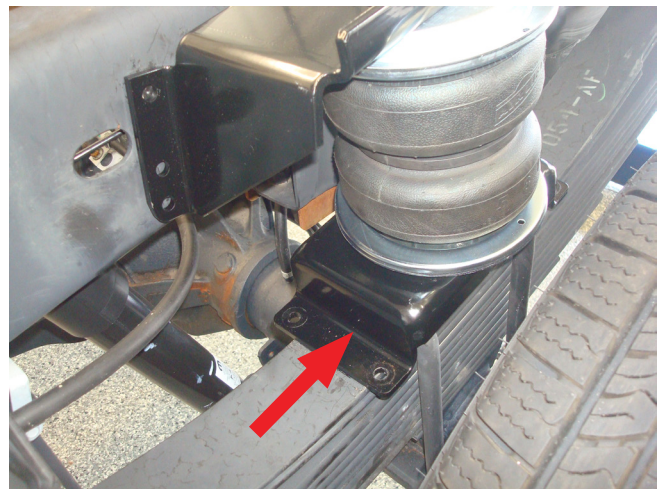

Left (driver's) side shown

Fig. 9

- Ensure the X and Y are the same between the upper and lower bracket (Fig. 10).

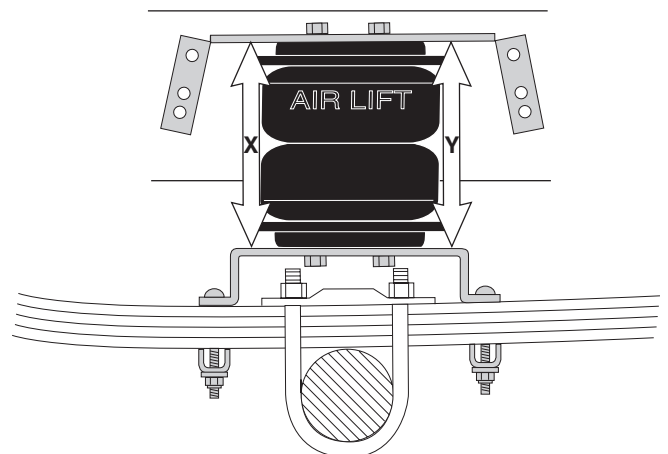


Fig. 10

- Adjust the upper bracket into position on the frame so the top front two holes (forward of the axle) in the flange are equally spaced above and below the large slot in the frame and the lower two holes in the rear of the upper bracket flange are in the middle of the frame (Figs. 11 & 12).

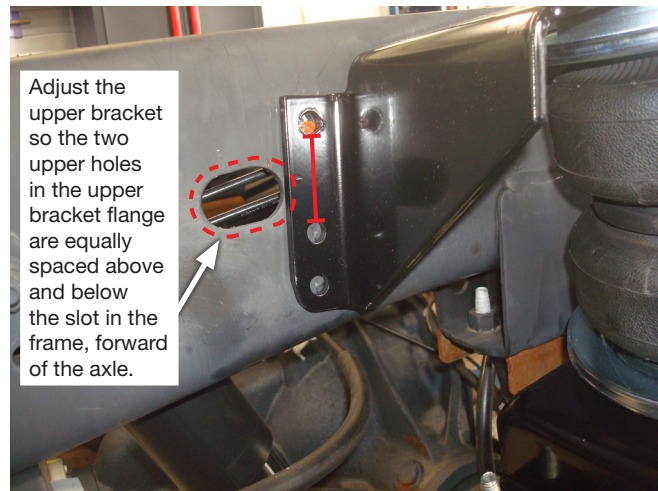


Fig. 11

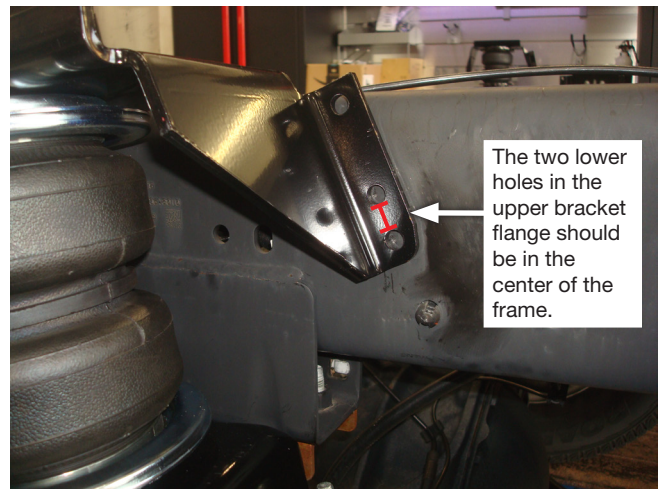


Fig. 12

- With the upper bracket in position, mark the forward upper hole location and remove the assemblies from the leaf springs. Center punch the mark and drill a 3/8" hole through the frame on both sides (Fig. 13).

IMPORTANT: Do not drill any holes into the frame without first checking for interference such as hydraulic lines, gas lines, and/or electrical wires. If there are any such interferences, move them aside to proceed with the installation.

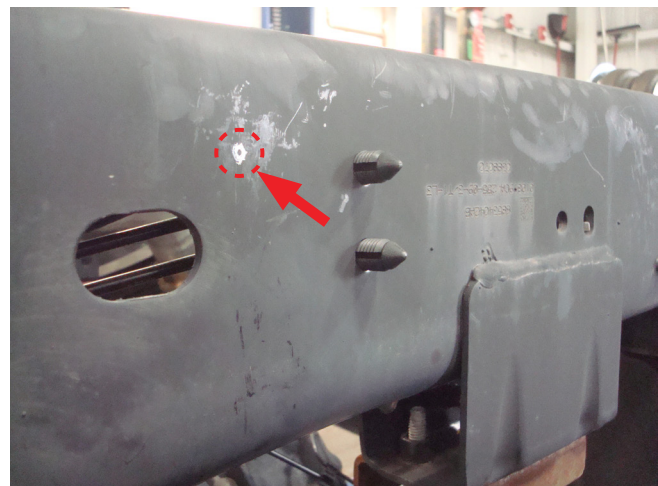


Fig. 13

6. Set the U-bolts (I) into position under the overload leaf springs (Fig. 14) and set the assemblies back into position, making sure the U-bolts go through the lower bracket mounting holes. Again, push the assemblies as far back on the leaf spring as they will go so the forward lower bracket is touching the upper stock spring retainer on the leaf stack. The hole drilled in the frame and the top hole in the front flange of the upper bracket should line up at this point. Cap the U-bolts with 3/8" flat washers (H) and nylon lock nuts (K). Evenly torque to 16 lb.-ft. (21Nm).
7. Insert the 3/8" hex flange bolts (J) through the upper brackets, frame, and cap with 3/8" large flat washer (L) (forward of axle only) and 3/8" nylon lock nut (K) (Fig. 1). Snug the hardware only at this point. Again, ensure the X and Y are equal distance, and using the remaining holes in the bracket as a template, drill the remaining holes (top two in the forward upper bracket flange, bottom two in the rear upper bracket flange). Install the remaining hardware, ensuring the large flat washers are used in the forward holes and the smaller 3/8" flat washers (H) are used in the rear holes. Torque all upper brackets to frame hardware to 44 lb.-ft. (60Nm). Secure any lines or wires away from the hardware installed inside the frame rails.
8. Once the upper and lower brackets are mounted, push the upper air spring outward in the upper bracket slot and torque the air spring mounting hardware to no more than 20 lb.-ft. (27Nm) (Fig. 15).
9. If the wheels were removed in the *Attach the Air Spring Assemblies* section, reinstall them and torque the wheel nuts to factory specifications.

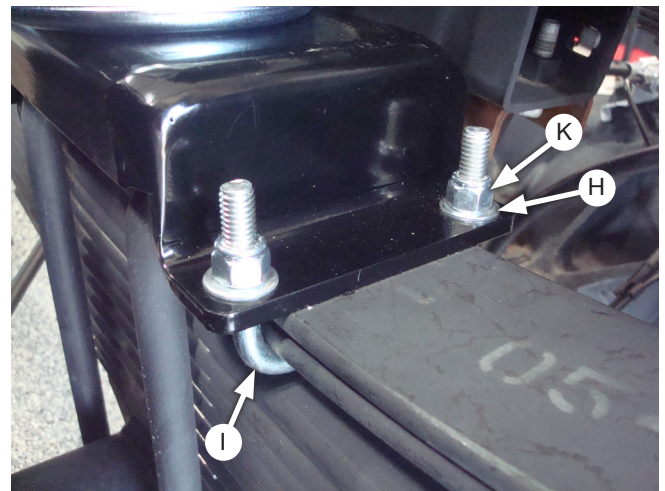



Fig. 14



Fig. 15

Install the Air Lines

1. Choose the locations for the Schrader valves and drill a 5/16" (8mm) hole, if necessary.

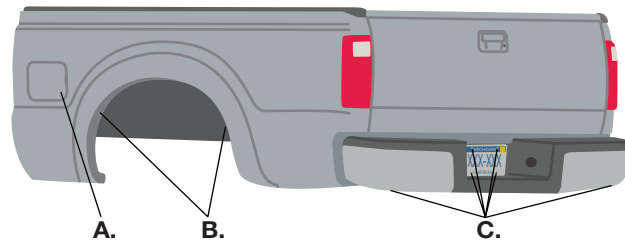


A. Inside fuel tank filler door
 B. Inside rear wheel wells
 C. License plate or rear bumper area



CAUTION


KEEP AT LEAST 6" (152MM) OF CLEARANCE BETWEEN ALL AIR LINES AND THE EXHAUST SYSTEM. AVOID SHARP BENDS AND EDGES.

2. Make clean, square cuts with a razor blade or hose cutter when cutting the air line (AA). Do not use scissors or wire cutters.

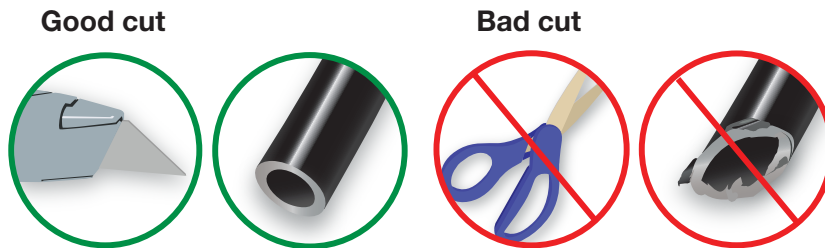

3. Use zip ties (BB) to secure the air line to fixed points along the chassis. Do not pinch or kink the air line. Leave at least 2" (51mm) of slack in the air line to allow for any movement that might pull on the air line. The minimum bend radius for the air line is 1" (25mm).

4. Install the Schrader valve in the chosen location.

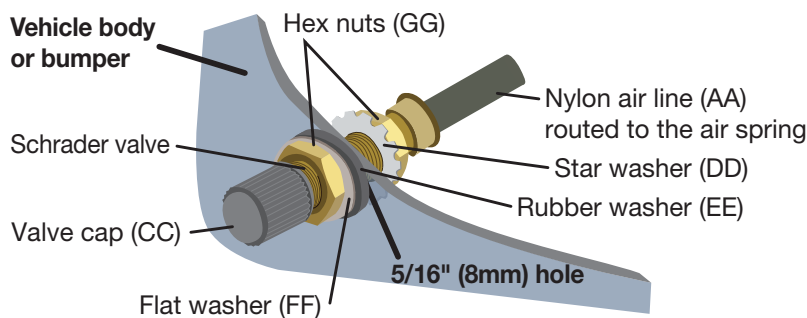

Finished Installation

These images show the finished installation.



Forward, left (driver's) side view



Back, left (driver's) side view



Front, right (passenger's) side view



Rear, right (passenger's) side view

Congratulations!

You are now the proud owner of an Air Lift air suspension system. Enjoy!

Before Operating

INSTALLATION CHECKLIST

- ❑ **Clearance test** — Inflate the air springs to 40-60 PSI (2.8-4.1BAR) and make sure there is at least 1/2" (13mm) clearance from anything that might rub against each sleeve. Be sure to check the tire, brakes, frame, shock absorbers and brake cables.
- ❑ **Leak test before road test** — Inflate the air springs to 40-60 PSI (2.8-4.1BAR) and check all connections for leaks. All leaks must be eliminated before the vehicle is road-tested.
- ❑ **Heat test** — Be sure there is sufficient clearance from heat sources, at least 6" (152mm) for air springs and air lines. If a heat shield was included in the kit, install it. If there is no heat shield, but one is required, call Air Lift customer service at (800) 248-0892.
- ❑ **Fastener test** — After 500 miles (800km), recheck all bolts for proper torque.
- ❑ **Road test** — The vehicle should be road-tested after the initial tests. Inflate the air springs to recommended driving pressures. Drive the vehicle 10 miles (16km) and recheck for clearance, loose fasteners and air leaks.
- ❑ **Operating instructions** — If professionally installed, the installer should review the operating instructions with the owner. Be sure to provide the owner with all of the paperwork that came with the kit.

MAINTENANCE AND USE GUIDELINES

1. Check air pressure weekly.
2. Always maintain normal ride height. Never inflate beyond 100 PSI (7BAR).
3. If the system develops an air leak, use a soapy water solution to check all air line connections and the inflation valve core before deflating and removing the air spring.
4. Upon successful completion of the installation, follow these pressure requirements for the air springs.



**Minimum Recommended
Air Pressure**



Maximum Air Pressure



CAUTION

FOR SAFETY AND TO PREVENT POSSIBLE DAMAGE TO THE VEHICLE, DO NOT EXCEED MAXIMUM GROSS VEHICLE WEIGHT RATING (GVWR) OR PAYLOAD RATING, AS INDICATED BY THE VEHICLE MANUFACTURER. ALTHOUGH THE AIR SPRINGS ARE RATED AT A MAXIMUM INFLATION PRESSURE OF 100 PSI (7BAR), THE AIR PRESSURE ACTUALLY NEEDED IS DEPENDENT ON LOAD AND GROSS VEHICLE WEIGHT RATING.

Limited Warranty and Return Policy

Air Lift Company provides a Limited Lifetime Warranty* to the original purchaser of its load support products, from the date of original purchase, that the products will be free from defects in workmanship and materials when used on cars and trucks as specified by Air Lift Company and under normal operating conditions, subject to the requirements and exclusions set forth in the full Limited Warranty and Return Policy.

*Full Limited Warranty and Return Policy are available at www.airliftcompany.com/warranty and are subject to change.

WARRANTY REGISTRATION & CLAIMS

- To register your warranty, please visit <https://www.airliftcompany.com/support/warranty/register/>
- To submit a warranty claim, please visit <https://www.airliftcompany.com/support/warranty/submit-claim/>



Thank you for purchasing Air Lift Products!

Need Help?

Contact Air Lift Company Customer Service at (800) 248-0892
or email service@airliftcompany.com.

For calls outside the U.S. or Canada, dial +1 (517) 322-2144.



Air Lift Company • 2727 Snow Road • Lansing, MI 48917 or P.O. Box 80167 • Lansing, MI 48908-0167

Air Lift Company reserves the right to make changes and improvements to its products and publications at any time.
For the latest version of this manual, contact Air Lift Company at (800) 248-0892 or visit airliftcompany.com.